

ARKITEK




INDIVIDUALANDEXECUTIVEDESKS






W14/W15/W16/W19







1

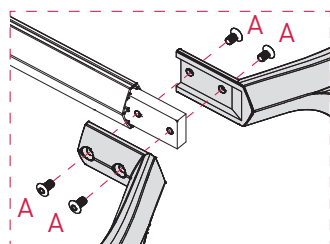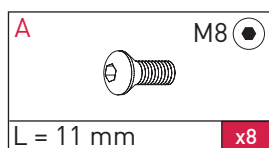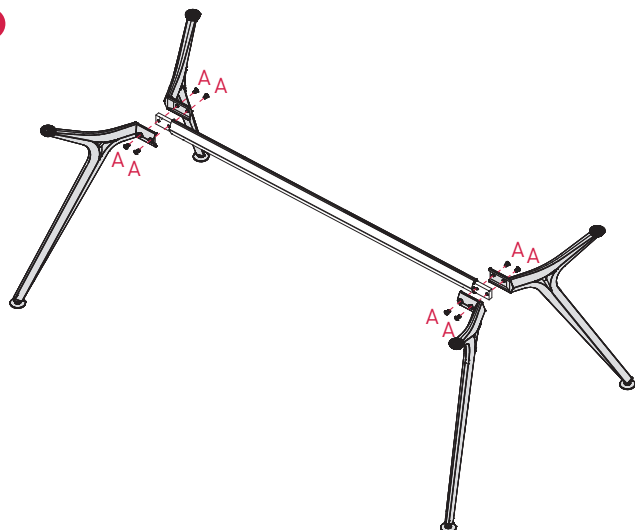

2

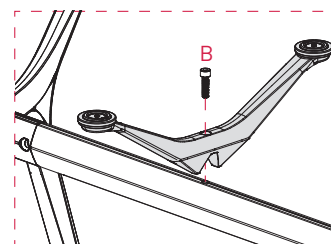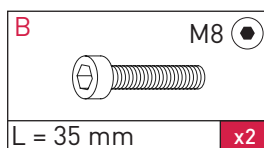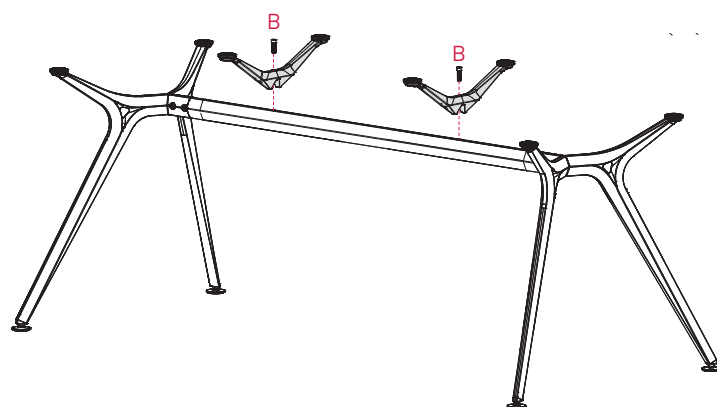

3

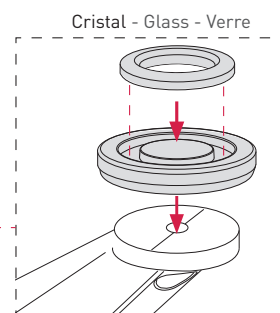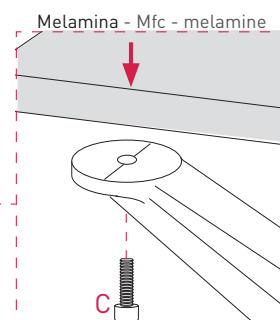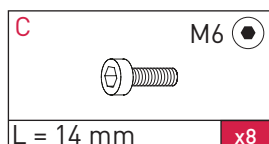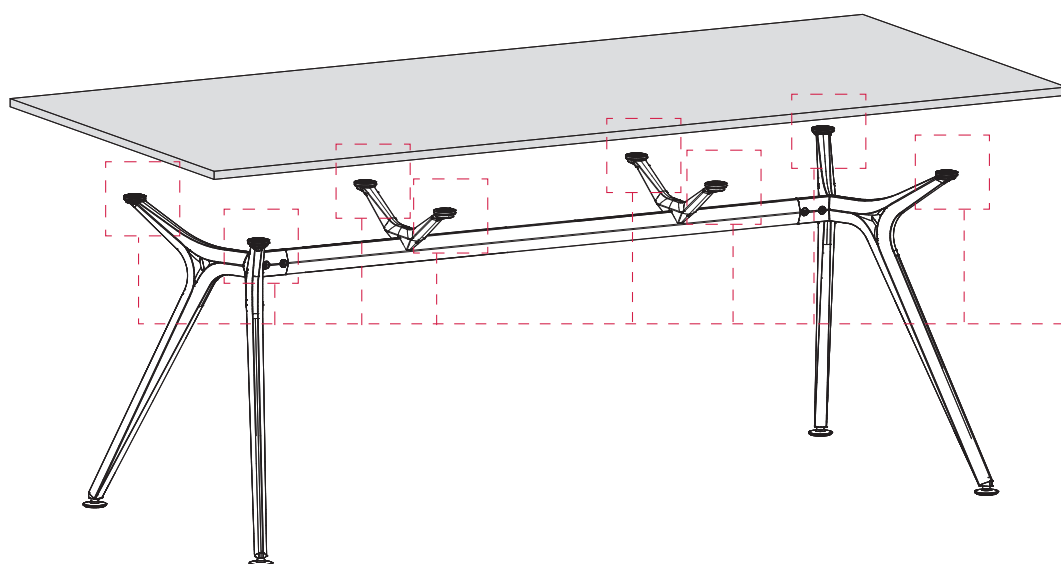

Colocar protector antes que el cristal
Place rubber protector before placing glass top
Mettre la rondelle caoutchouc avant de mettre le verre