












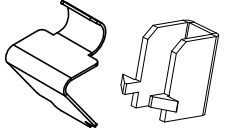




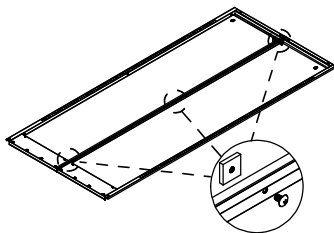
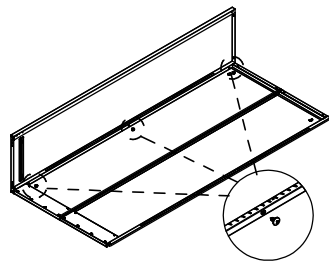
 <p>Left Side:1Pc</p>	 <p>Right Side:1Pc</p>	 <p>Back Panel::1Pc</p>	 <p>Back Panel:1Pc</p>	 <p>Left Door : 1Pc</p>
	 <p>Right Door: 1Pc</p>	 <p>Top Panel:1Pc</p>	 <p>Bottom Panel: 1Pc</p>	 <p>Shelf: 4 pcs</p>	 <p>Top Braket : 1Pc</p>
	 <p>Bottom Braket : 1Pc</p>	 <p>Self-tapping Screw(5x10):28 Pcs</p>	 <p>Screw(5x8):3 Pcs</p>	 <p>Nut : 3 Pcs</p>	 <p>Shelf Holder:16Pcs</p>
		 <p>Bottom Hinge Pin : 2Pcs</p>	 <p>Shock pad: 4 pcs</p>	 <p>Key: 1 Set</p>	 <p>Screw,washer, dowel : 2 pcs</p>

1




Align and attach the left back panel to the right back panel with 3 screws and nuts securely.

2

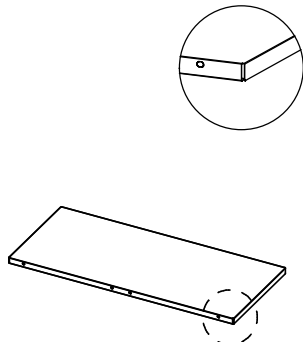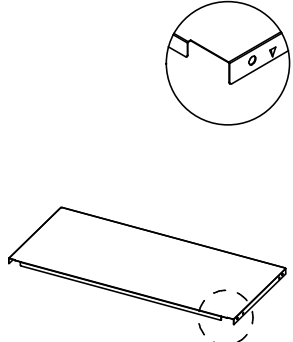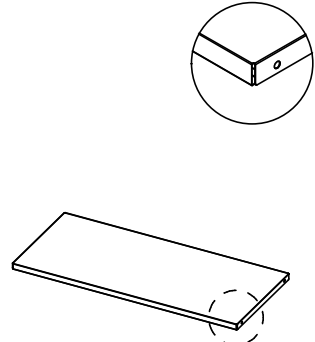


Align and attach the left side panel to the back panels at right angles and tighten with 3 screws at the 3 indicated locations.

3

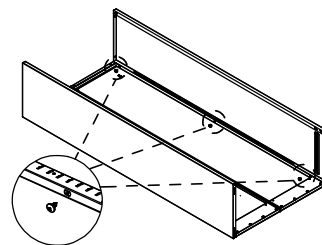


Align and attach the right side panel to the back panels at right angles and tighten with 3 screws at the 3 indicated locations.

4

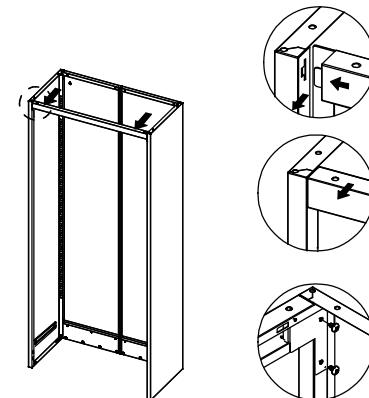


Attach the top bracket to the side panels and tighten with two screws, each side (totally four screws).

5

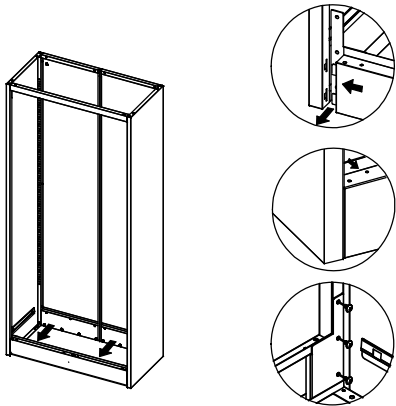


Attach the bottom bracket to the side panels and tighten with three screws each side (totally six screws).

6

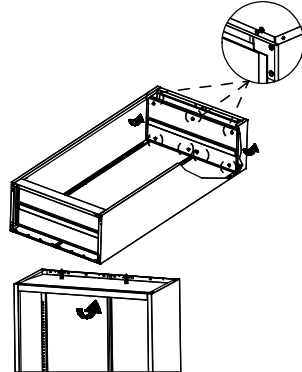


Attach the top panel to the top of the cabinet frame and secured with seven screws.

7

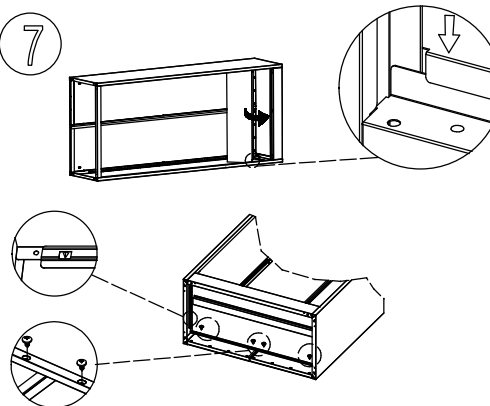


Slide the bottom panel to the cabinet frame and secured with four screws on the bottom. Make sure the notch on the edge of bottom panel face forward.

8

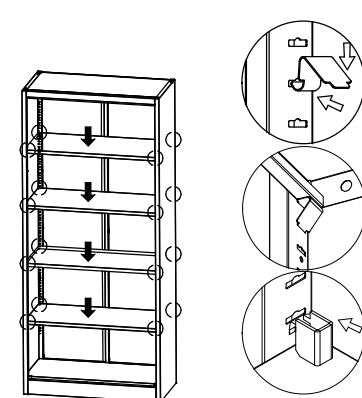


Before placing shelves, place four shelves holder into perforated slots at the same height for each shelf location.

9

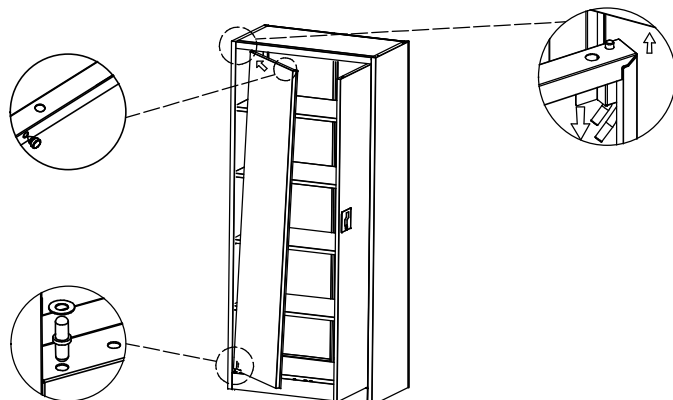

Install bottom hinge pin and washer on each side of the bottom bracket. Make sure the washer is on the bottom hinge pin. Lower the left door onto bottom left bottom hinge pin, then swing the left door into top panel while pulling down on the latch, align latch with hole in top panel and release when latch is in position. Repeat above step for right door. Insert key into lock to verify proper operation.

10

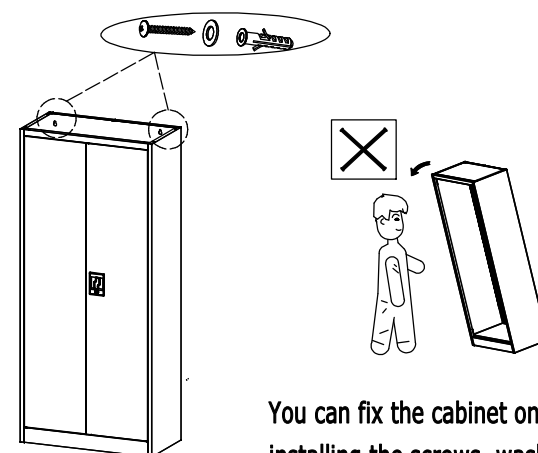

You can fix the cabinet onto the wall by installing the screws, washers and dowels.