





BOTANY



EN Assembly scheme | DE Aufbauanleitung | FR Schéma d'assemblage

 00:05	 x1	 			
--	--	--	---	--	---


instructions.narbutas.com

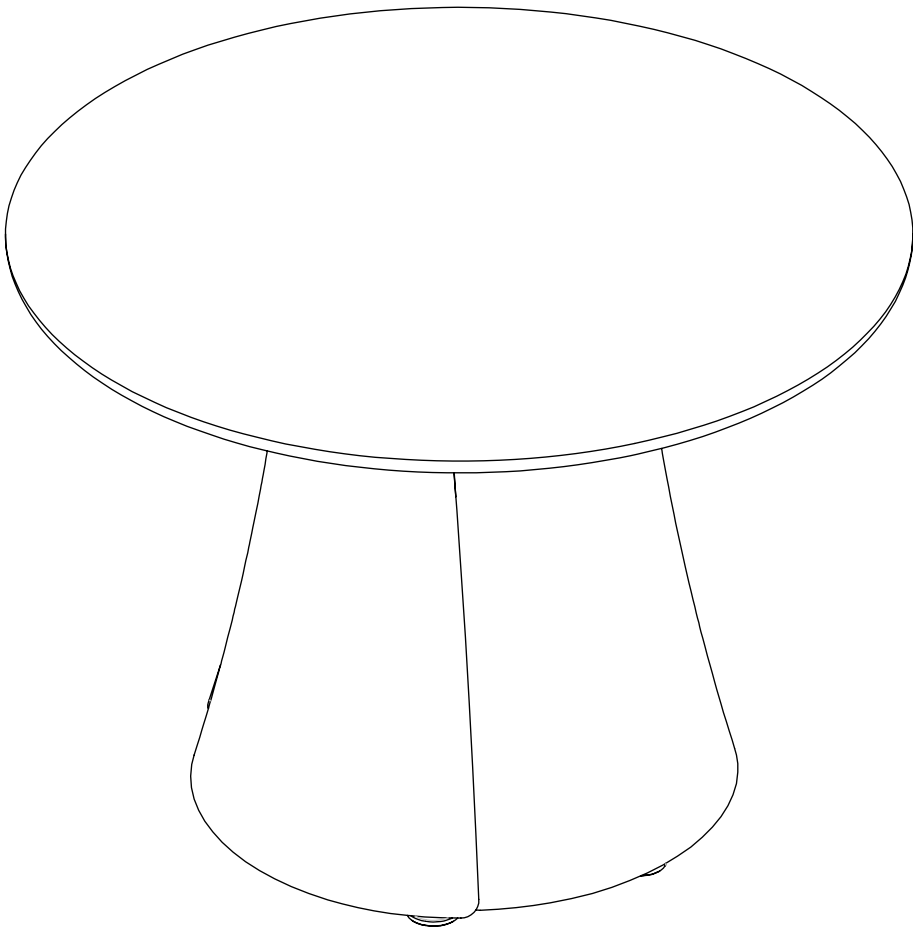


a

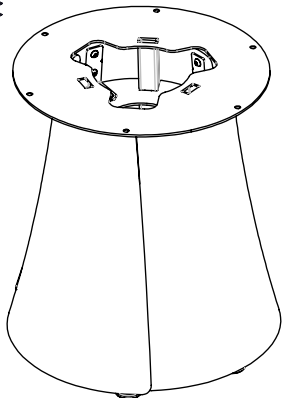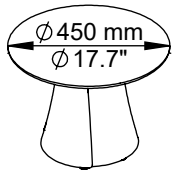

a - x1


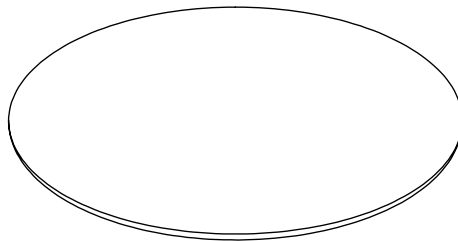


b - x1

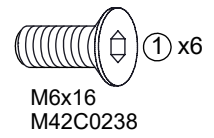


M6x16
M42C0238


b

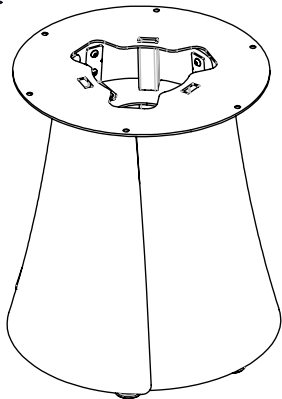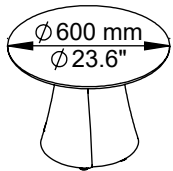


a - x1

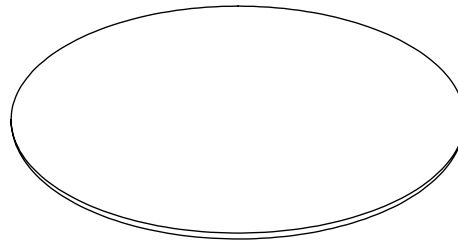

b - x1


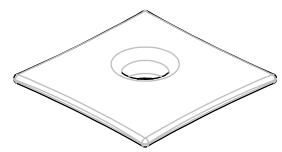


c - x1

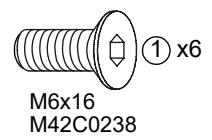


M6x16
M42C0238


c

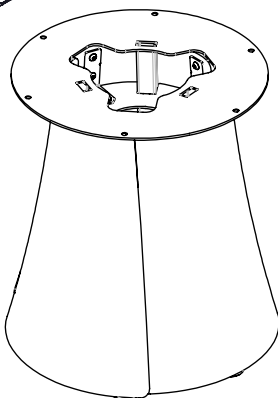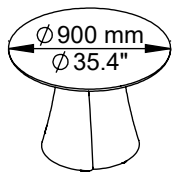


a - x1

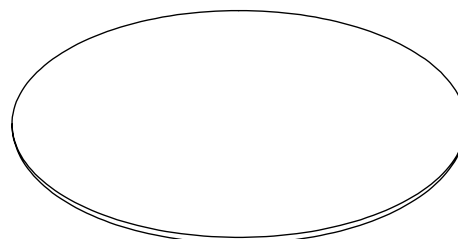

b - x1

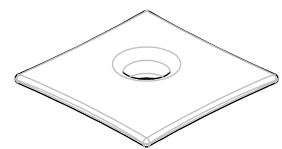

c - x5

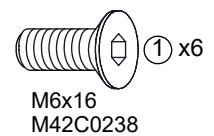

M6x16
M42C0238


1a

Go to step 11


Fahren Sie mit Schritt 11 fort

Aller à l'étape 11


1bc

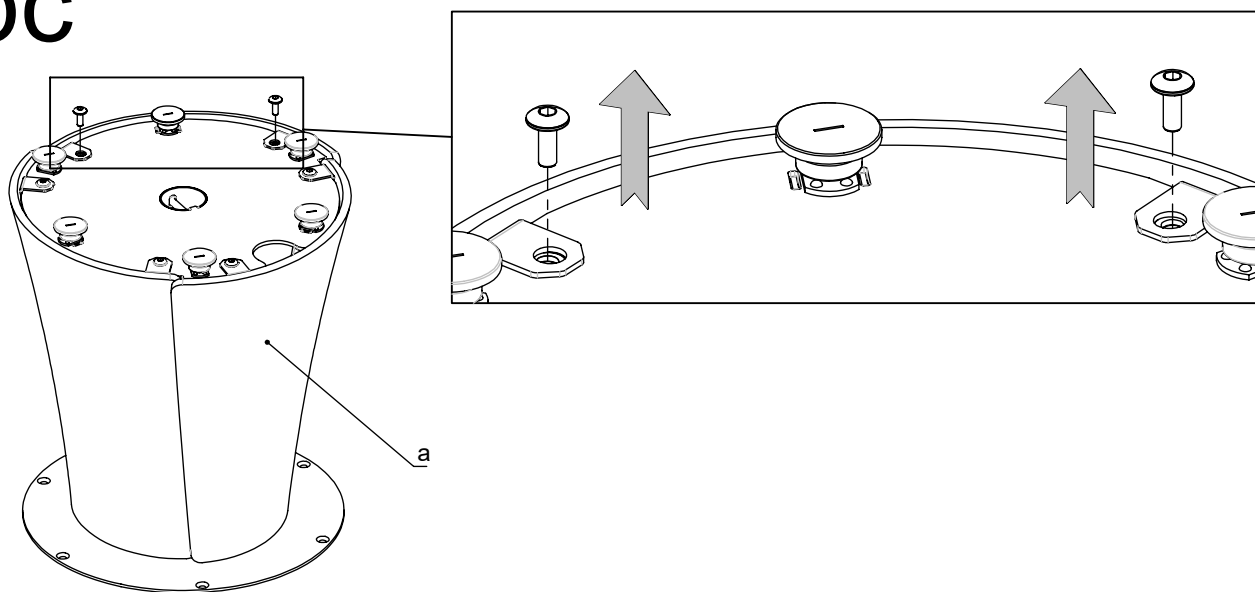


2bc

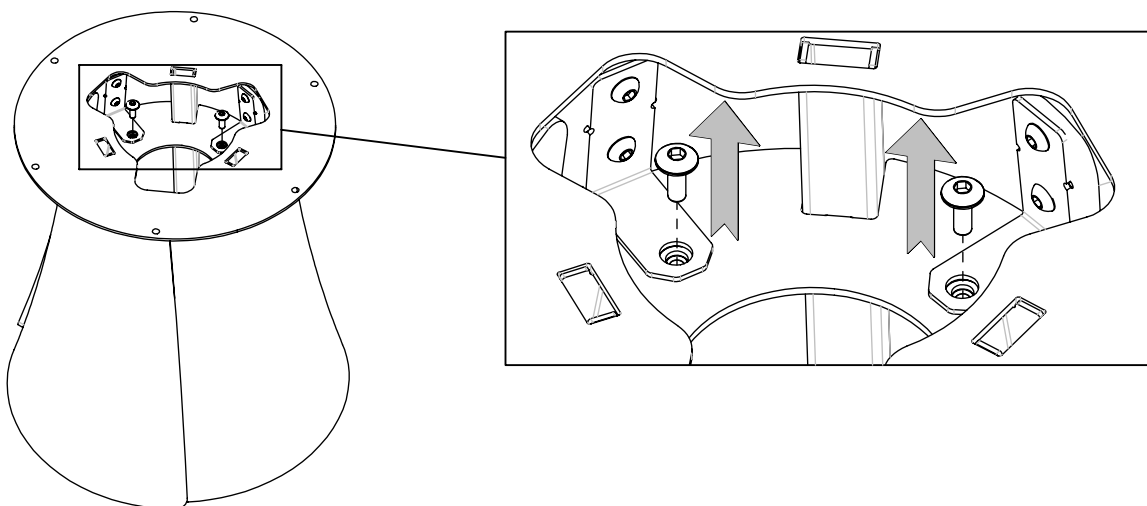


3bc

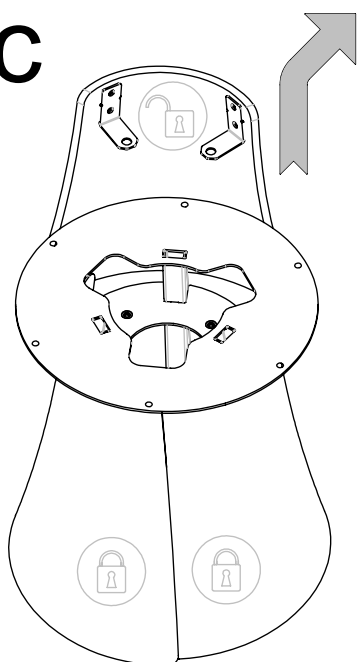



4bc

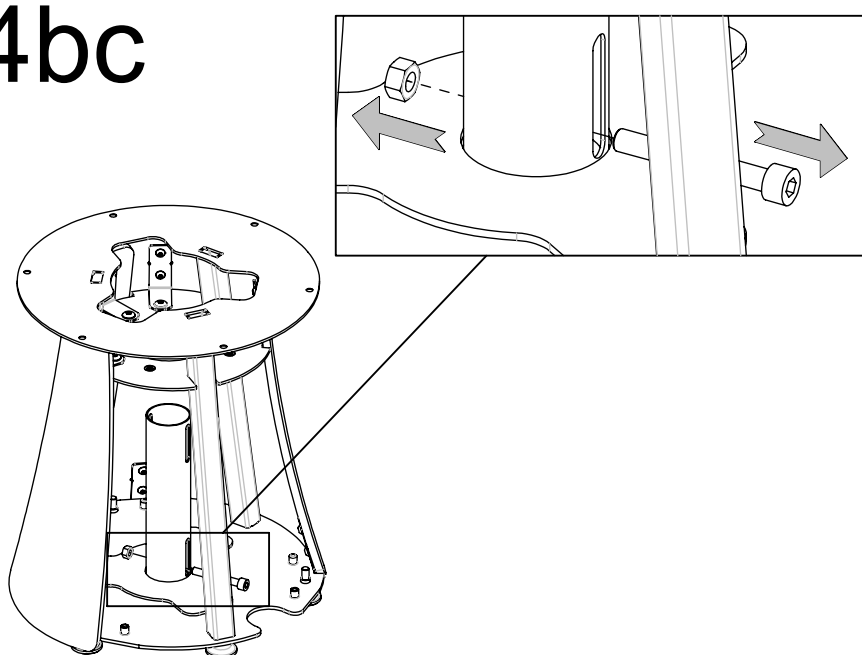



5bc

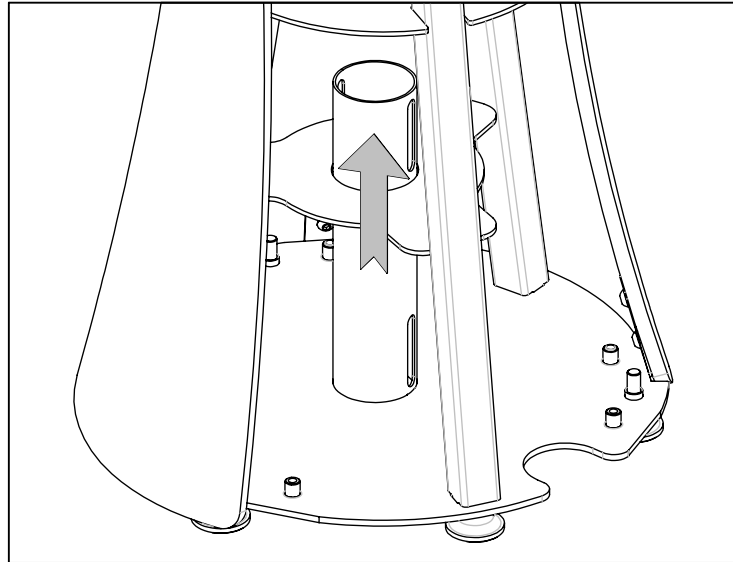


6bc

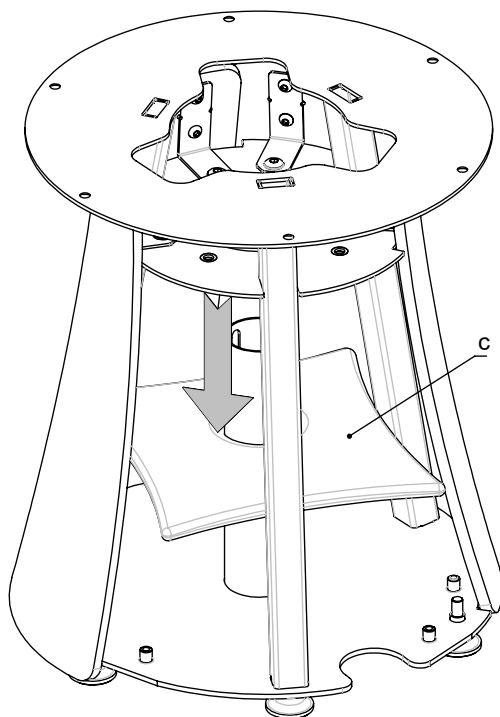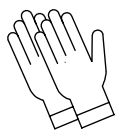


*** Distribute the contents of the counterweight evenly**
 Verteilen Sie den Inhalt des Gegengewichts gleichmäßig
 Répartissez uniformément le contenu du contrepoids

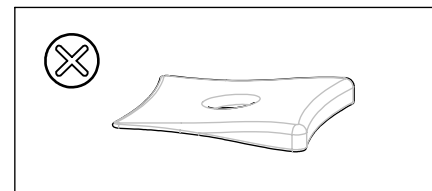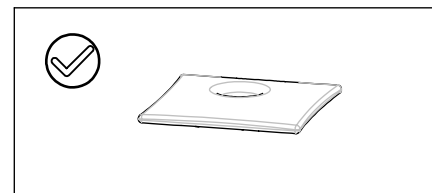



b

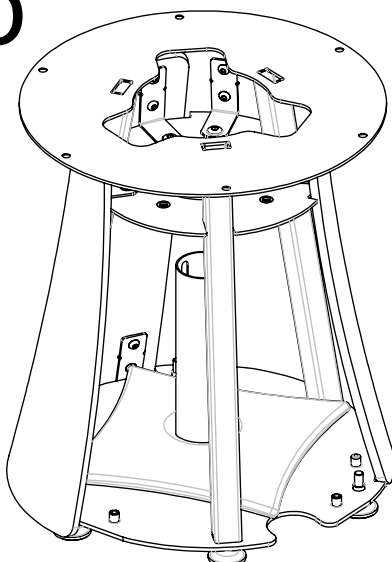

c



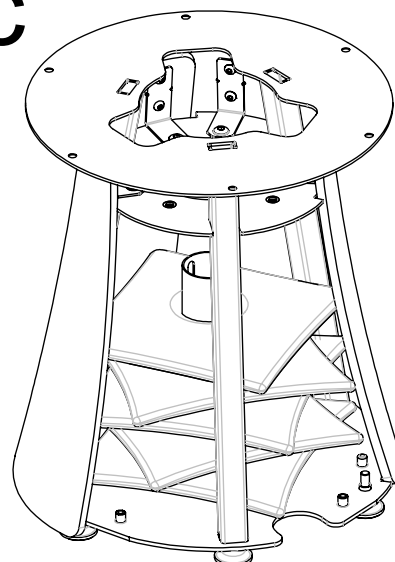


7c

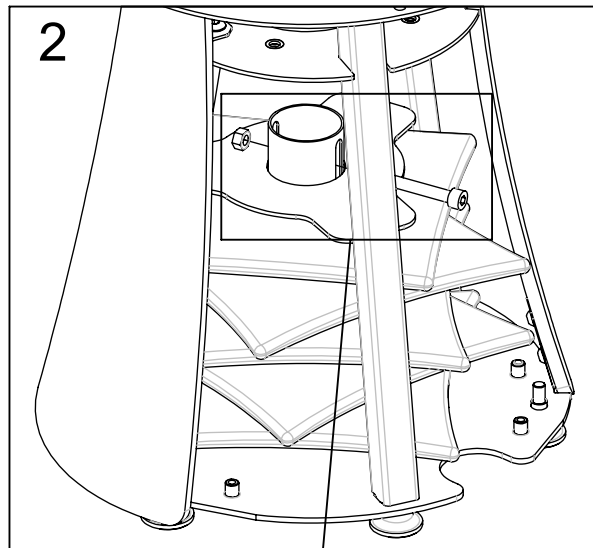
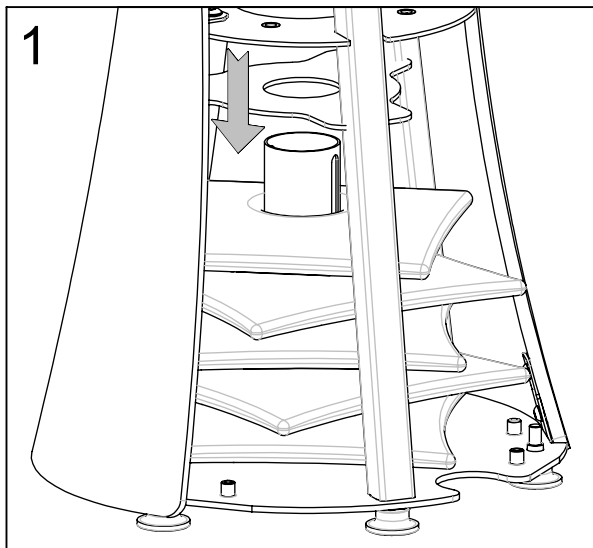


b



For one counterweight put the bolt lower
 Für ein Gegengewicht die Schraube
 weiter nach unten drehen
 Pour un contrepoids, posez le boulon en
 bas

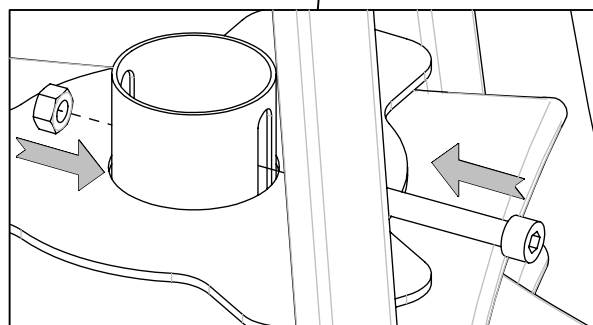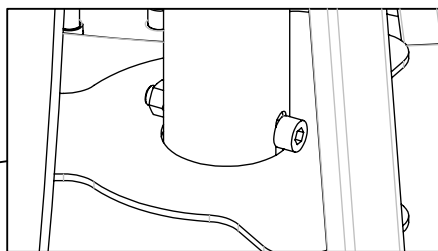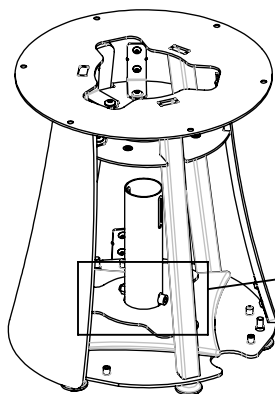

8bc

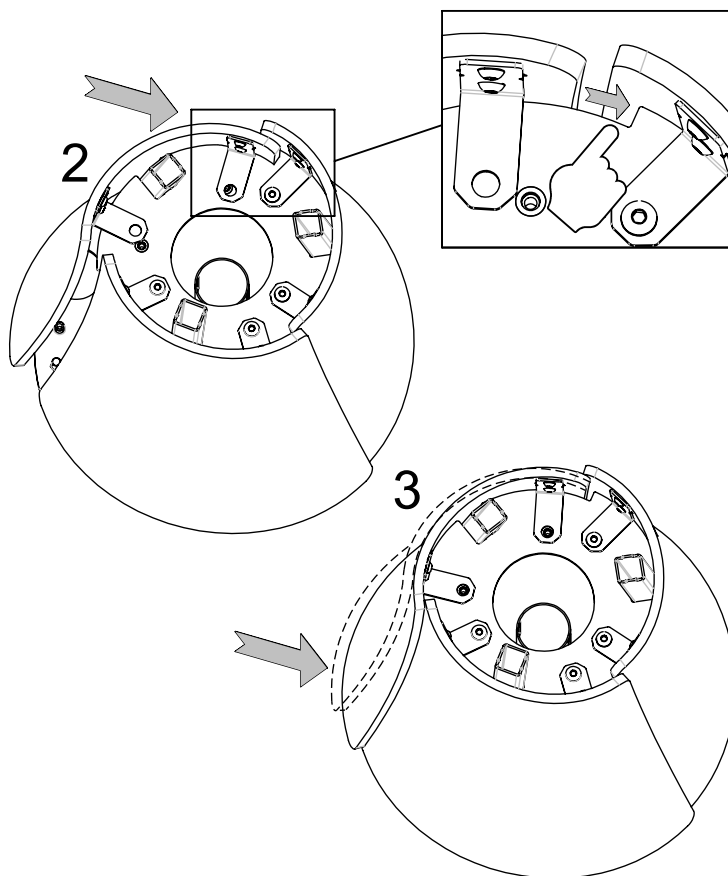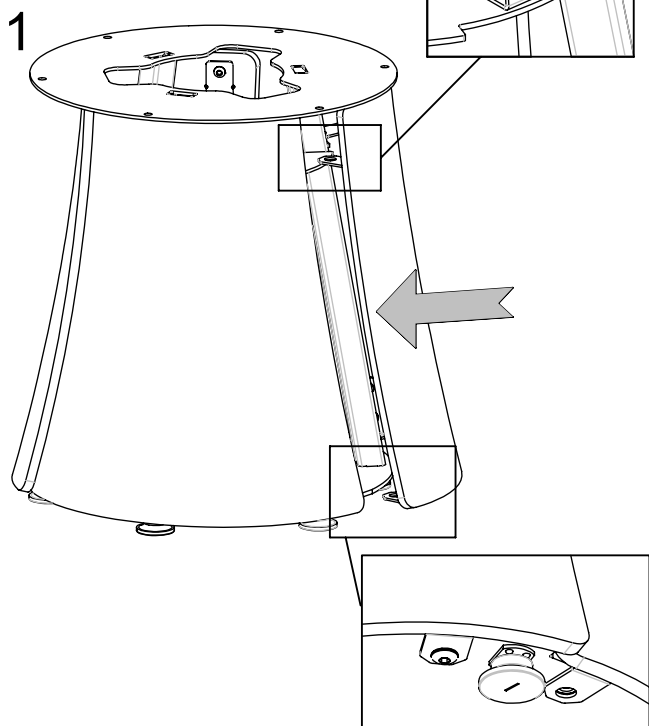



9bc

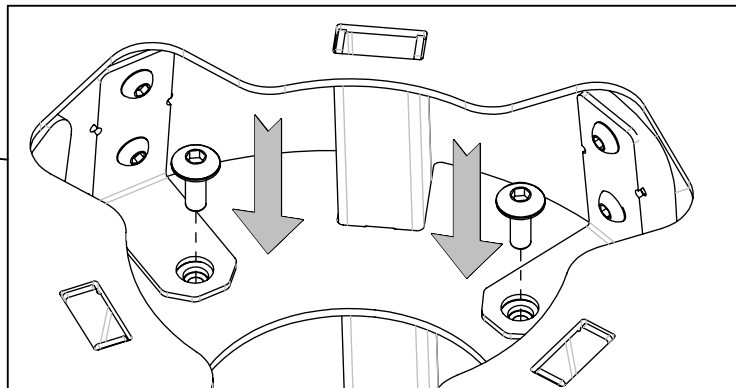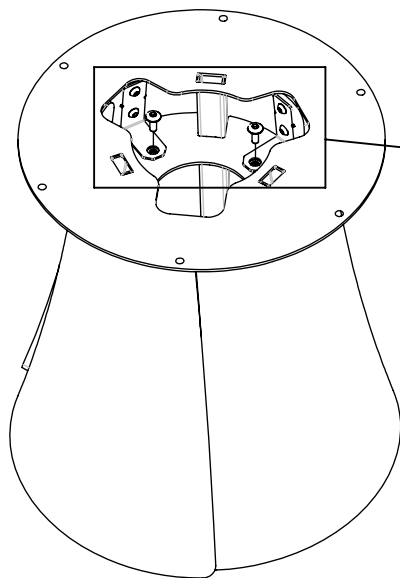

Tighten up
Schrauben festziehen
Resserrer les vis



10bc

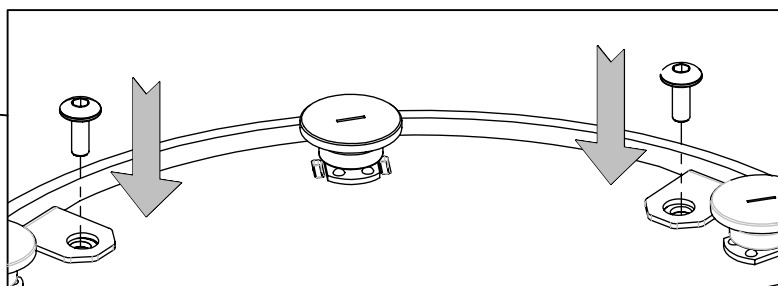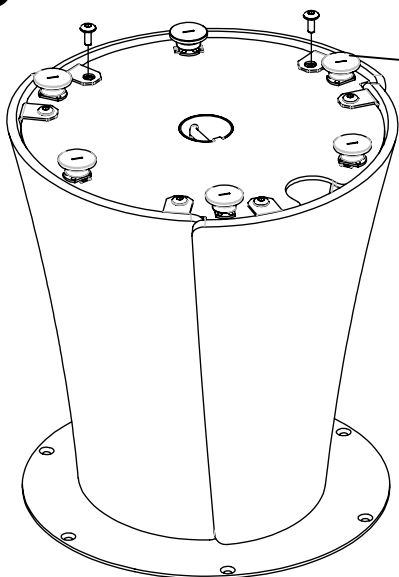


Tighten up
Schrauben festziehen
Resserrer les vis




11

① x6
M6x16
M42C0238

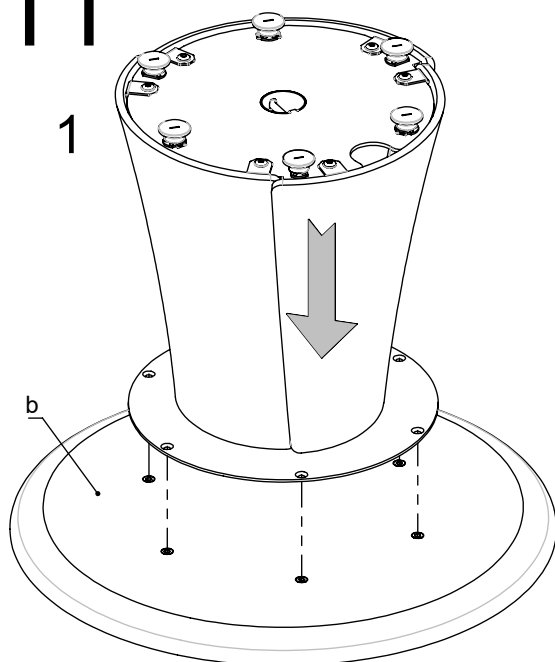

2

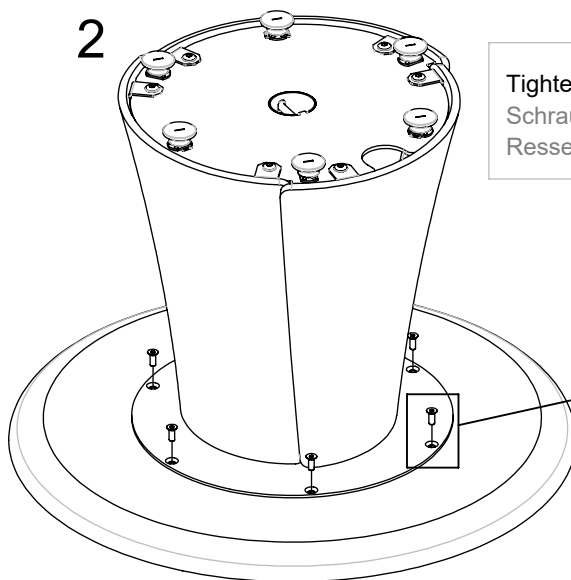

Tighten up
Schrauben festziehen
Resserrer les vis



12

Check the alignment
Überprüfen Sie die Ausrichtung
Vérifier l'alignement

