







NOVA WOOD

EN Assembly scheme | DE Aufbauanleitung | FR Schéma d'assemblage

 00:01	 x1	
--	--	---



instructions.narbutas.com

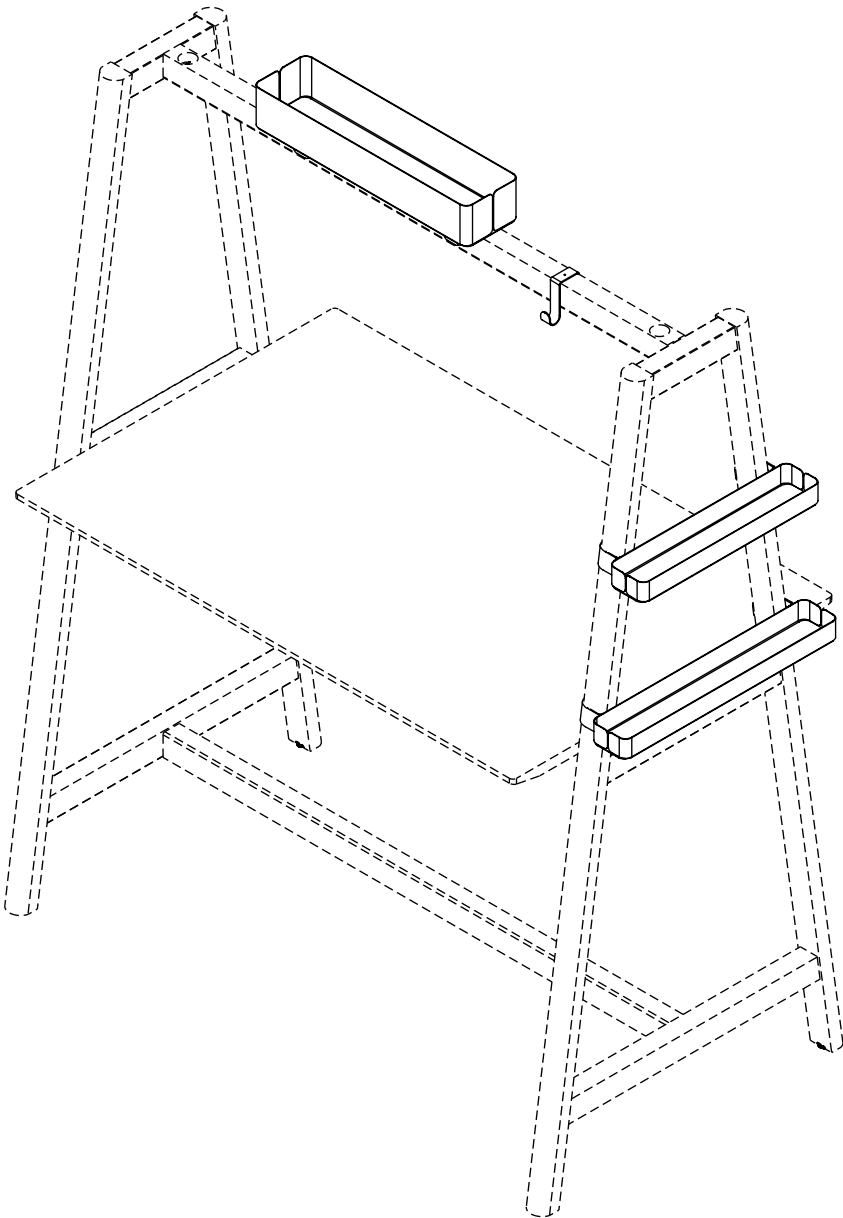

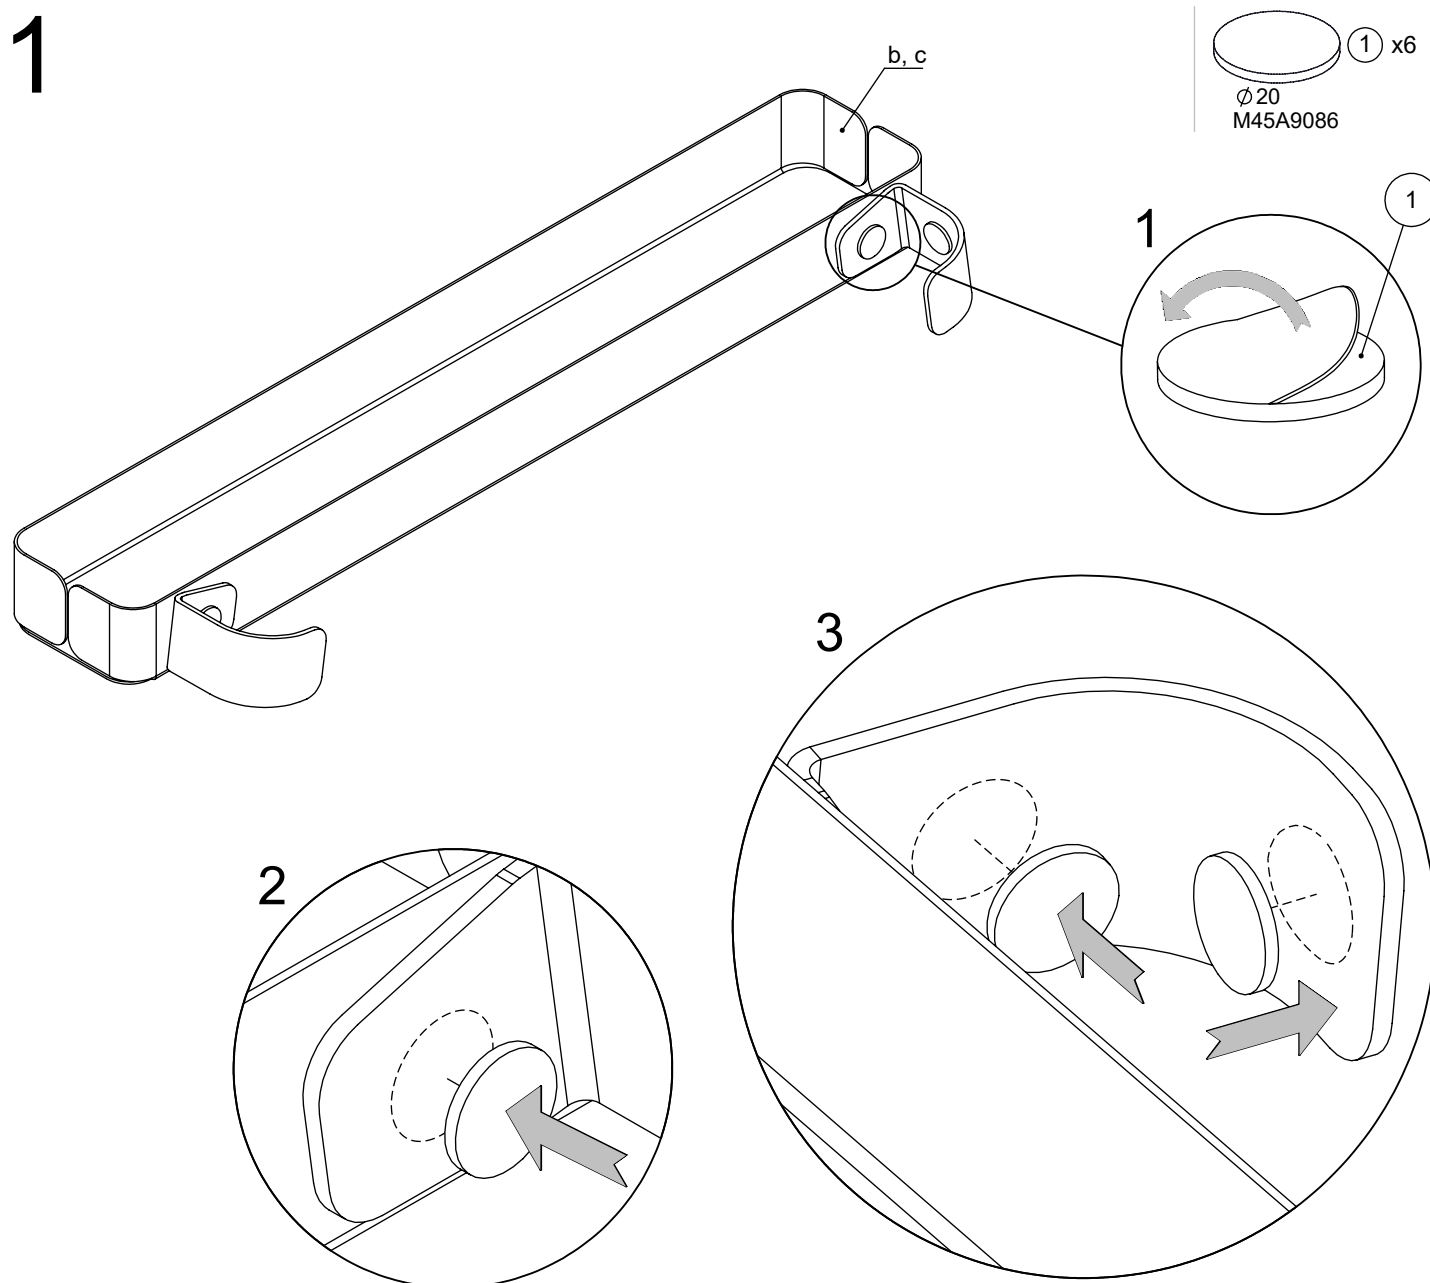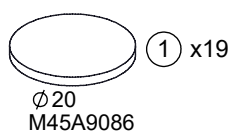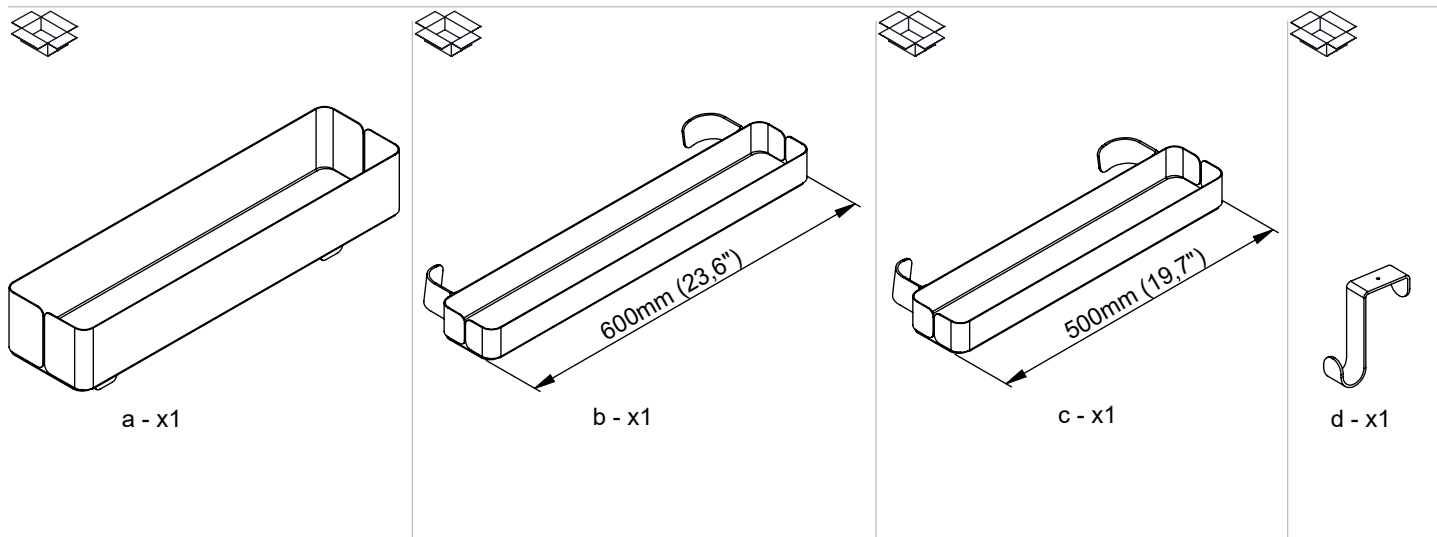


2


 ① x6
 Ø 20
 M45A9086

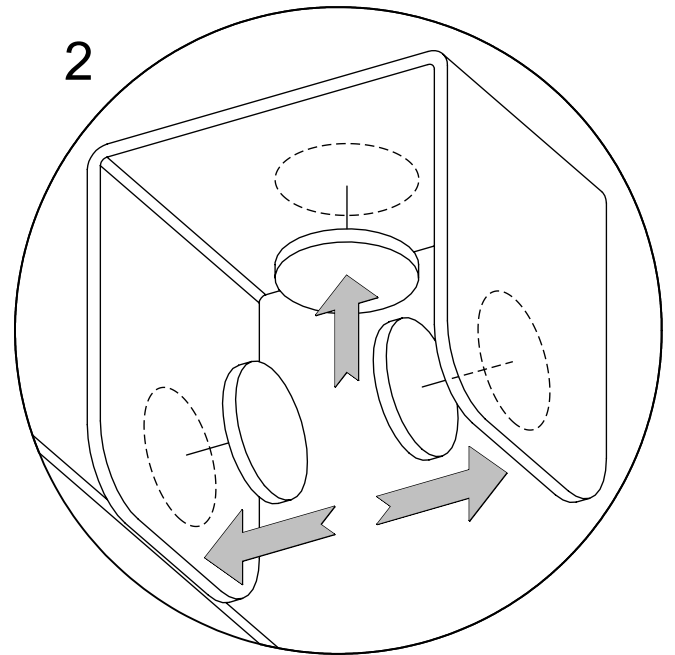
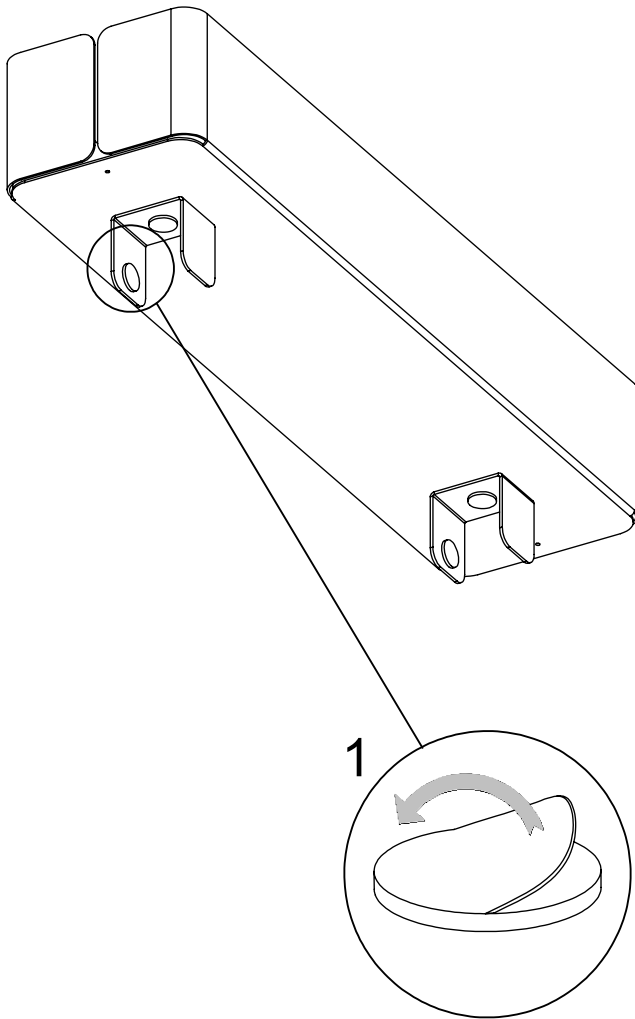


3




 ① x1
 Ø 20
 M45A9086

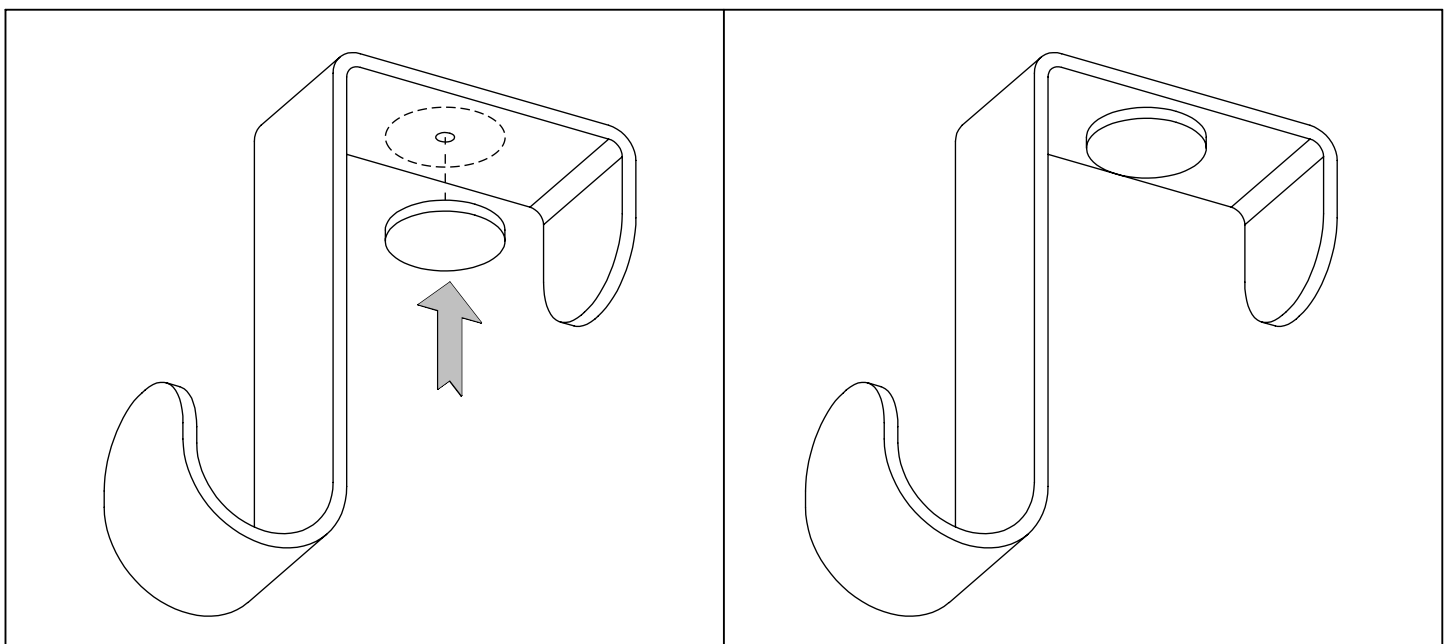

4

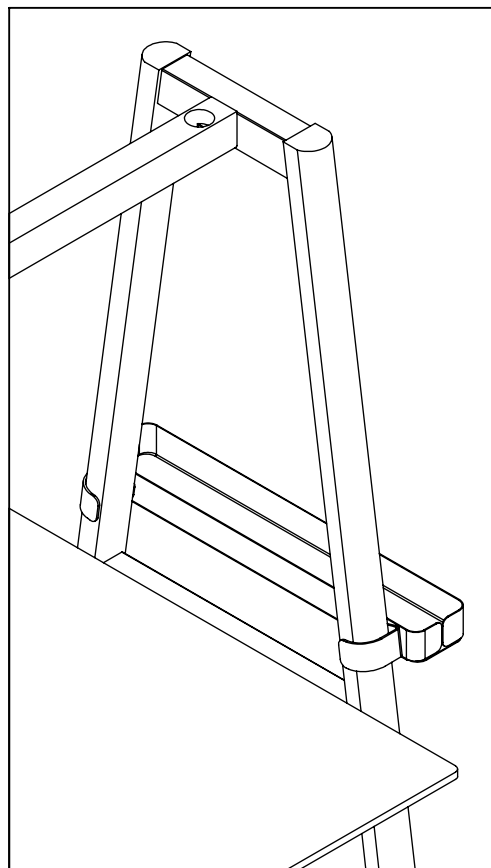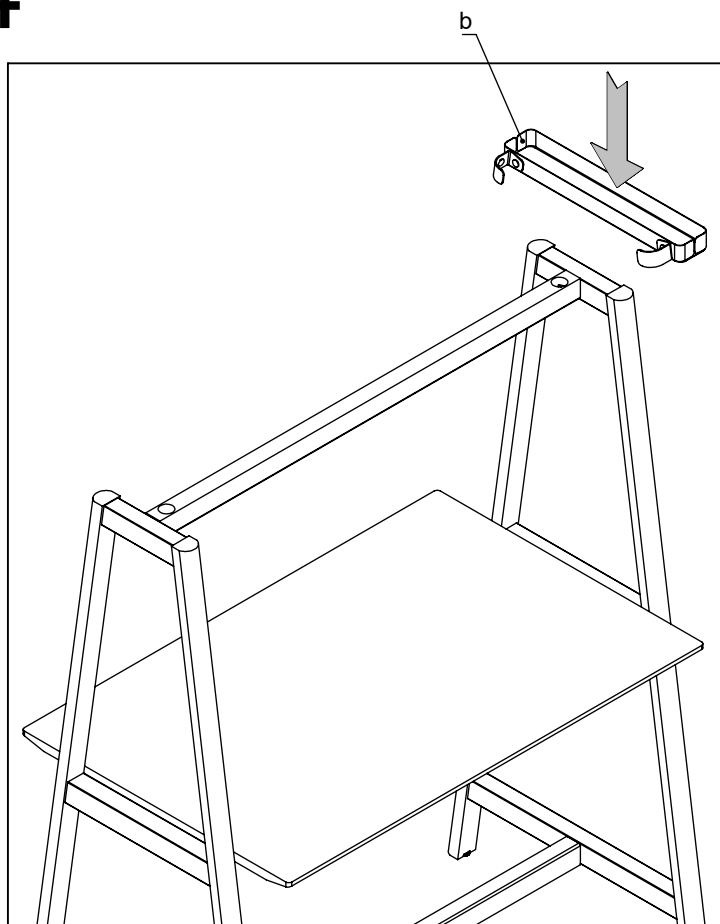

5

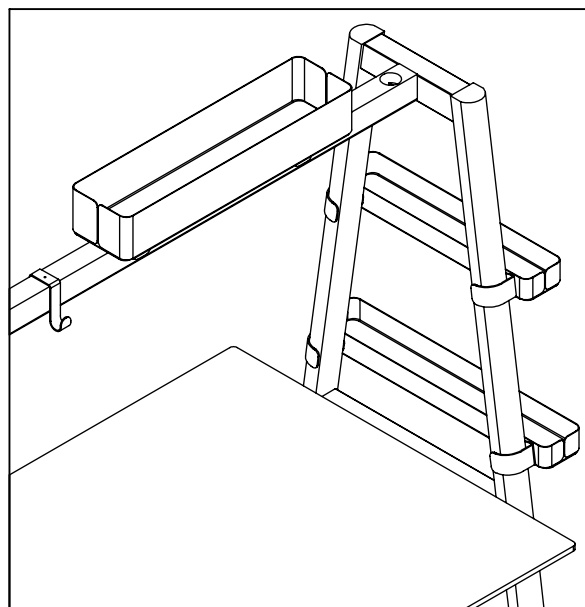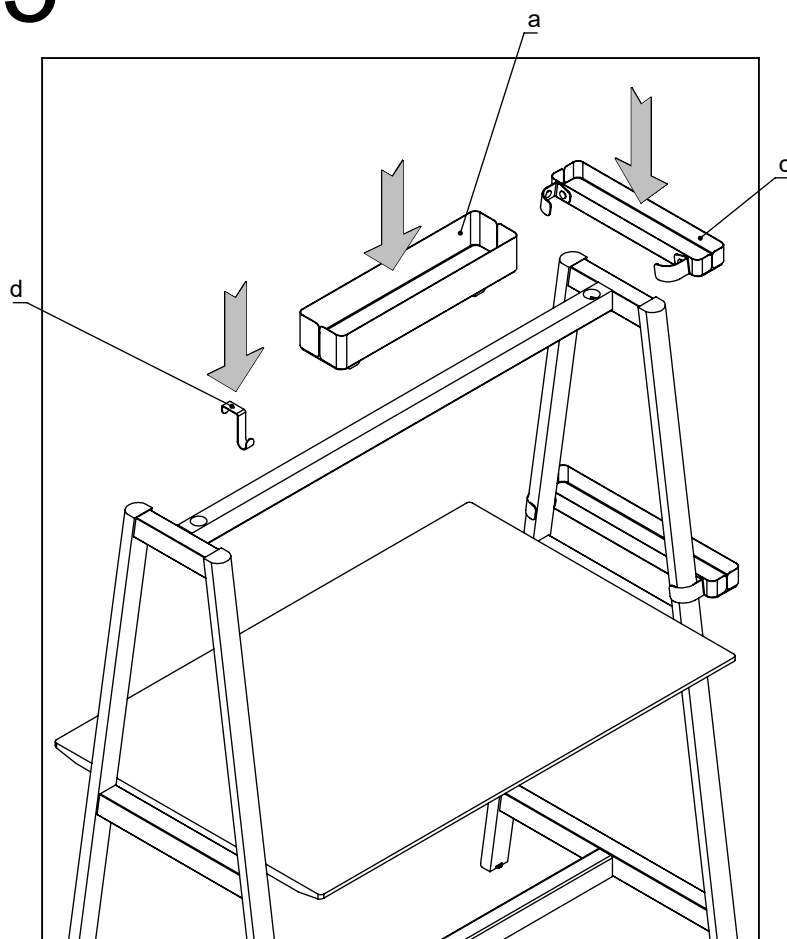

6

Check the alignment
Überprüfen Sie die Ausrichtung
Vérifier l'alignement

