

M60EN101

1/1


Surinkimo schema
Схема сборки
Assembling scheme

Reikalingi įrankiai:




Инструменты для сборки:

Requiring tools:



x2

x3

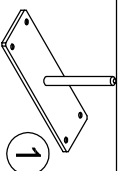

x8

x12





L 1200 mm

L 1400 / 1600 / 1800 mm



I

Neužveržti iki galo
Не затянуть до конца
Don't tighten to end

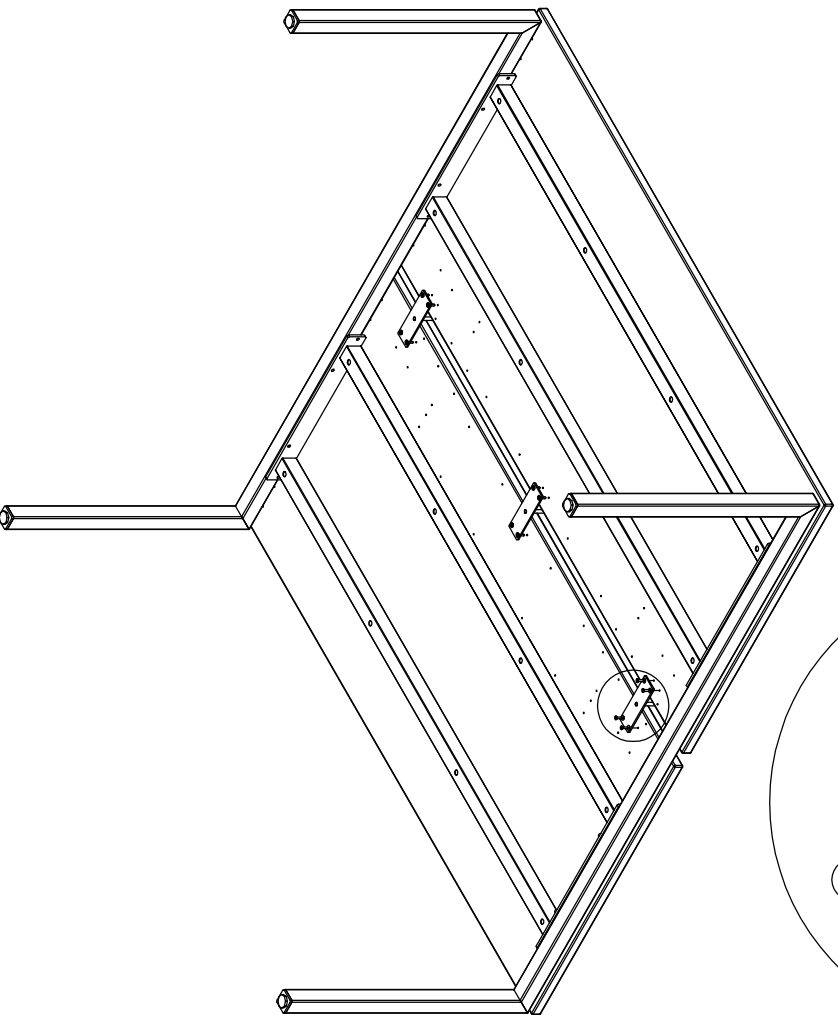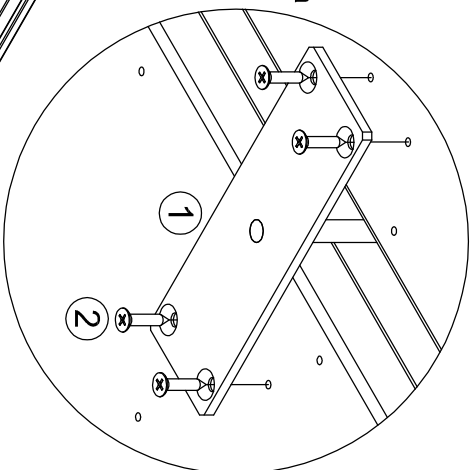

II

Užveržti visus medstraigčius
Затянуть все шурупы
Tighten up all screws

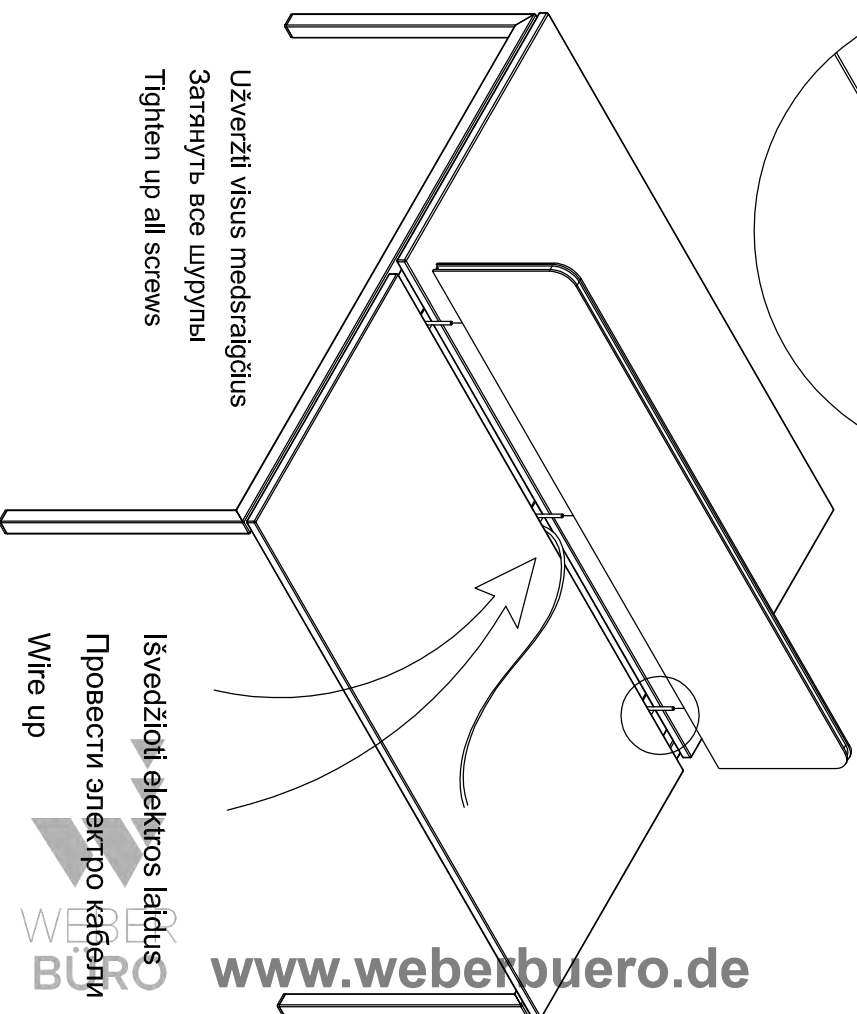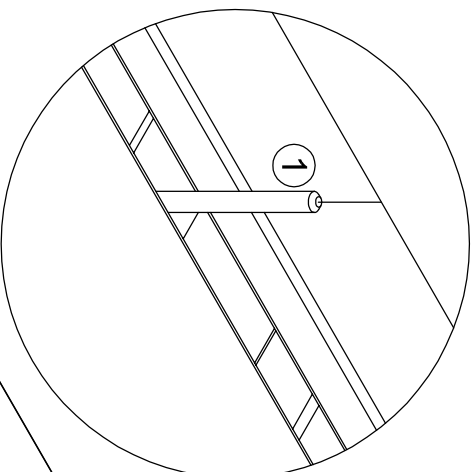

Išvedžioti elektros laidus
Провести электро кабели
Wire up

www.weberbuero.de

WEBER
BÜRO