




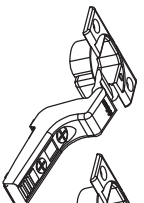


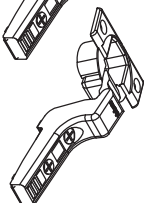


- 1* 
 - 2* 
 - 3 
 - 4 
 - 5 
 - 6 
 - 7 
- x1 x1 x2 x2 x4 x4 x4 x12


1




2

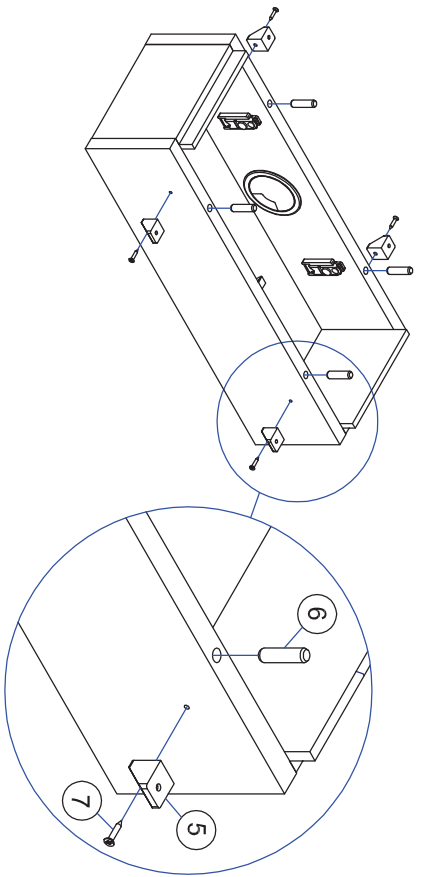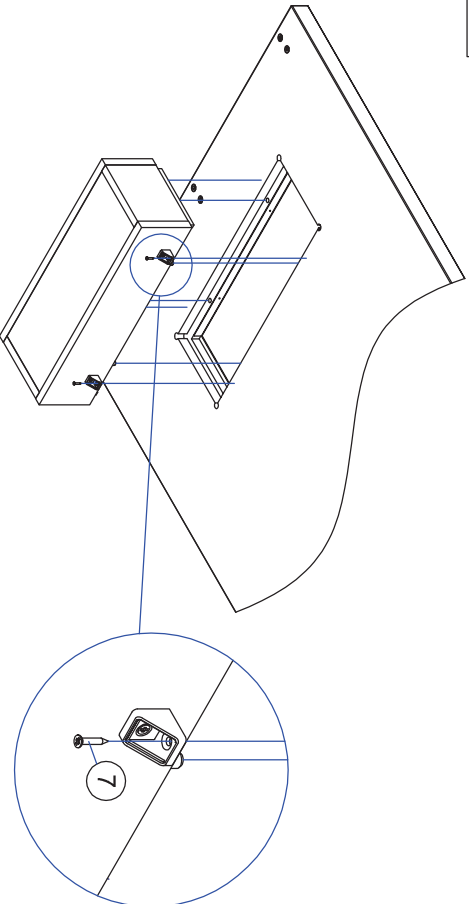


3

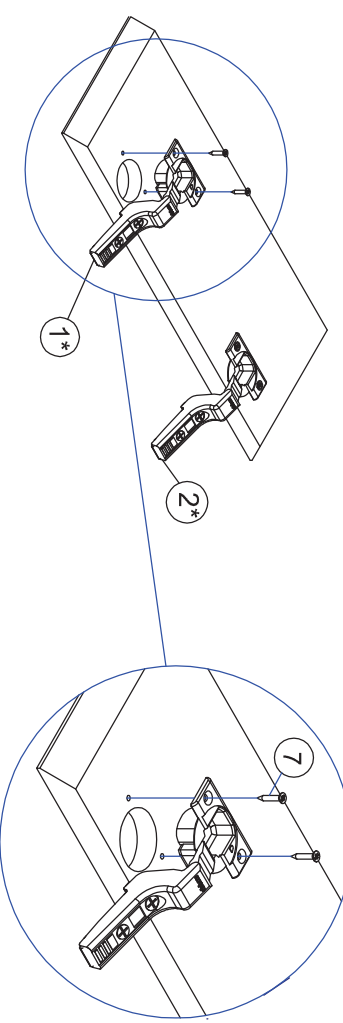


4

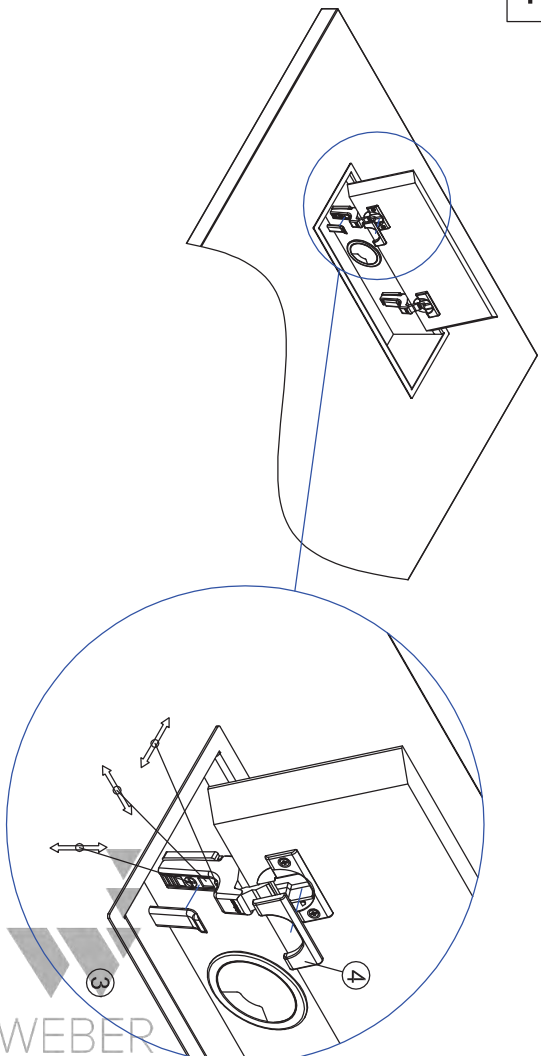





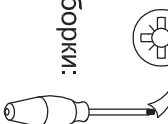


Reikalingi įrankiai:
Инструменты для сборки:
Requiring tools:

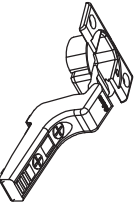


M60EP009
Surinkimo schema
Схема сборки
Assembling scheme

1* 

Tylaus uždarymo lankstas
Петля бесшумного закрывания
Soft closing hinge

- ① x2 
- ② x4 
- ③ x11 
- ④ x2 
- ⑤ x2 
- ⑥ x2 
- ⑦ x2 

Reikalingi įrankiai:
Инструменты для сборки:
Requiring tools:




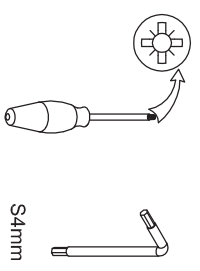


M60EP011

Surinkimo schema

Схема сборки

Assembling scheme

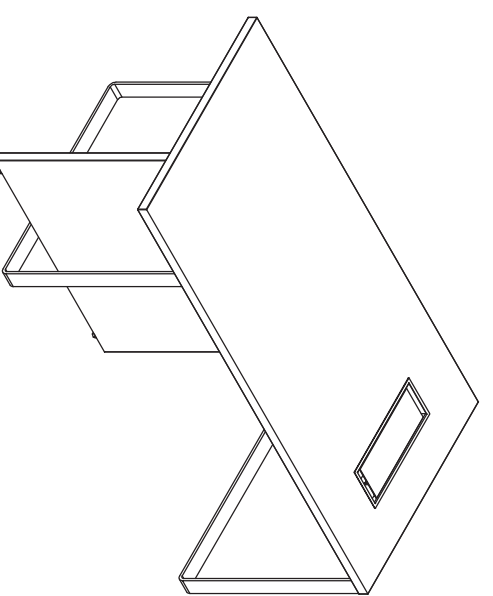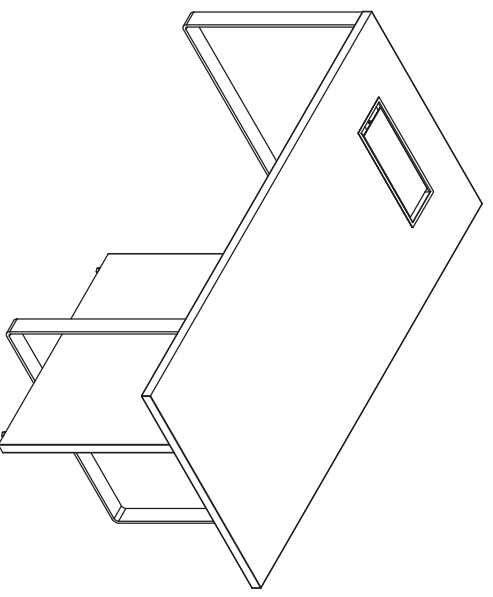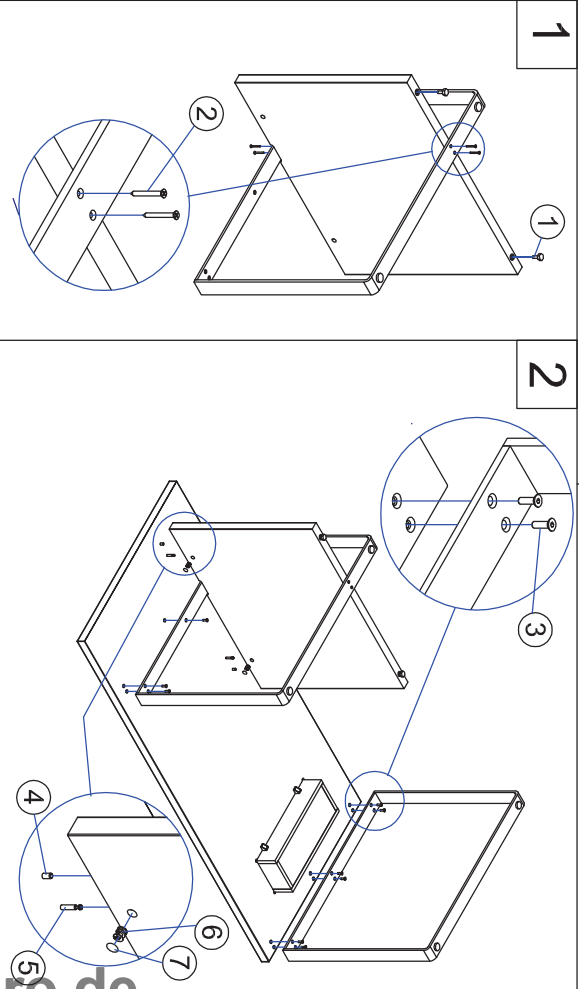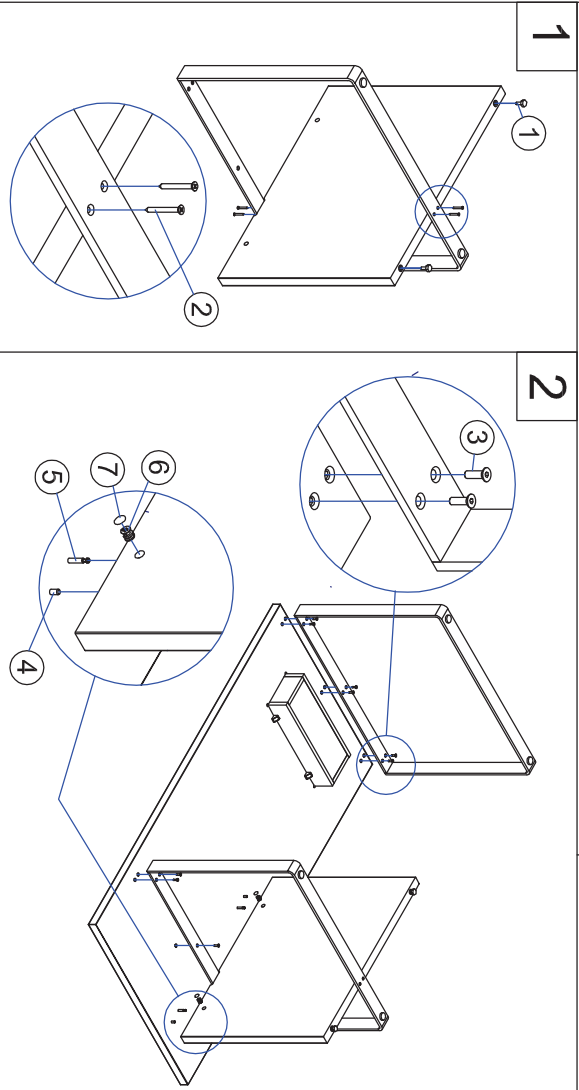

BPA182
BPA222

BPA183
BPA223

2016.01.27

1



x17

Reikalingi įrankiai:

Инструменты для сборки:

Requiring tools:



54mm

M60EP013

1 / 2

Surinkimo schema

Схема сборки





Assembling scheme

1



Išimti stalčius

Вынуть ящики



Take out the drawers

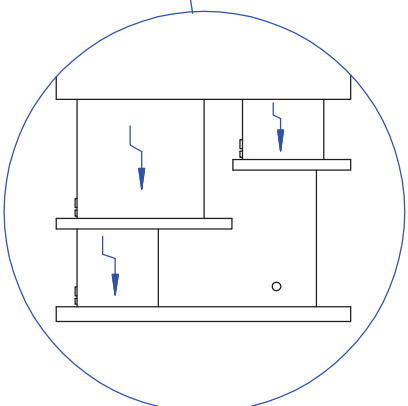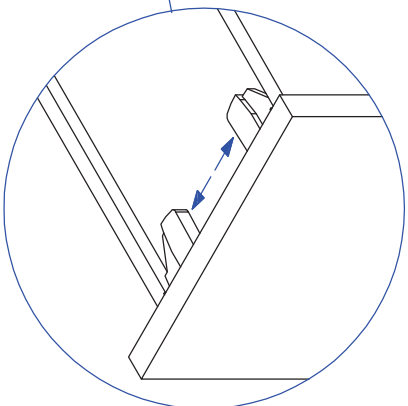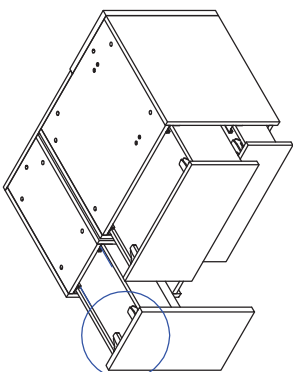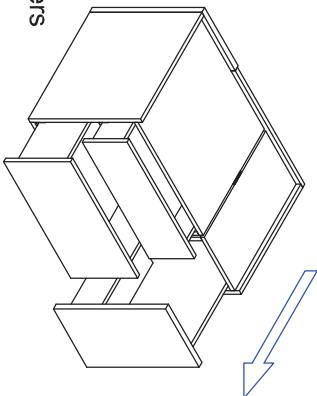

2

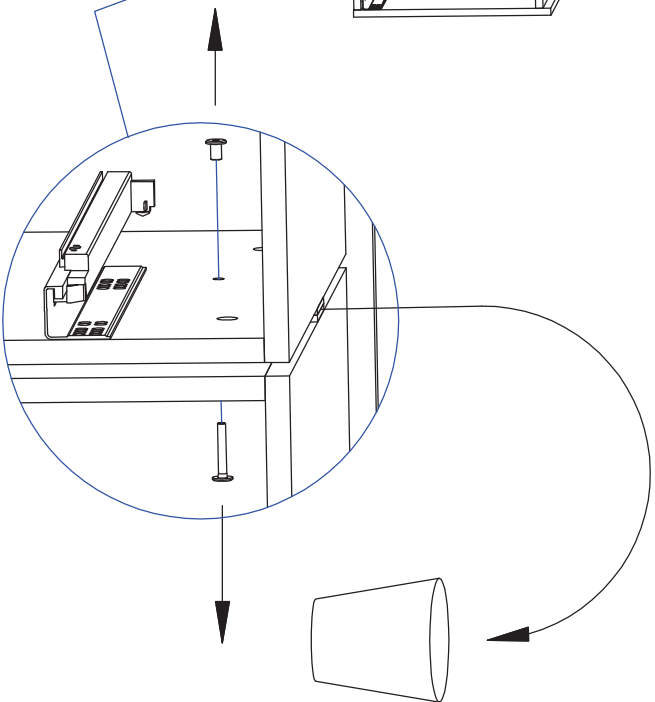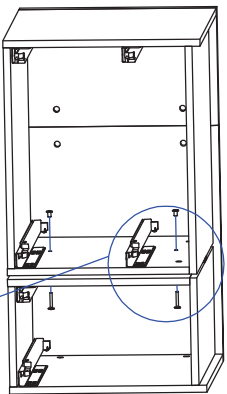


3

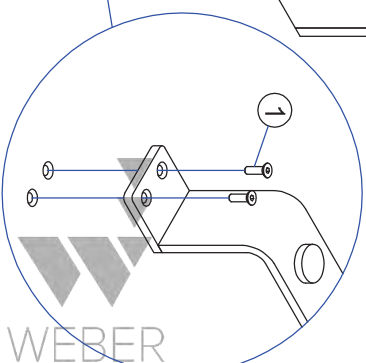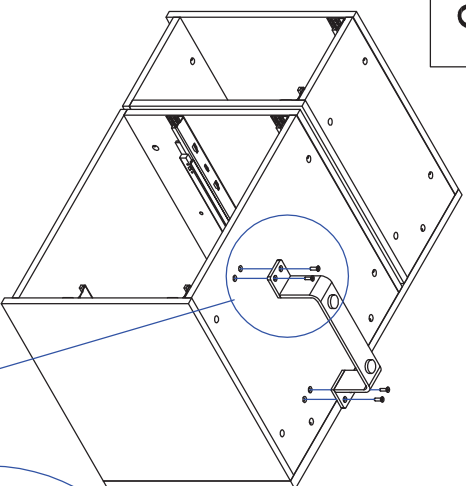


WEBER
BÜRO

www.weberbuero.de


4

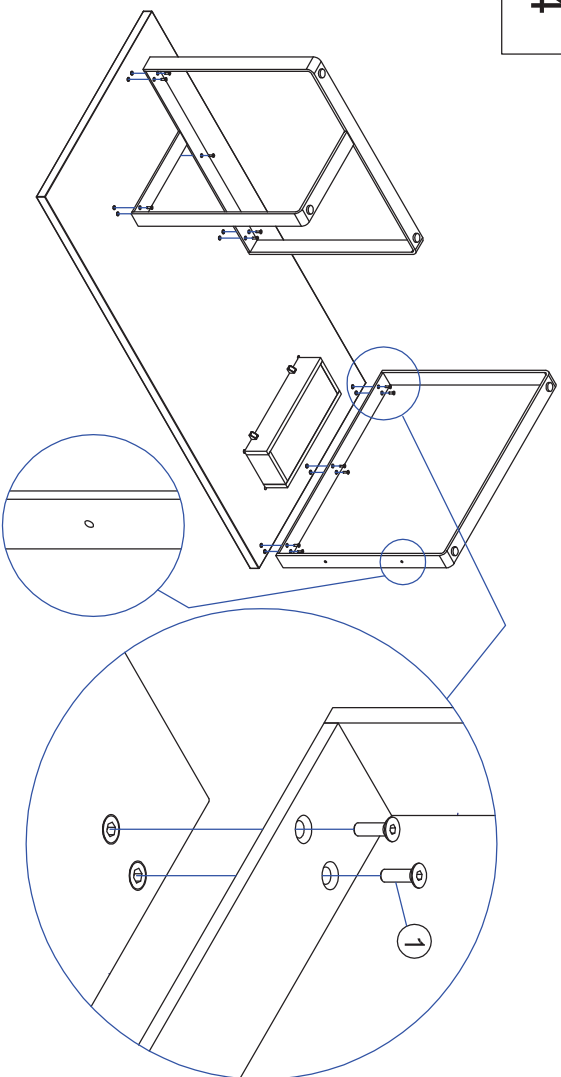






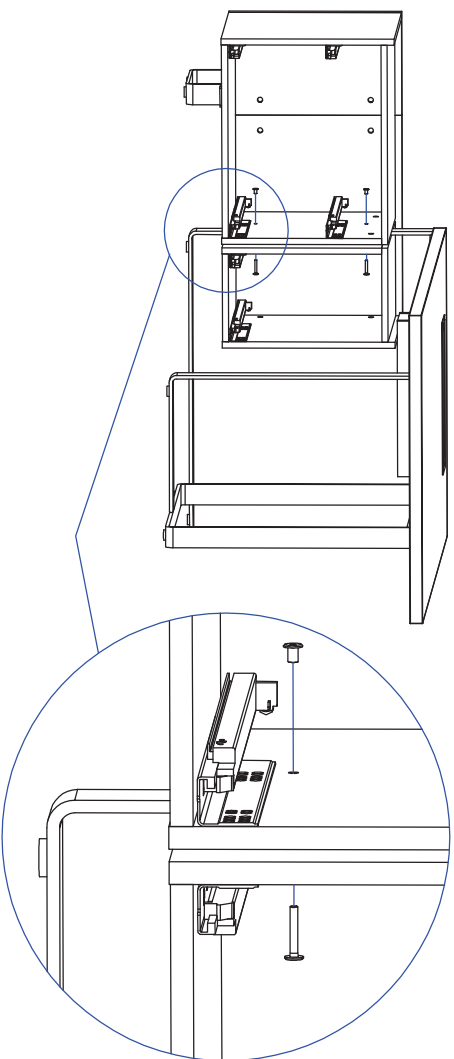

5

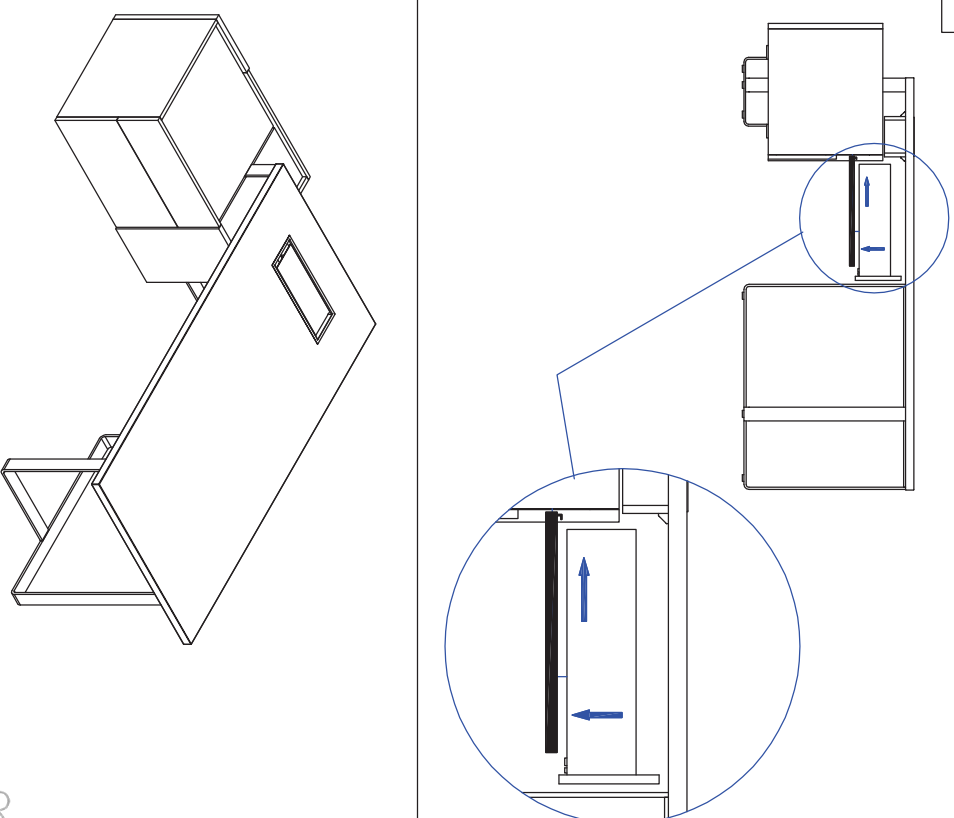

6




- ①  x2
- ②  x4
- ③  x15
- ④  x2
- ⑤  x2
- ⑥  x2
- ⑦  x2

Reikalingi įrankiai:

Инструменты для сборки:

Requiring tools:




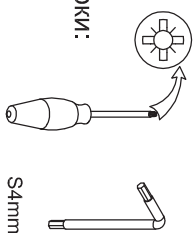


1



Išimti stalčius

Вынуть ящики



Take out the drawers

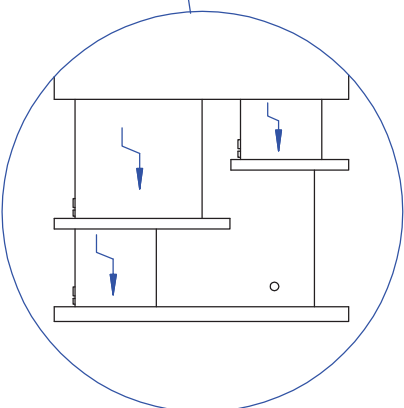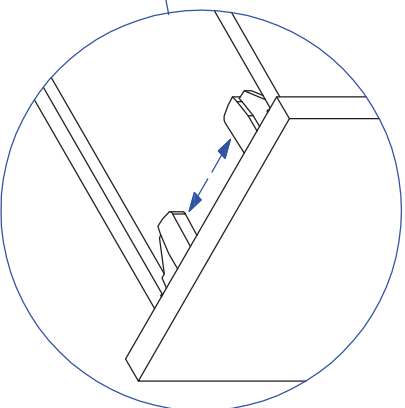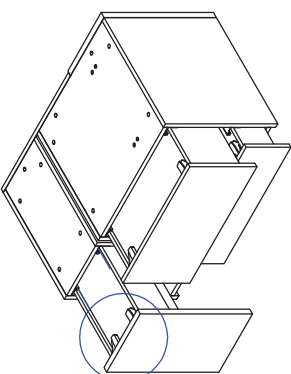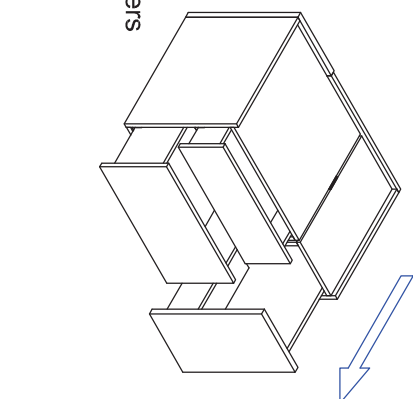


2

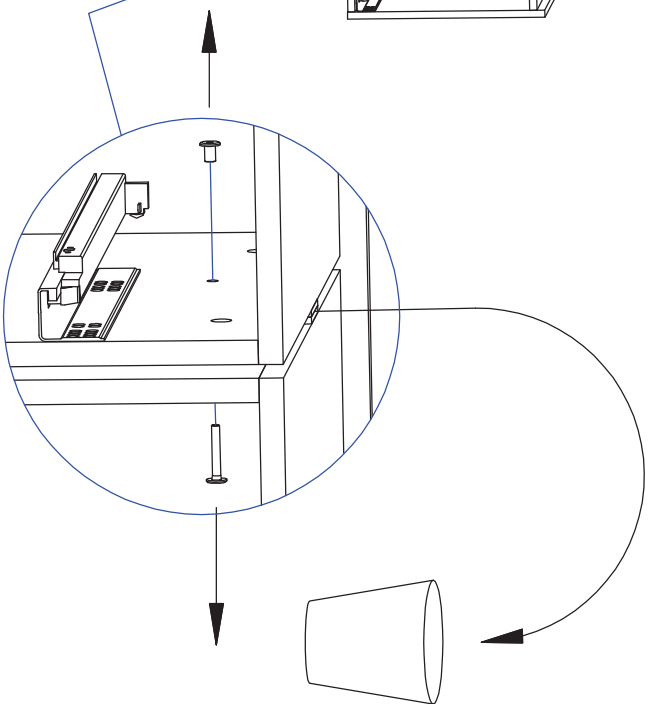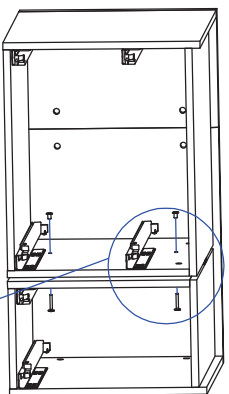


3

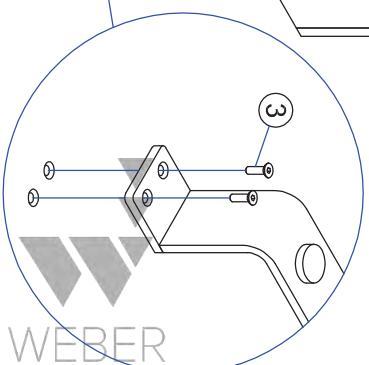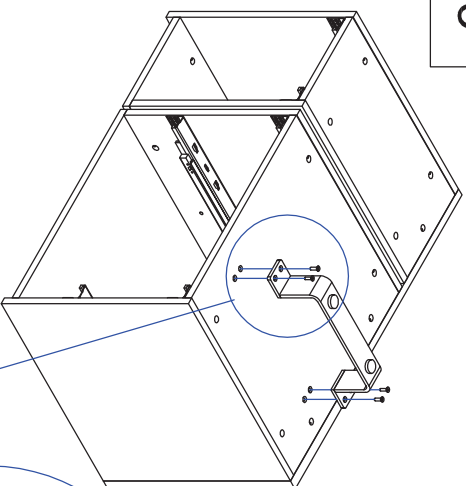


4

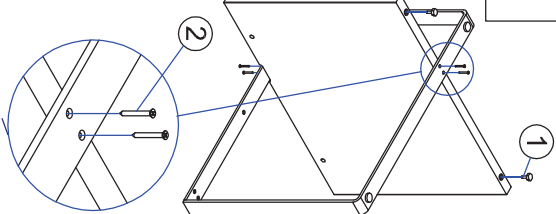



5

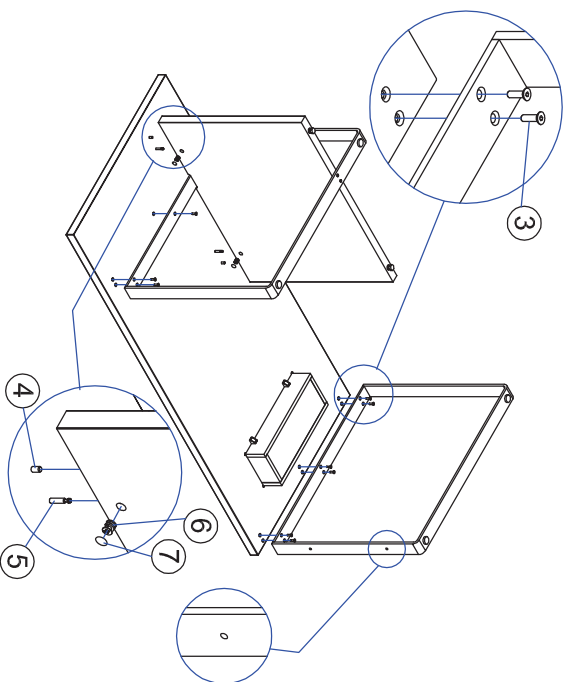

7

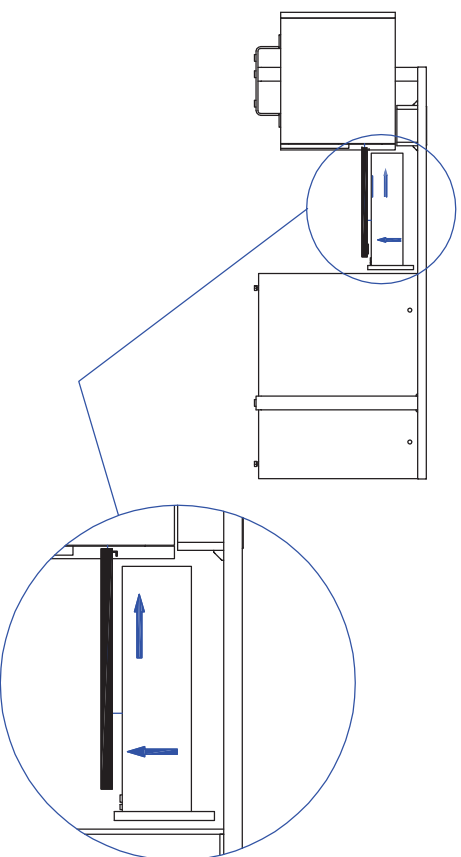

6

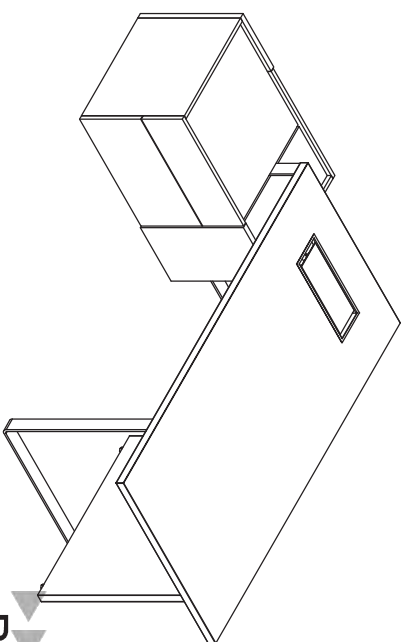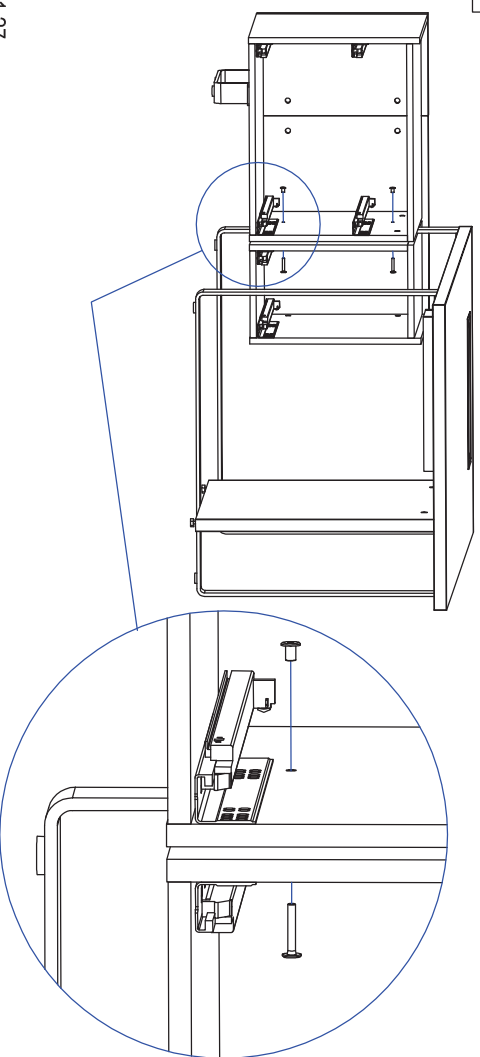

Korpuso surinkimas

Сборка корпуса


Carcass assembly

	1	2	3	4	5	6
H=16mm						
2H	x18	x18	x18	x12	x4	x4
3H	x24	x24	x24	x18	x4	x4
5H	x36	x36	x36	x30	x4	x4

Reikalingi įrankiai:

Инструменты для сборки:

Requiring tools:

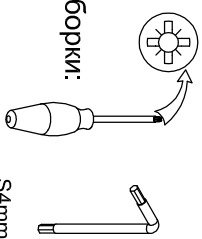


M60EP004

Surinkimo schema


Схема сборки

Assembling scheme


1

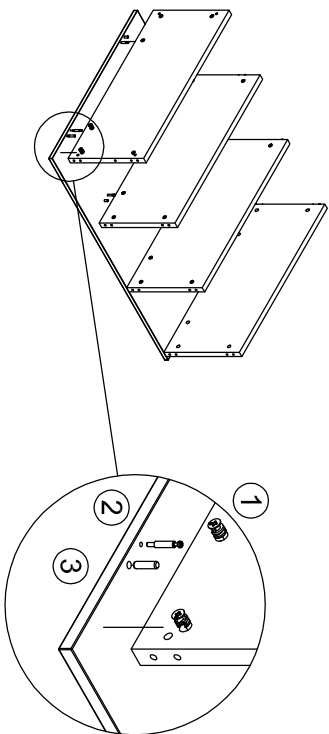


2

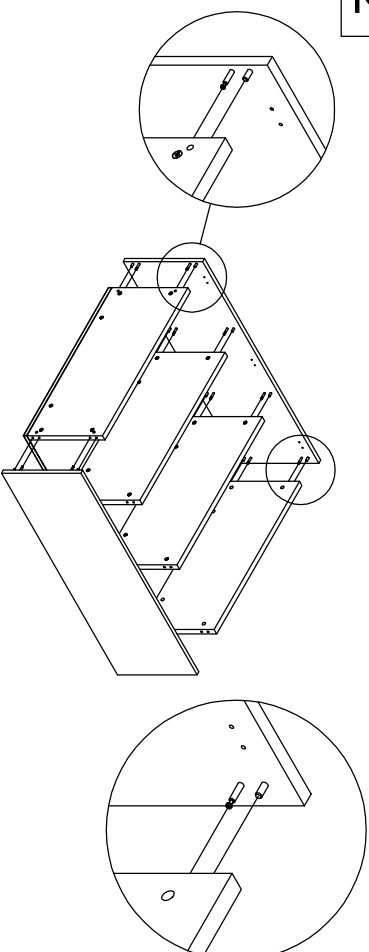

3

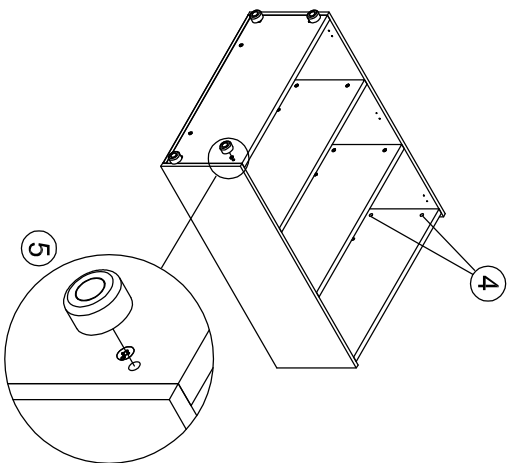

4

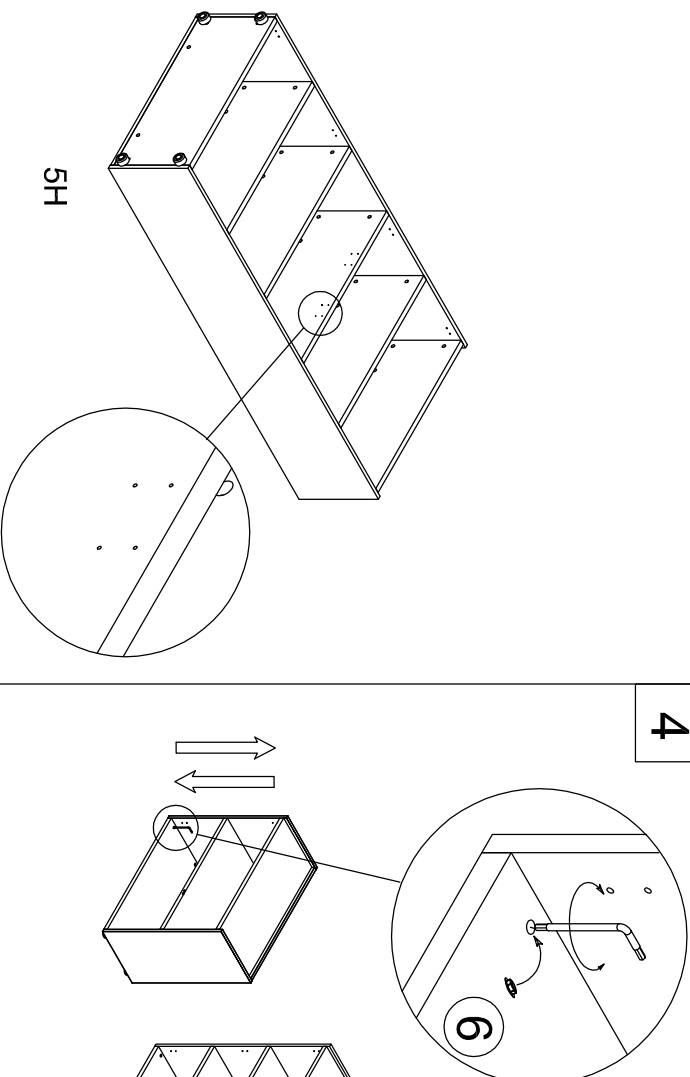

2015.09.21

5H

2H

3H

5H

Durų surinkimas
Сборка дверей

Door assembly

M60EP007


Surinkimo schema
Схема сборки

Assembling scheme


G2D064

x4 x4 x8 x8 x8 x20 x4 x2 x2 x2 x2


Reikalingi įrankiai:
Инструменты для сборки:
Requiring tools:

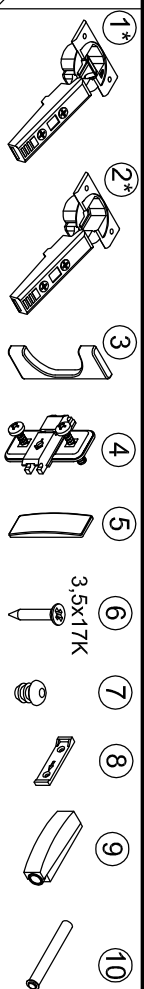

1

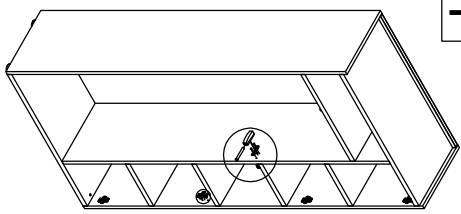


G1B294+G1B295

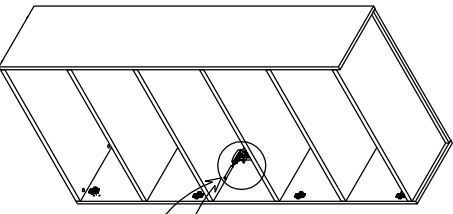

G1B296+G1B297



2

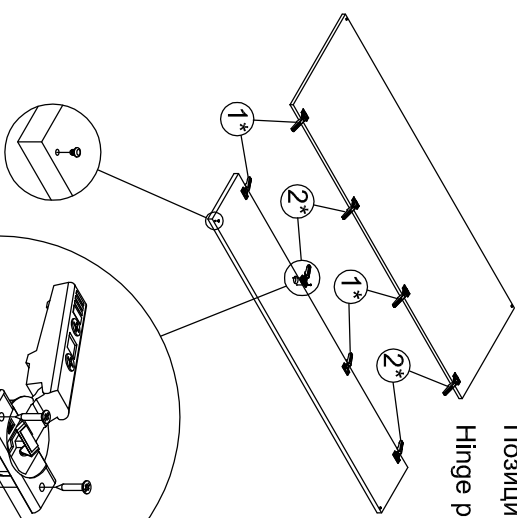


Lankstų pozicijos
Позиции петель
Hinge positions

G2D064

3

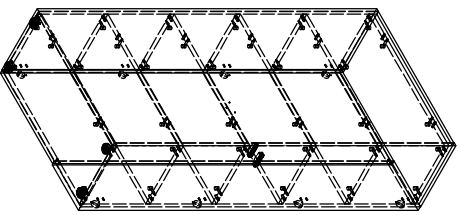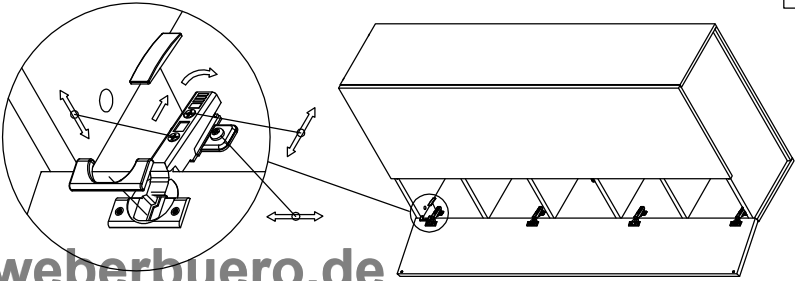

BPE095

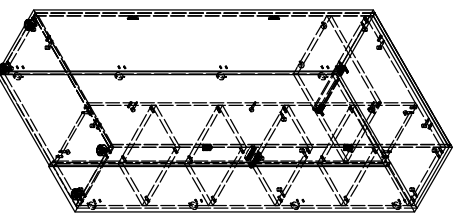

BPE096

Tylaus uždarymo lankstas









Петля бесшумного закрывания

Soft closing hinge




www.weberbuero.de

2015.09.21


- 1 x12 
- 2 x8  H=1.6mm
- 3 x12  H=1.3.5mm
- 4 x12 
- 5 x20 
- 6 x4 
- 7 x18 
- 8 x4 

Reikalingi įrankiai:
Инструменты для сборки:

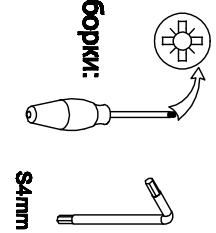


M60EP002
Surinkimo schema
Схема сборки
Assembling scheme

1

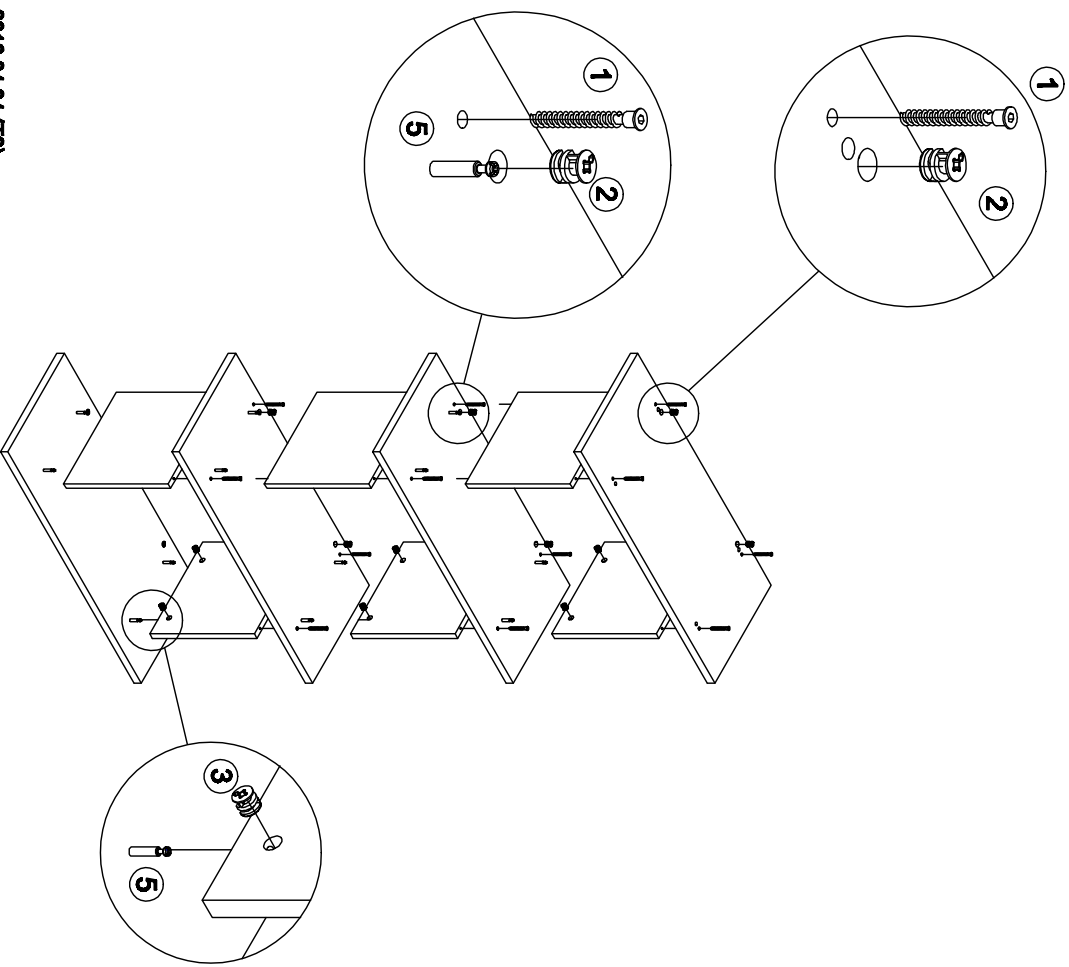

2

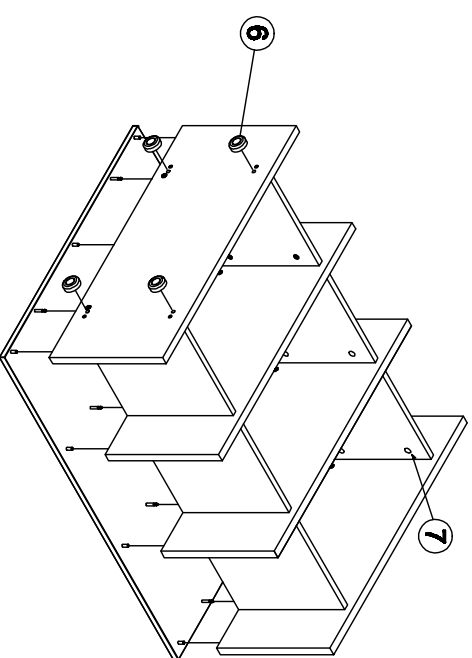

3

