



M60EC102

EN Assembling scheme
 DE Montageschema
 FR Schéma d'assemblage

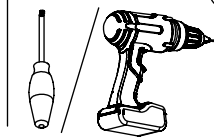


1

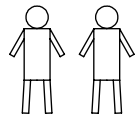

15/18
M42B0001

x12

2



5/11x34
M42B0022

x12


3



∅8x30
M42H0001

x12

4



∅4/18
M45A3010

x12


5



∅10/13
M45A2031

x5


6



4.5x45
M42A0110

x2


7



∅20x12.5
M42B0049

*


8




∅5x8
M42B0050

*


a - x1

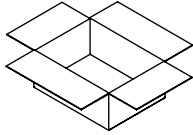


b - x1
c - x2
d - x1

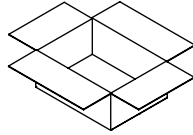


e - x*
f - x1

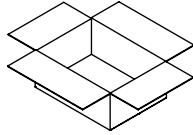


C2N081

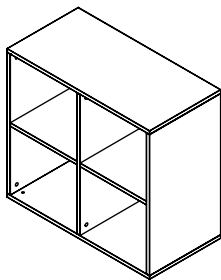


C2N100

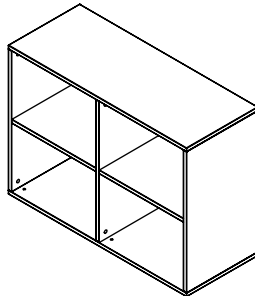


C3N081

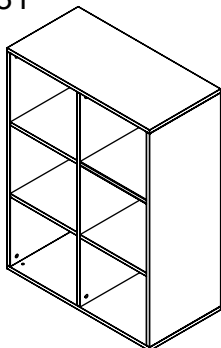


C3N100

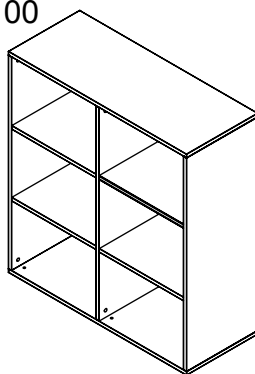


C4N100

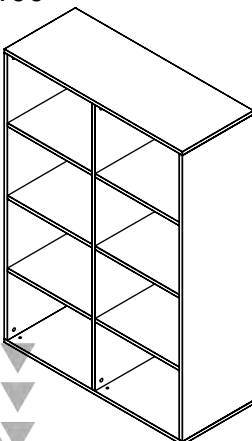

C5N100

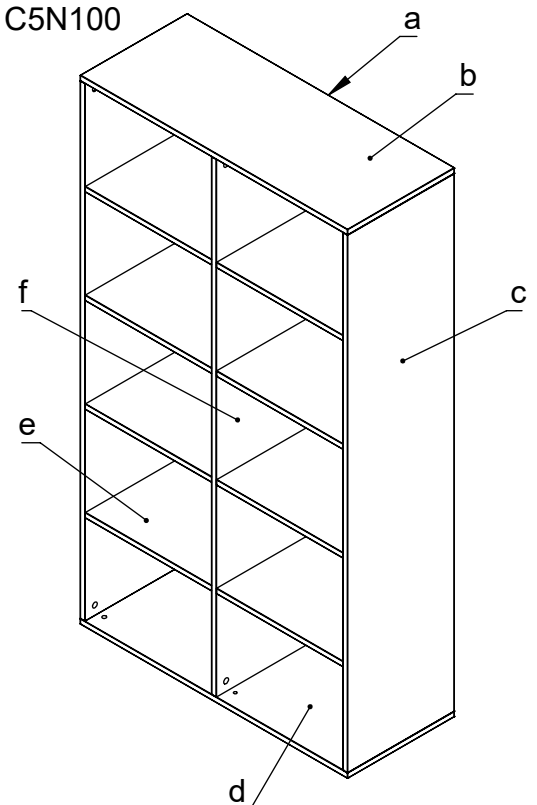


1


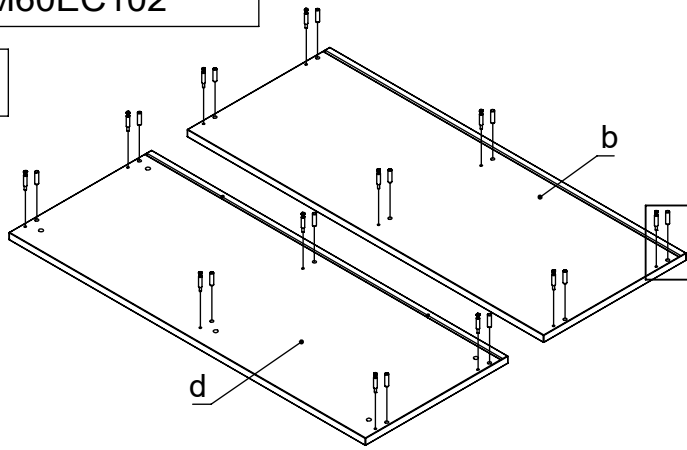


2




3

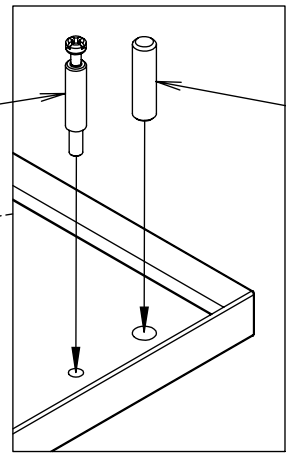


2

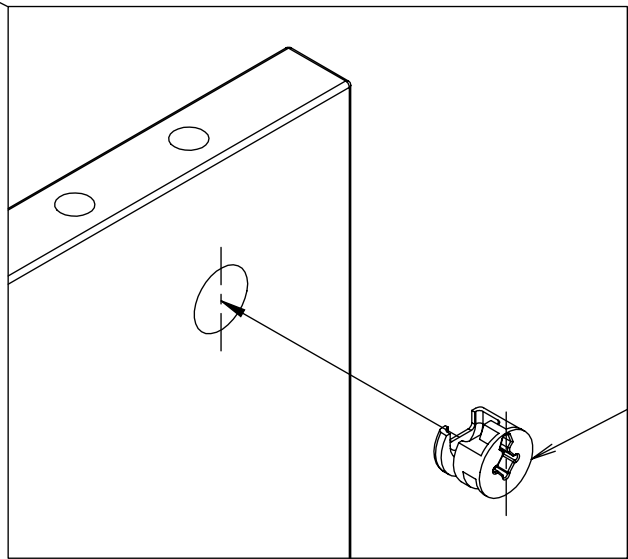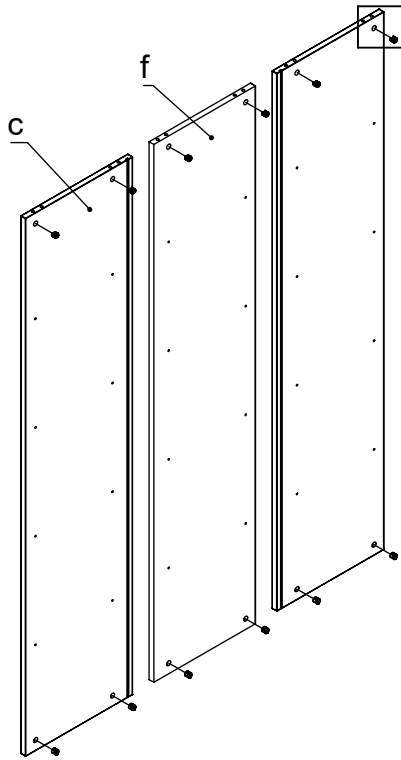


3

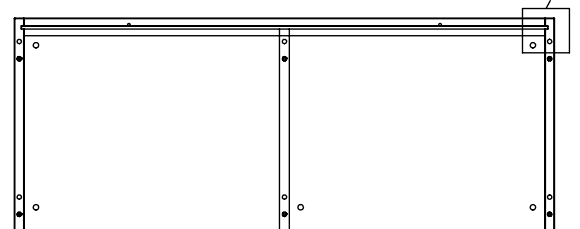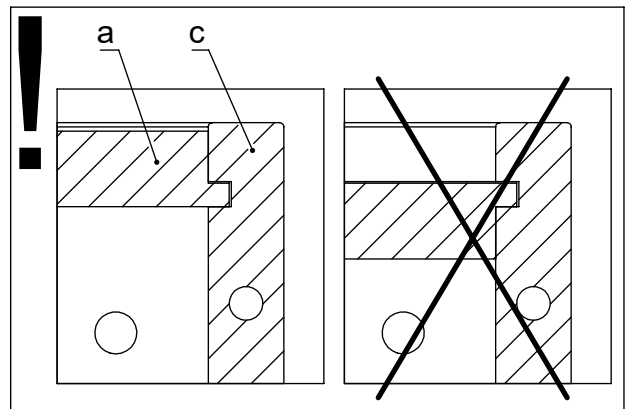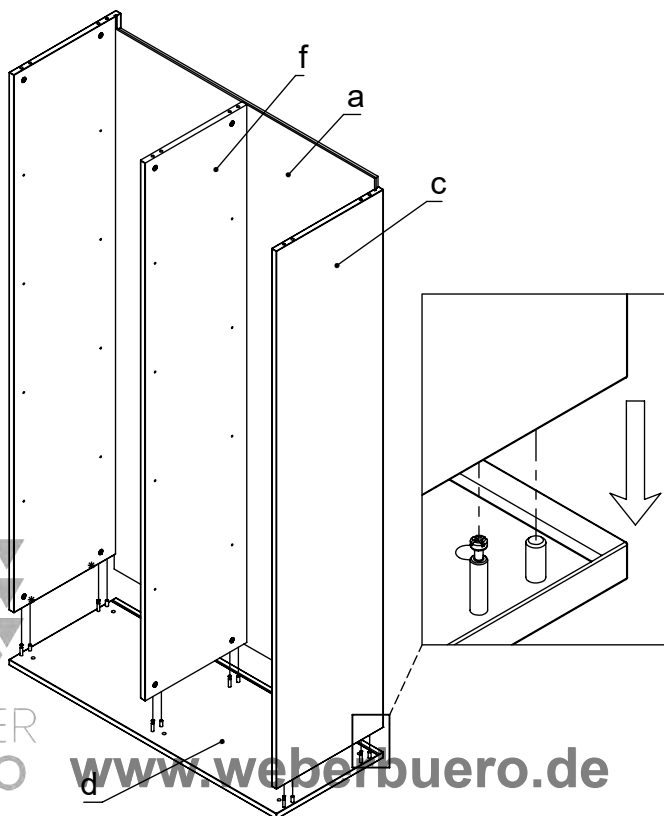




4

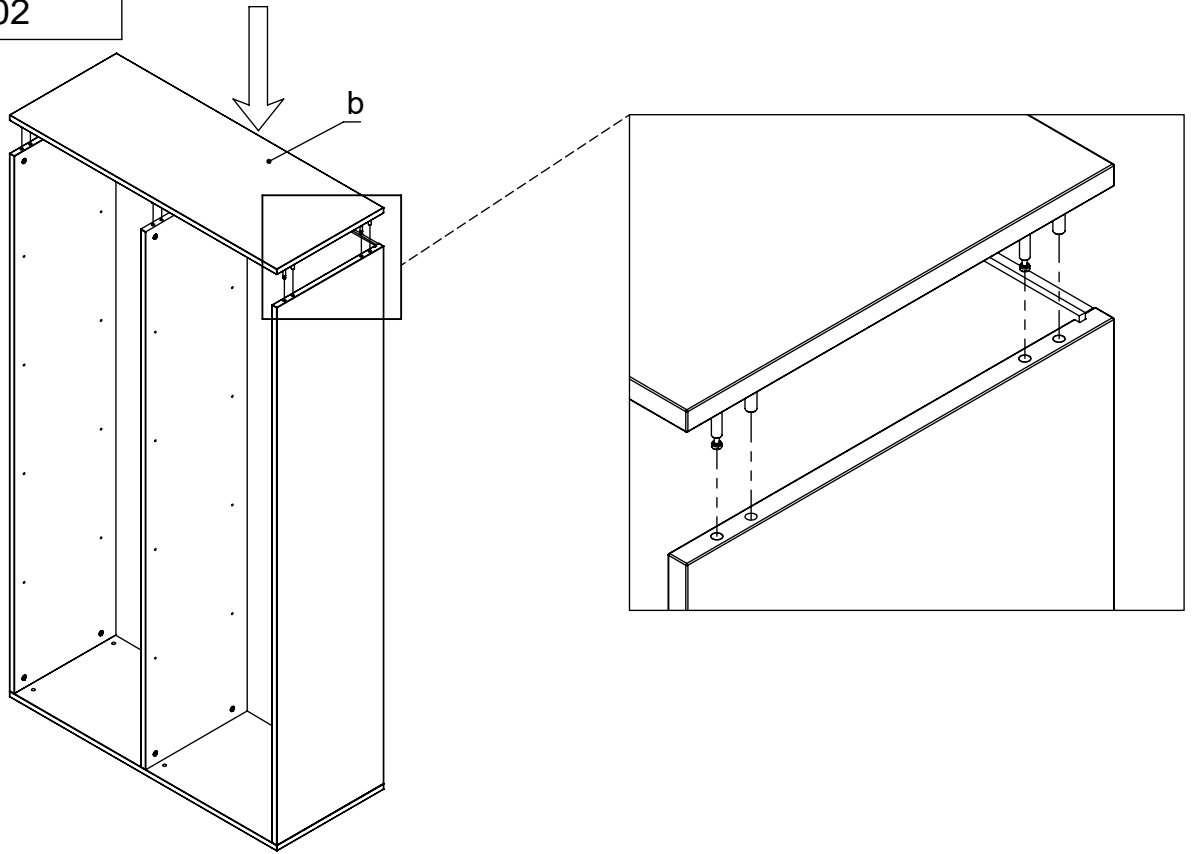



5

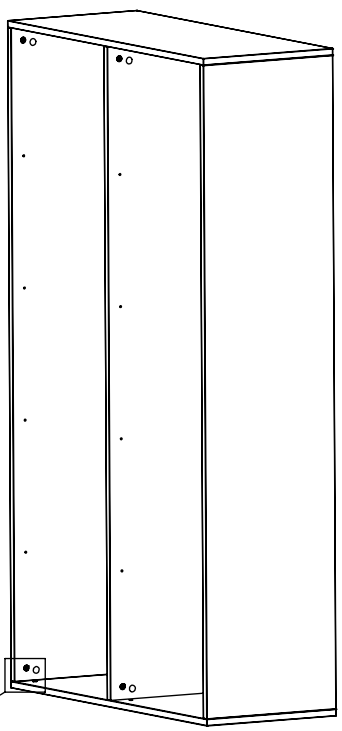

6

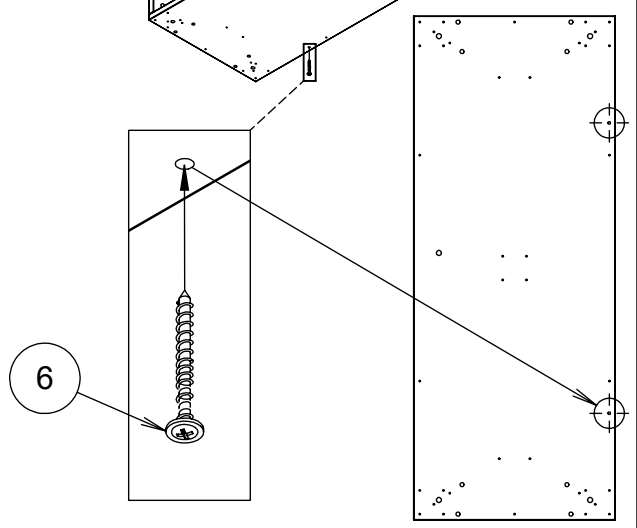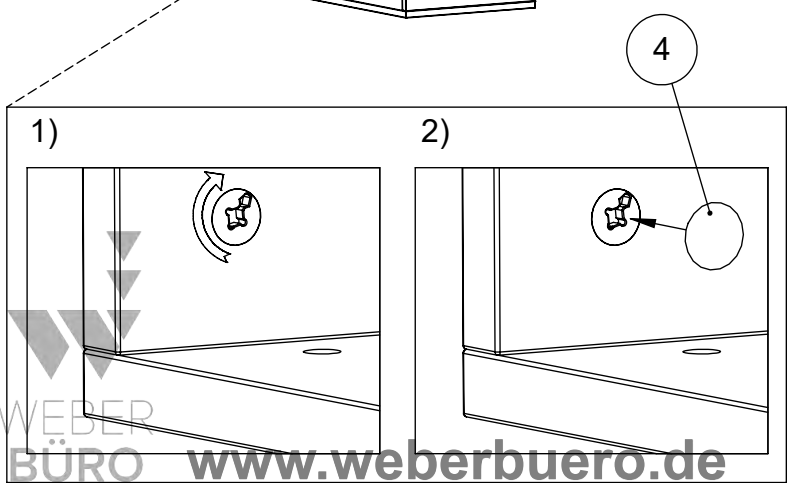
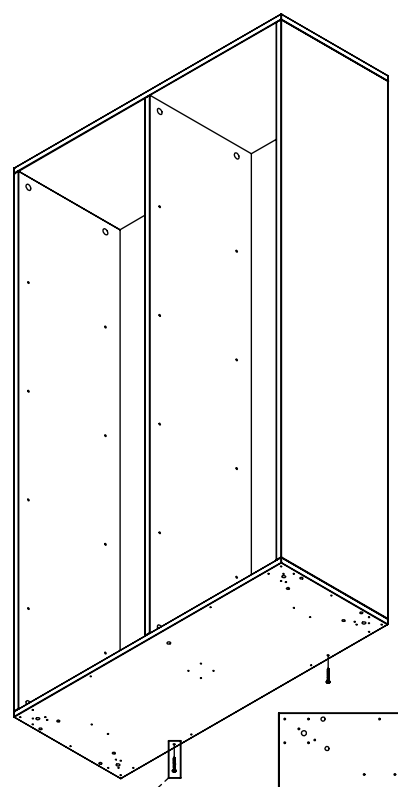


7

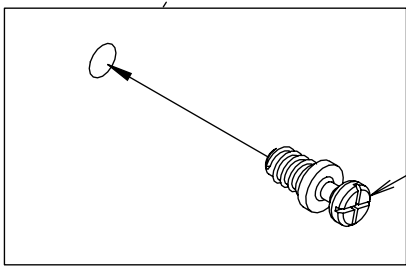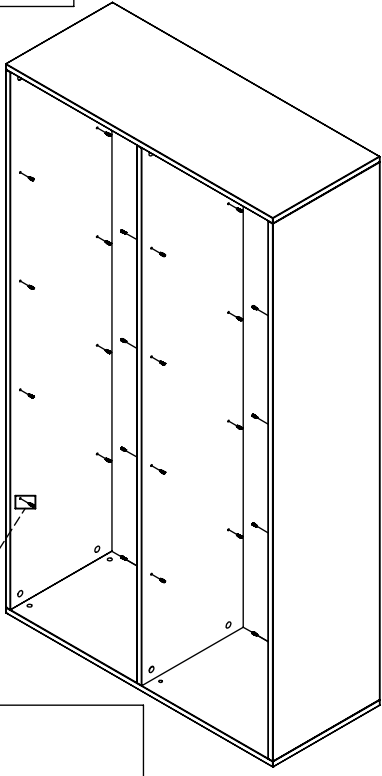


8




8

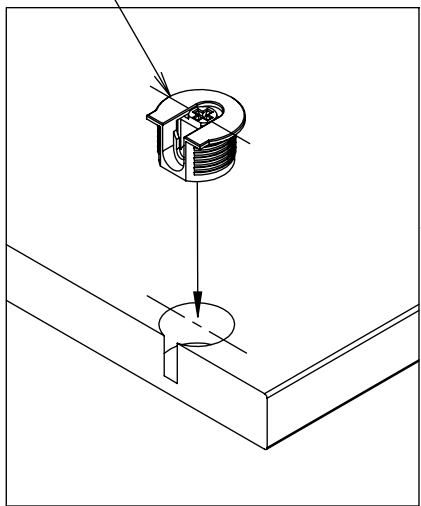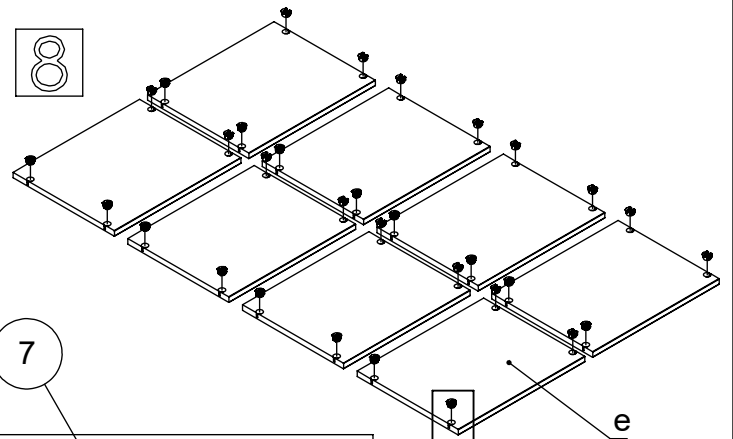

7

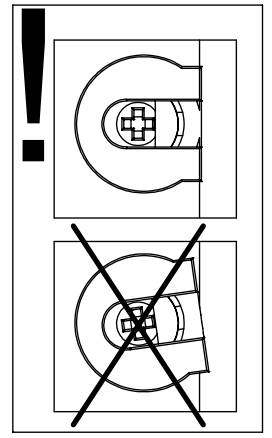

9

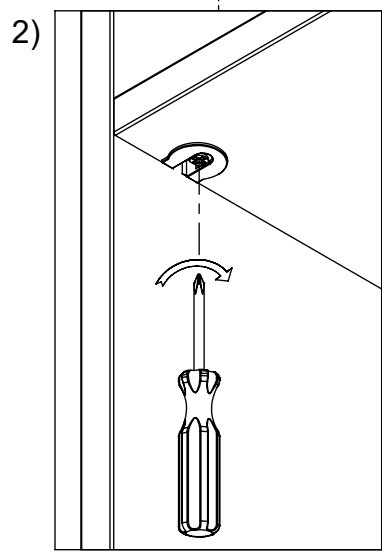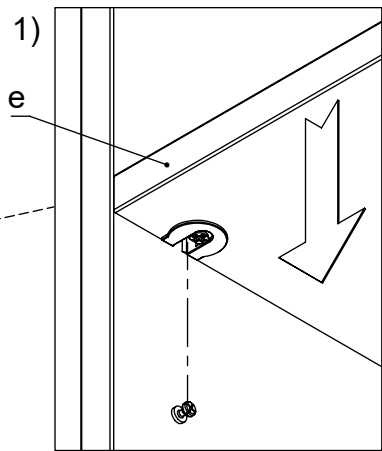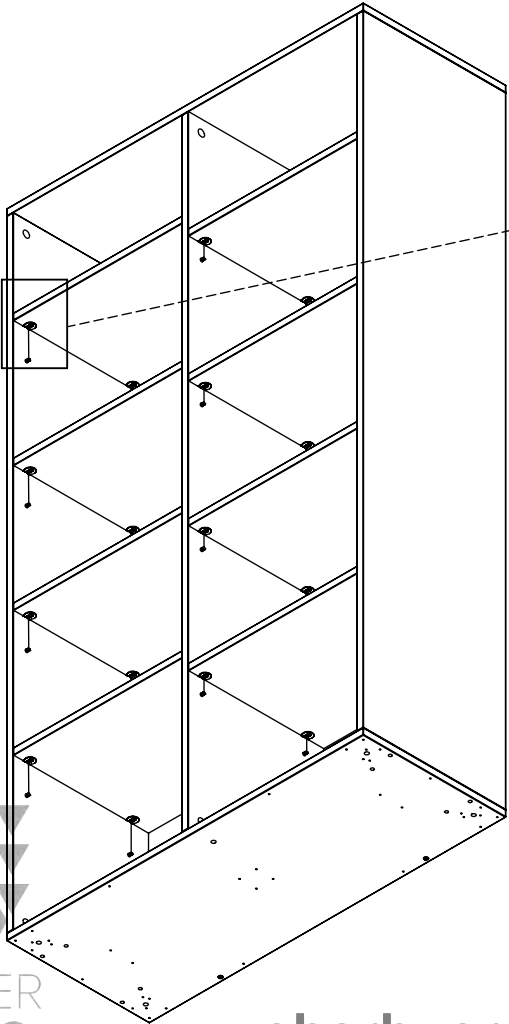


M60EC108 1 / 1

Reikalingi įrankiai:



1



2













3



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

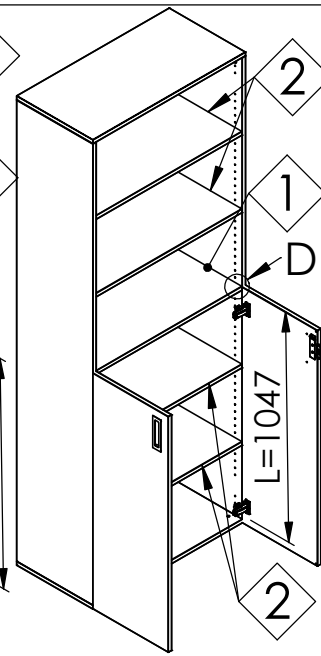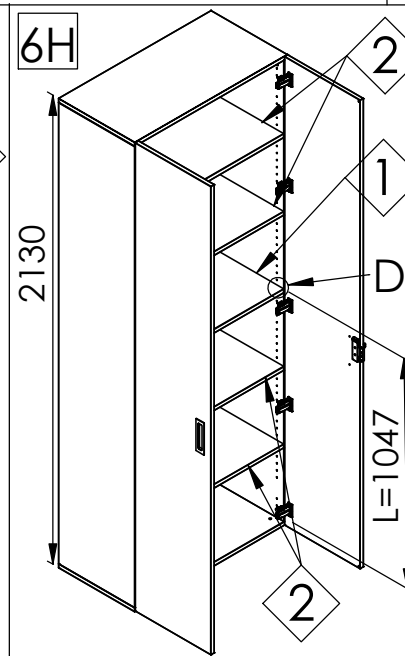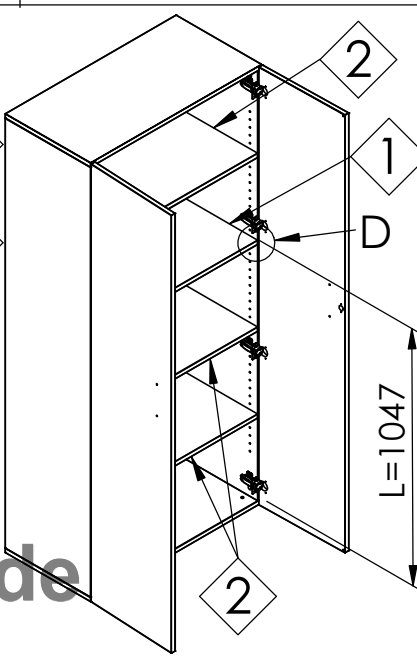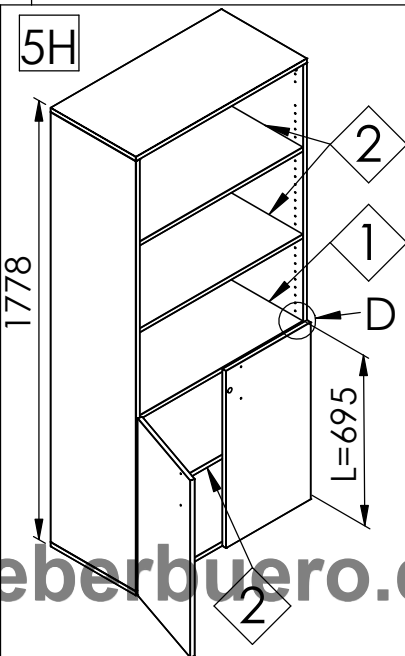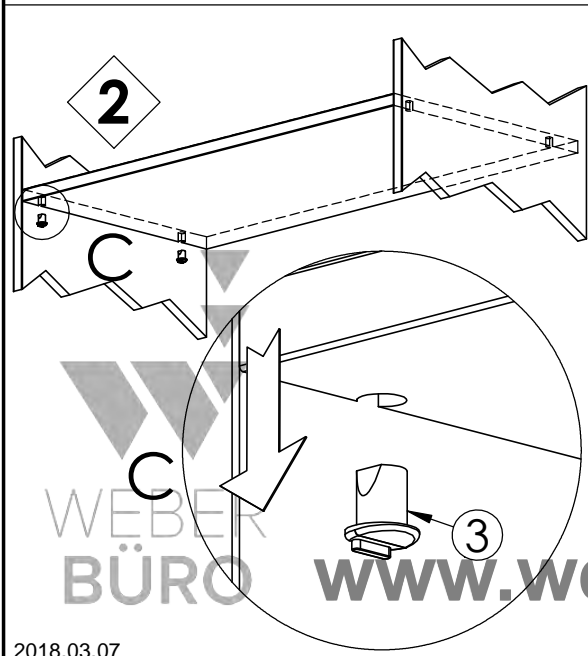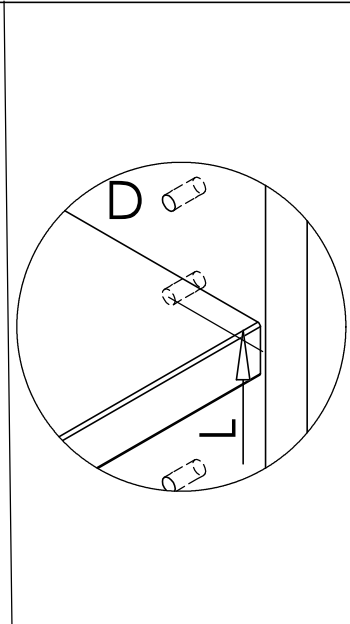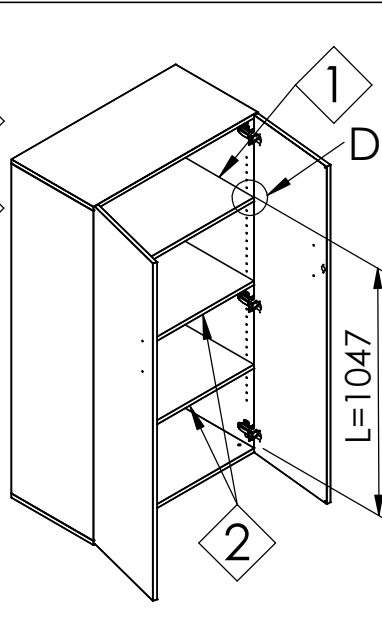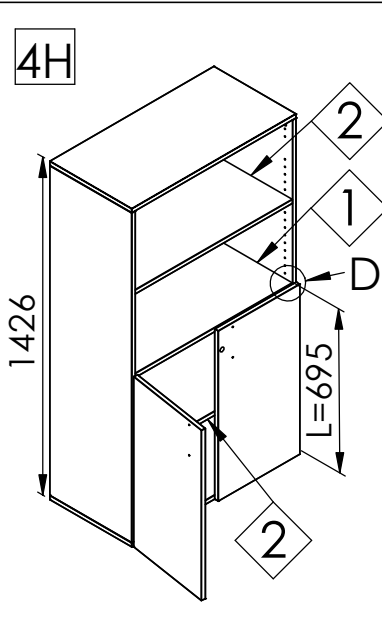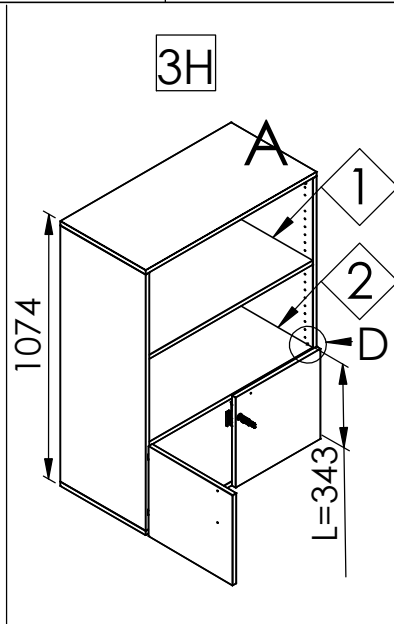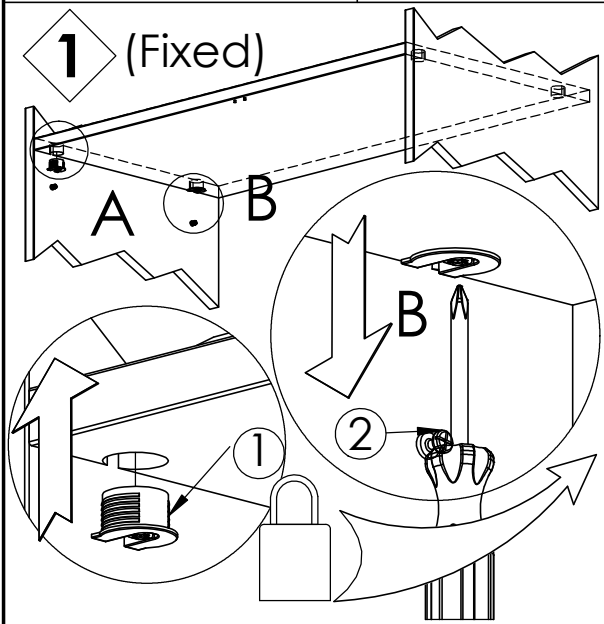

WEBER
BÜRO

www.weberbuero.de


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

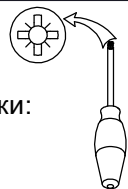


1




2



3

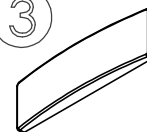


4

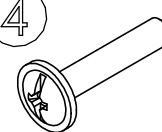


Surinkimo schema
Схема сборки
Assembling scheme


1

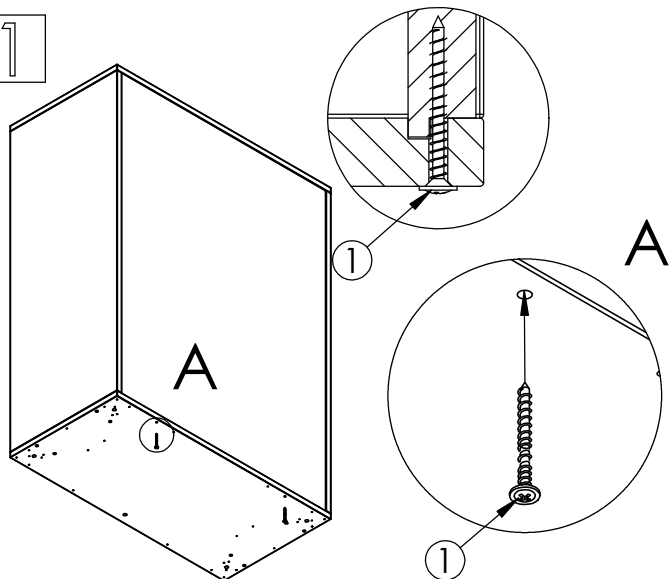


Attention! COZ053

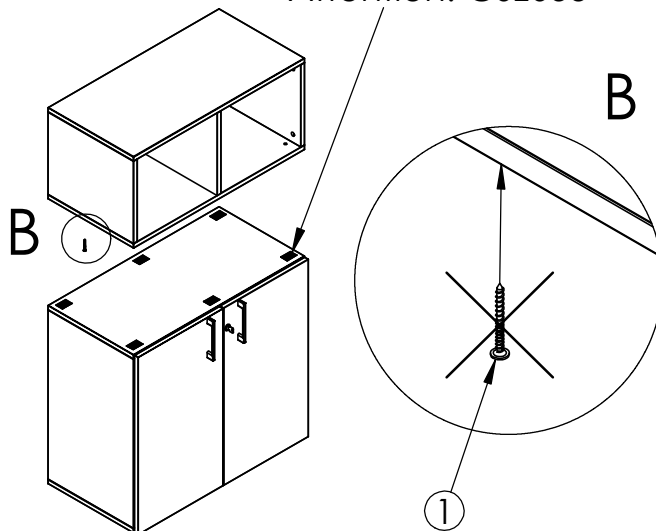


2

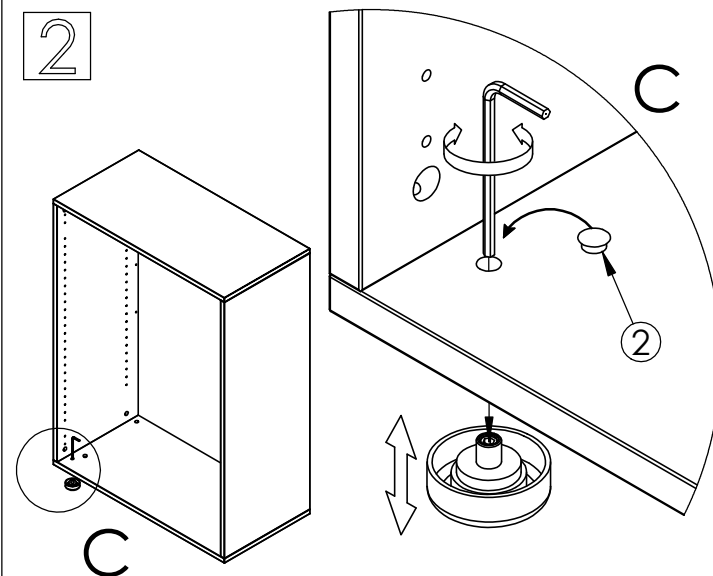

3

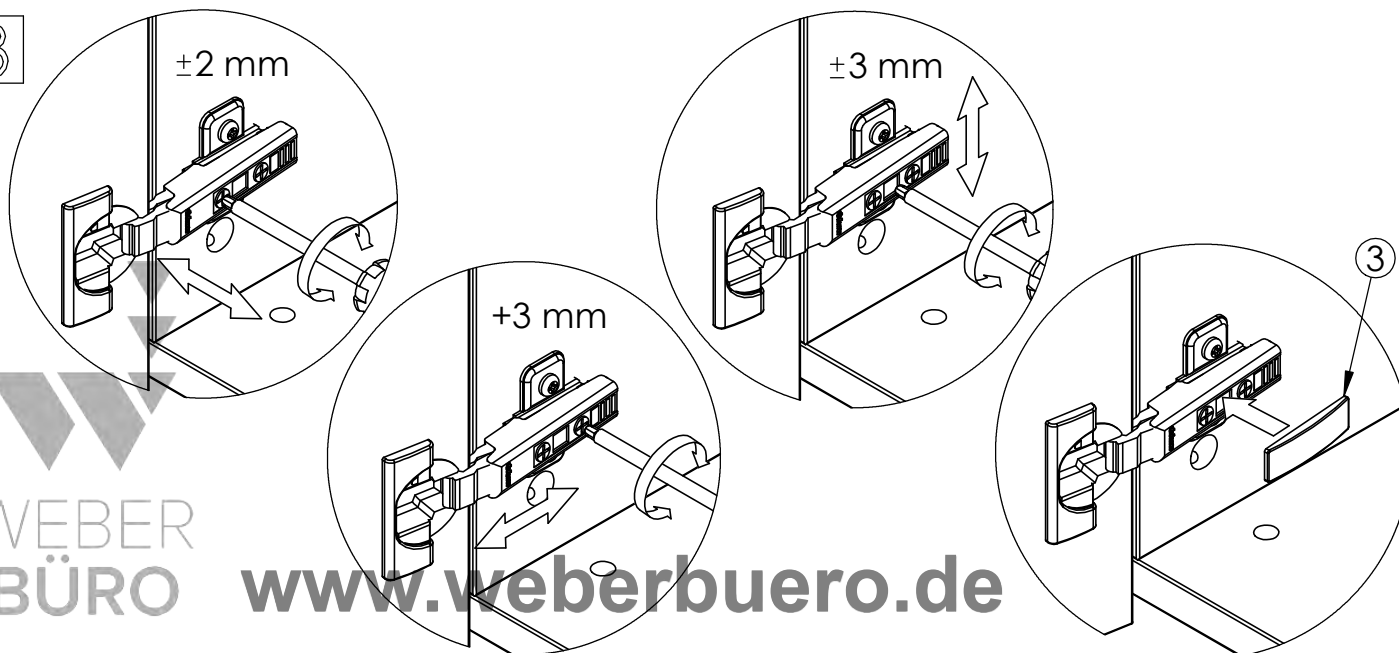

4

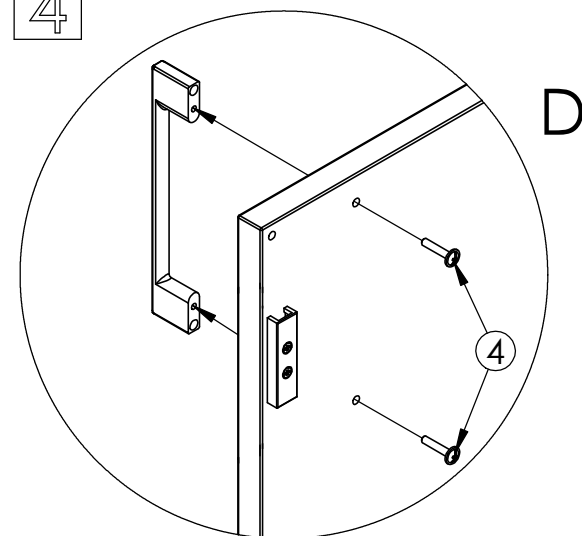

WEBER
BÜRO

www.weberbuero.de