



M60EC101											
EN	Assembling scheme					15/18 M42B0001	x8	5/11x34 M42B0022	x8	∅ 8x30 M42H0001	x8
DE	Montageschema										
FR	Schéma d'assemblage										

a - x2	b - x1	d - x*
c - x1		
e - x1		


∅ 4/18 M45A3010	x8	∅ 10/13 M45A2031	x4	4.5x45 M42A0110	x2
		∅ 20x12.5 M42B0049	*		
				∅ 5x11 M42B0067	*

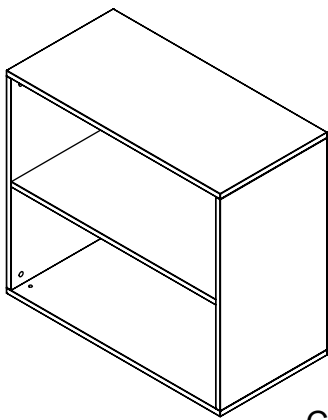


C2N080

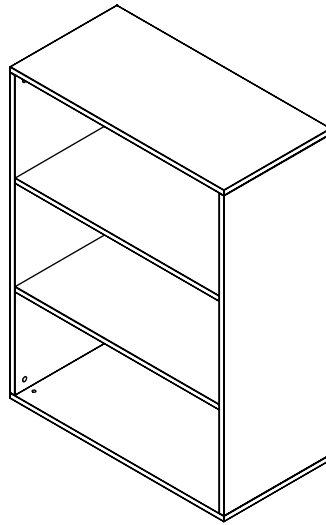

C3N080

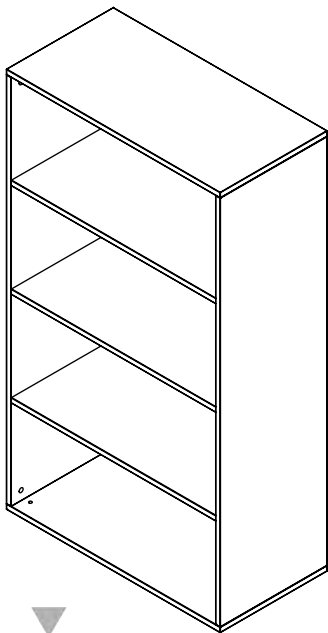


C4N080

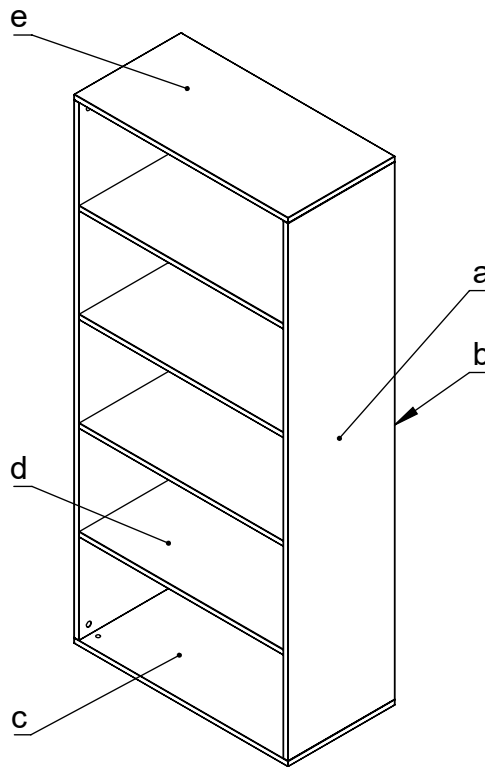


C5N080


1

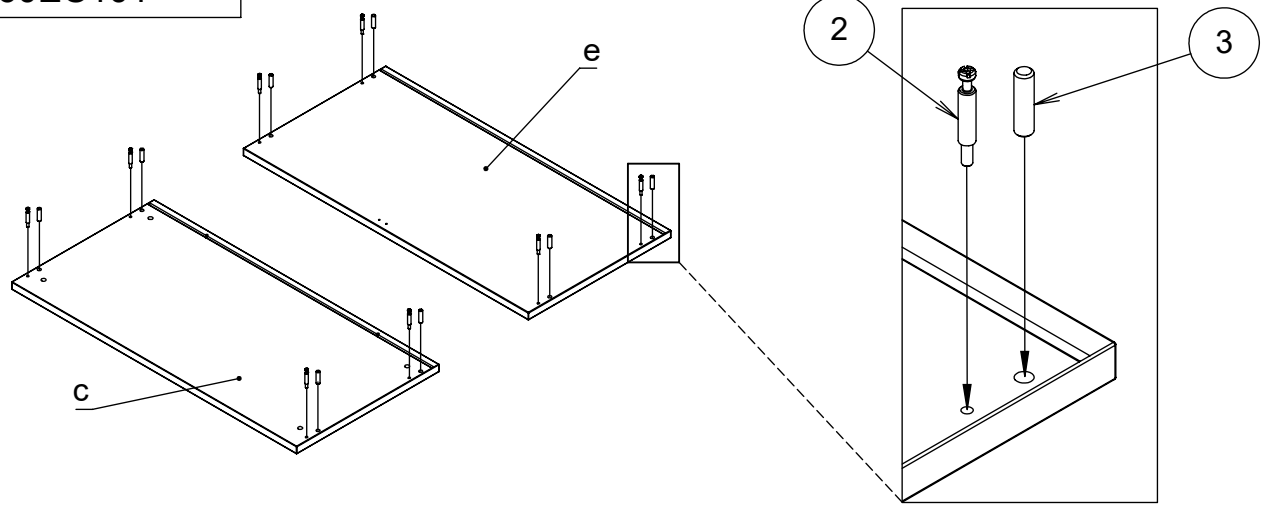


2

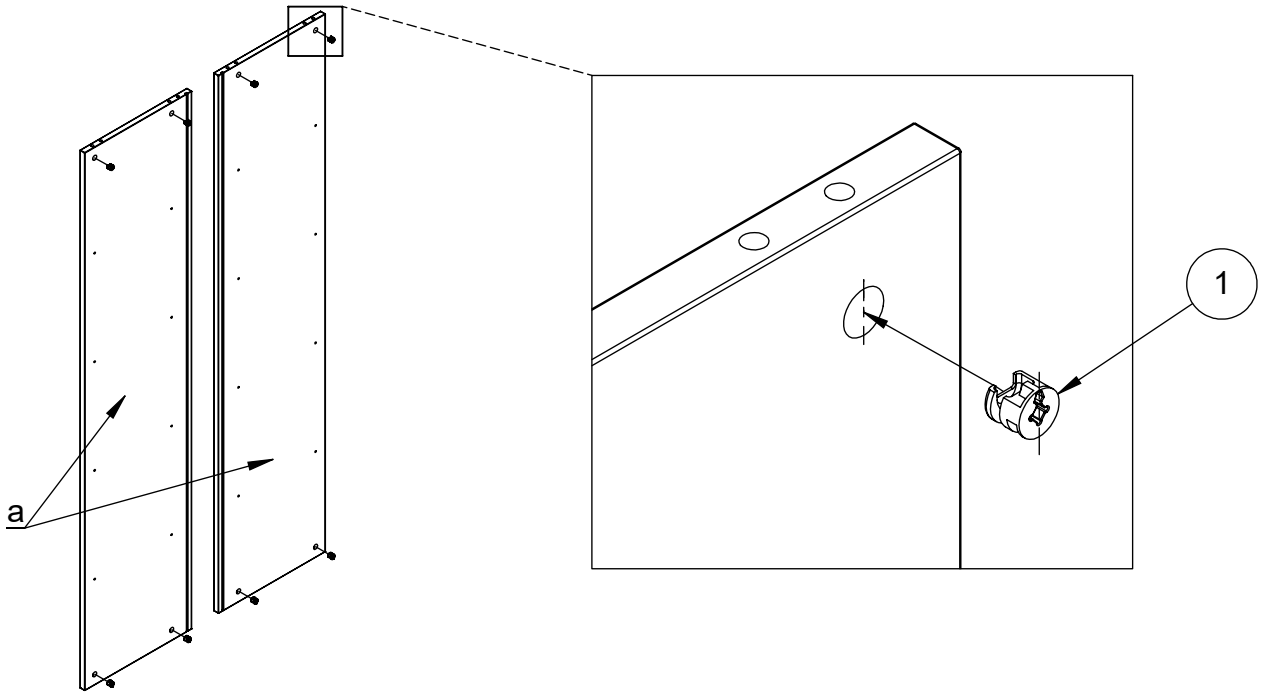


3

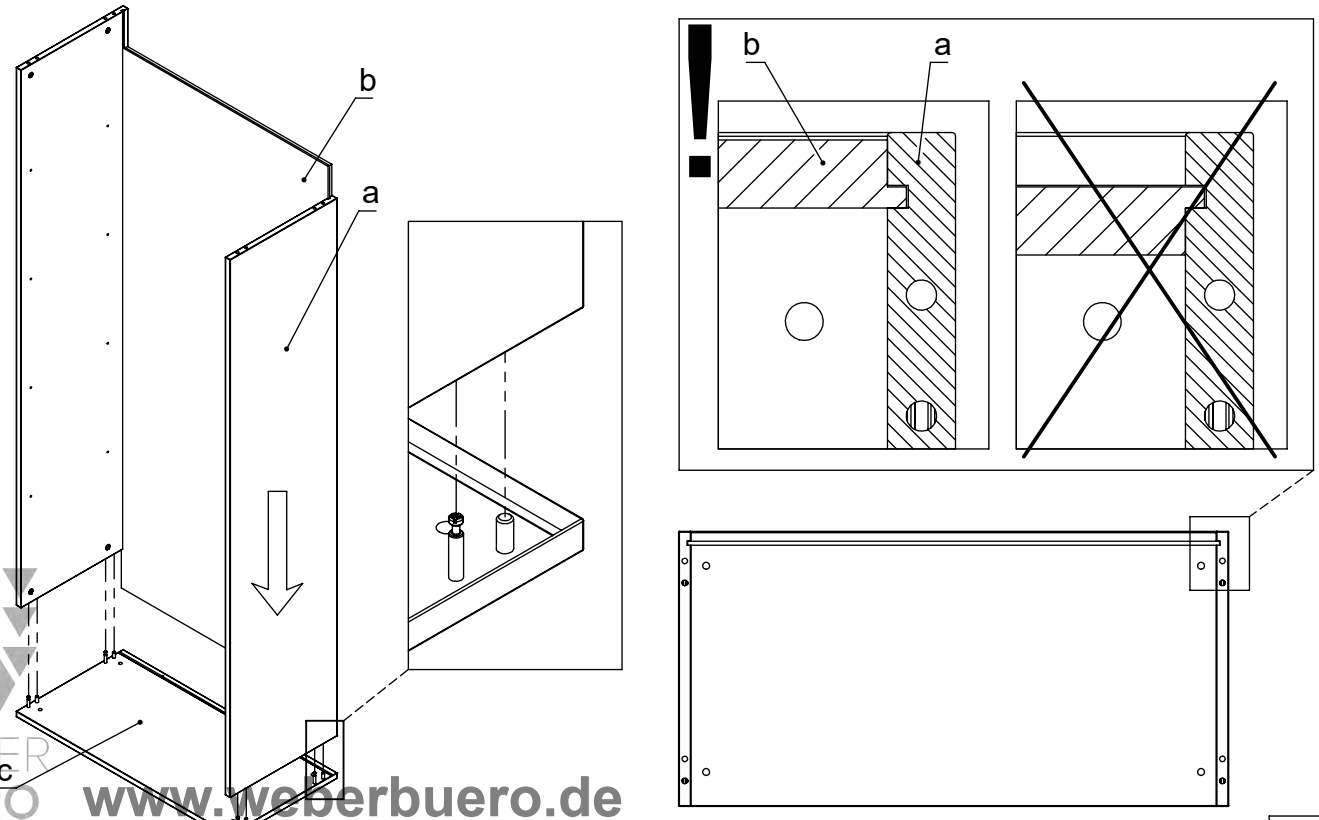




4

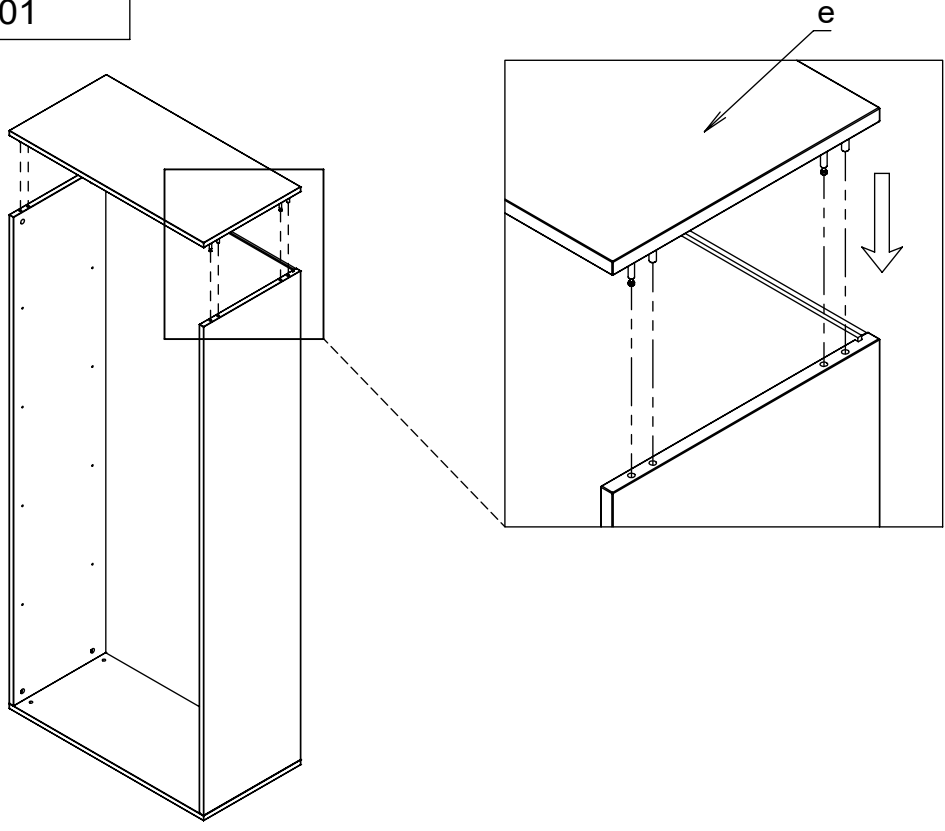


5

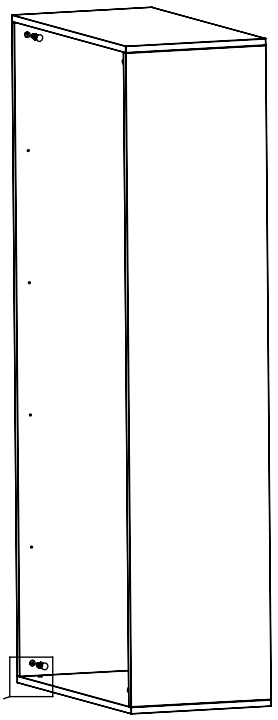


6

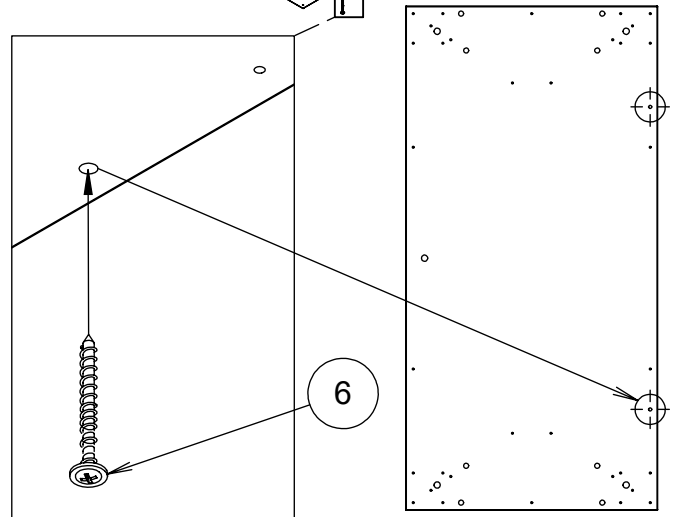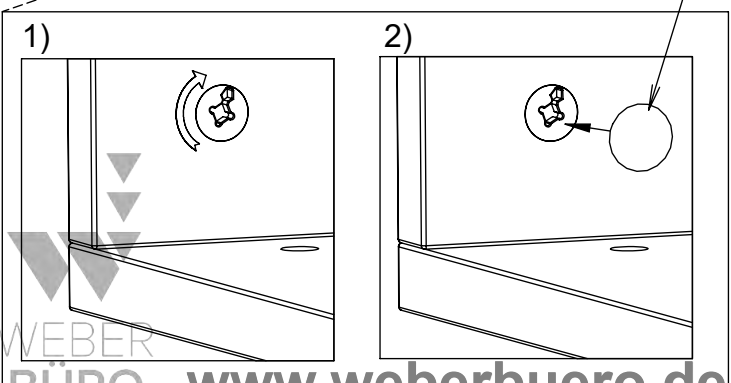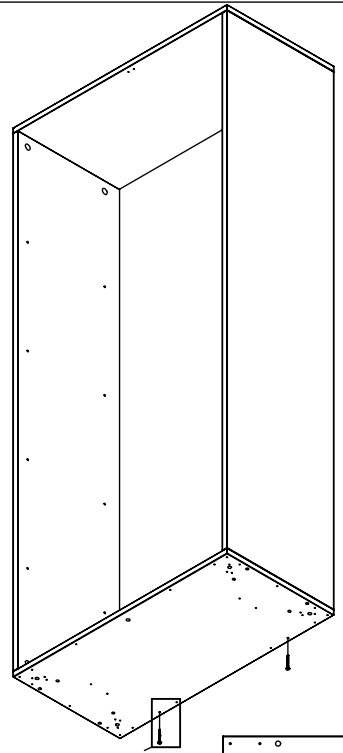


7

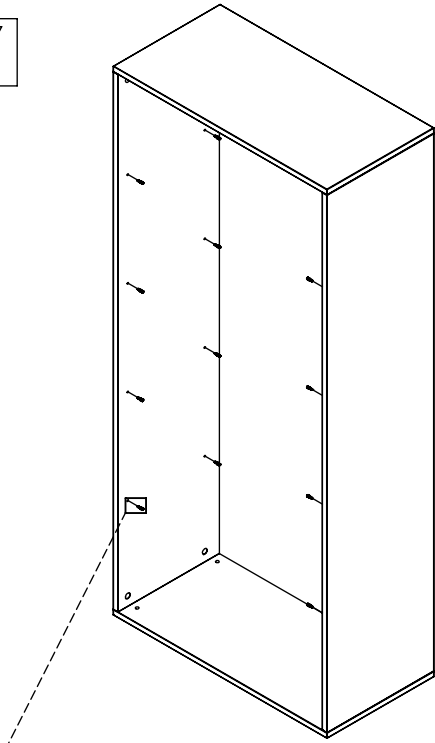



8

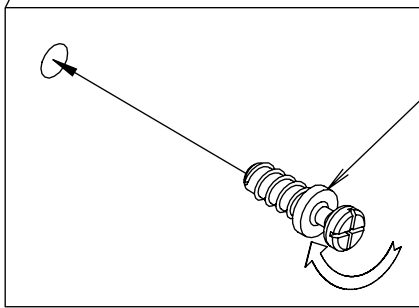


8

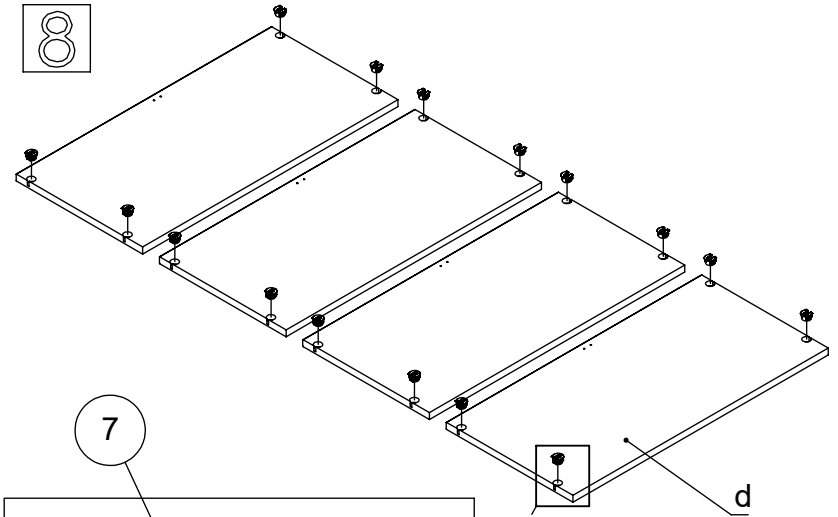


7

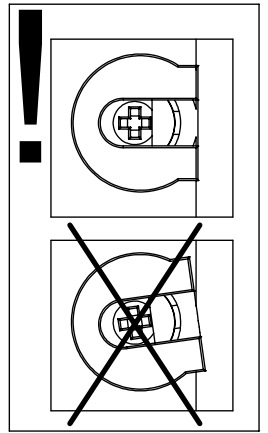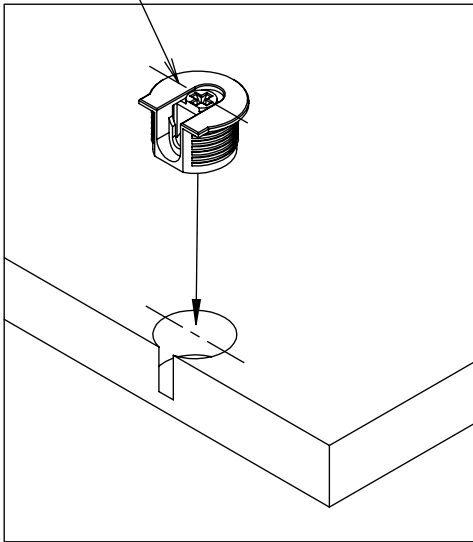


9

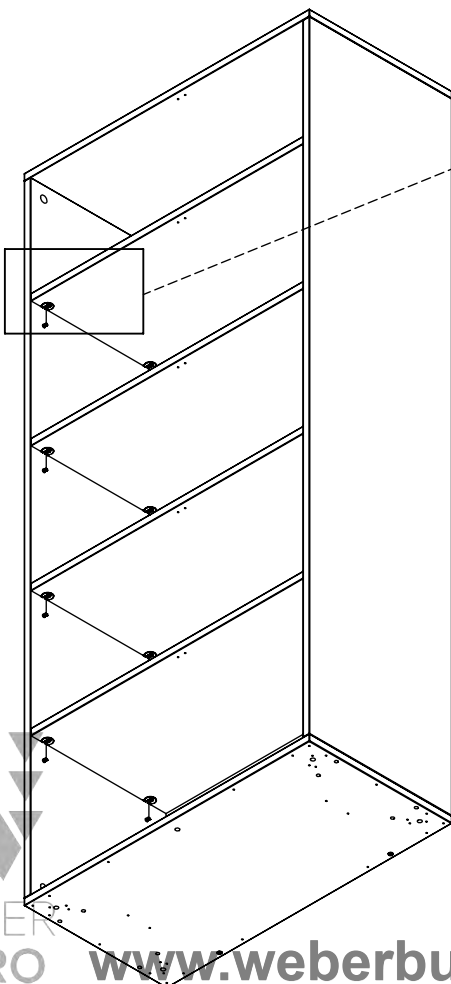

1)

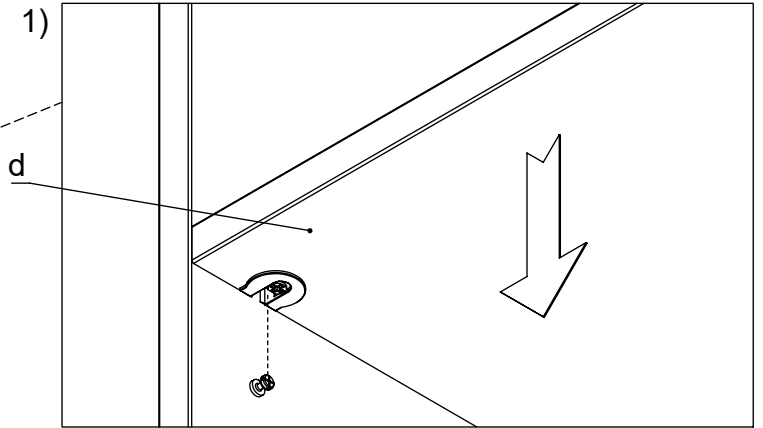

2)

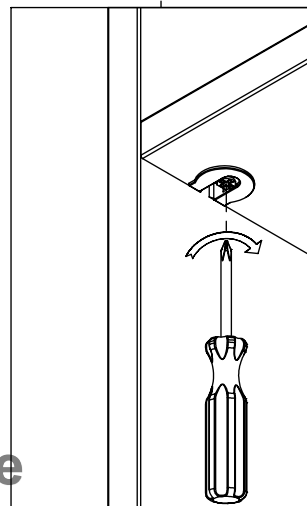

M60EC108 1 / 1

Reikalingi įrankiai:




①



②













③



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

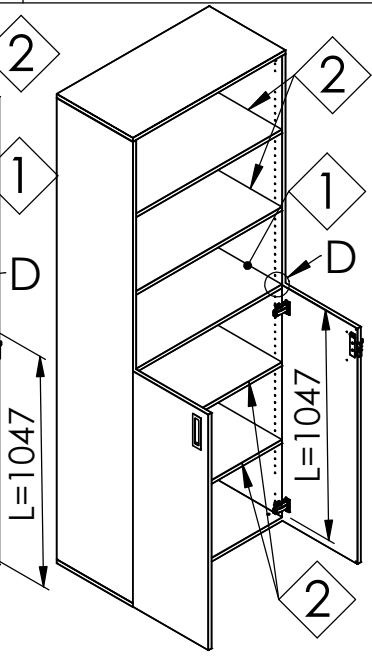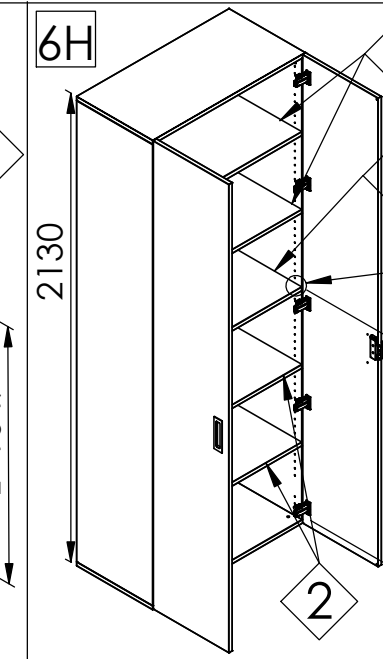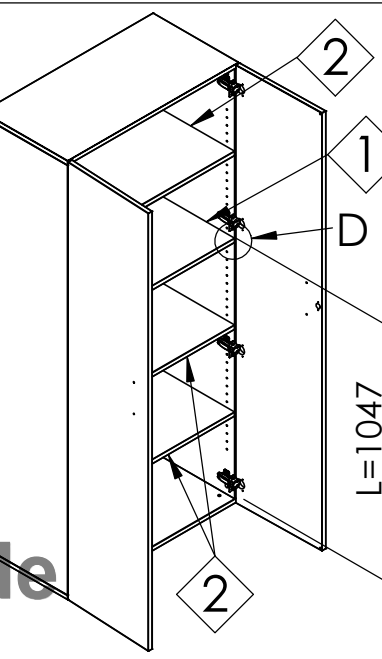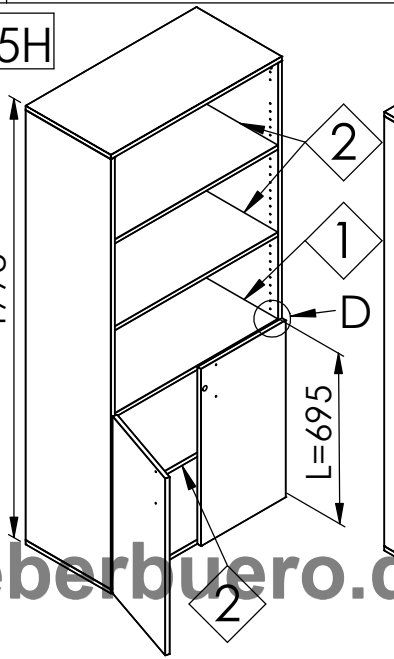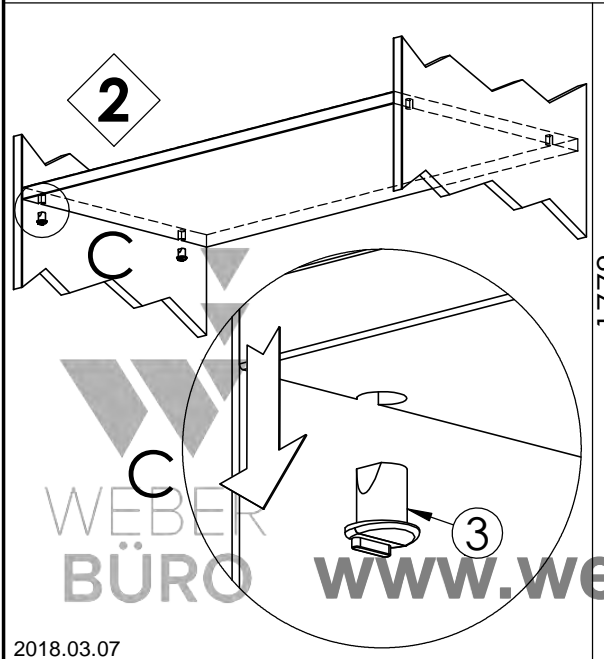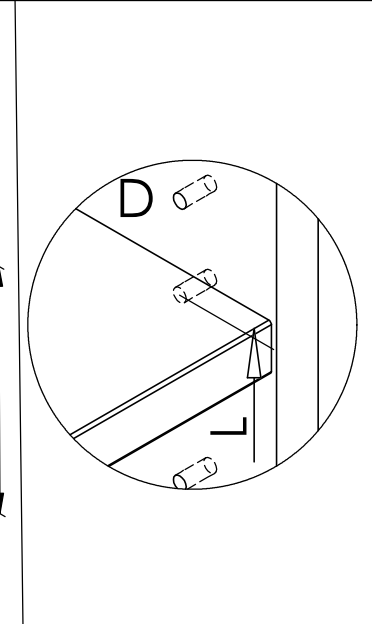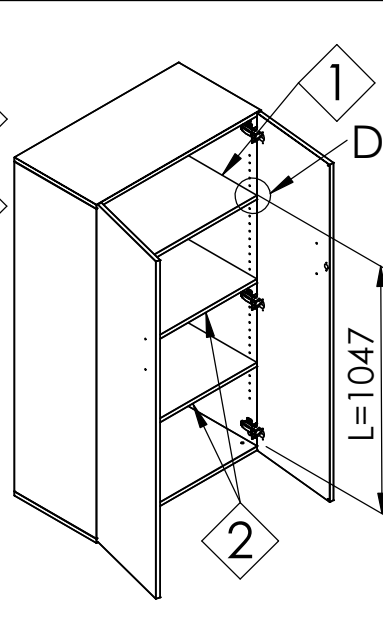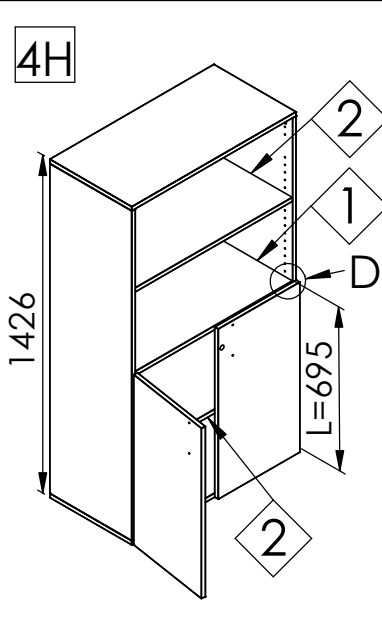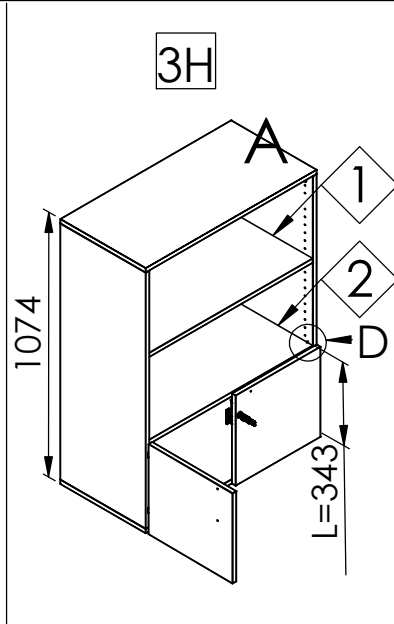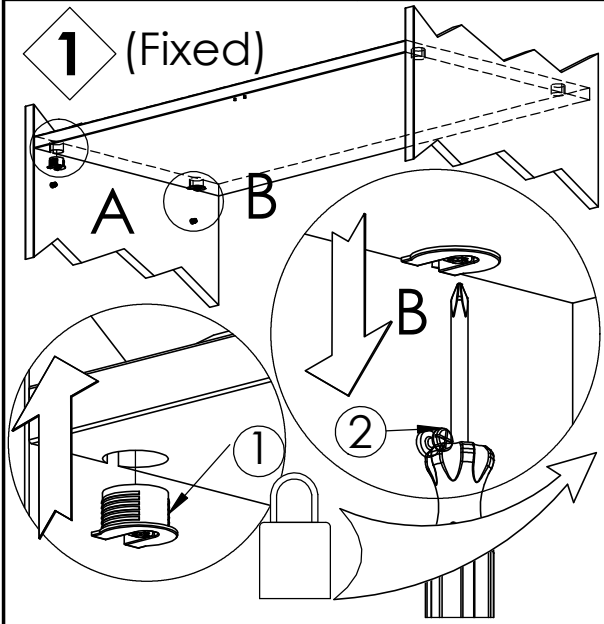


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

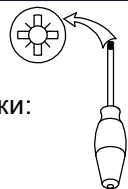


1




2



3

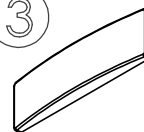


4

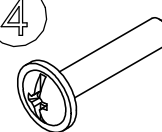


Surinkimo schema
Схема сборки
Assembling scheme


1

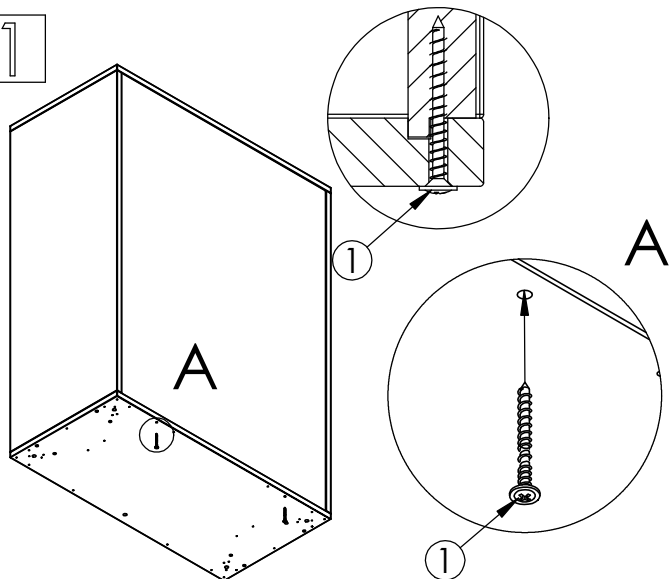


Attention! COZ053

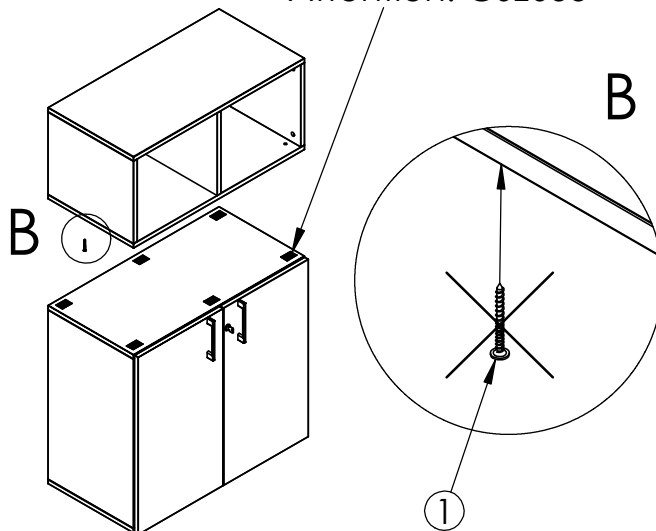


2

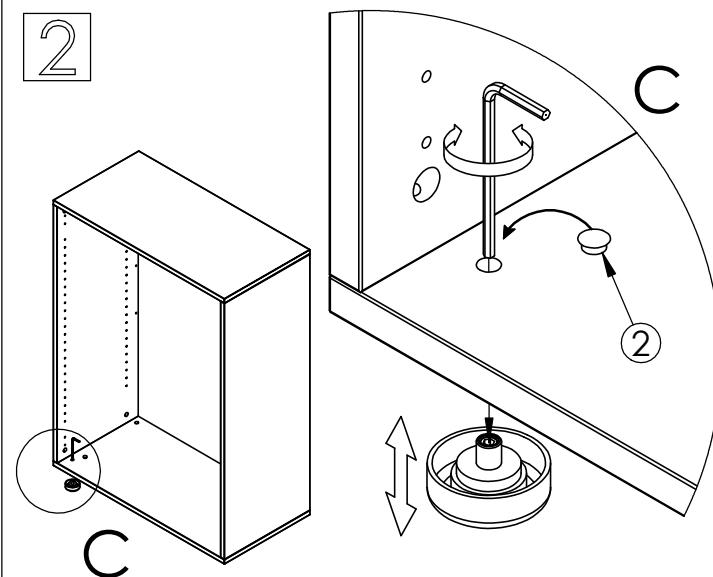

3

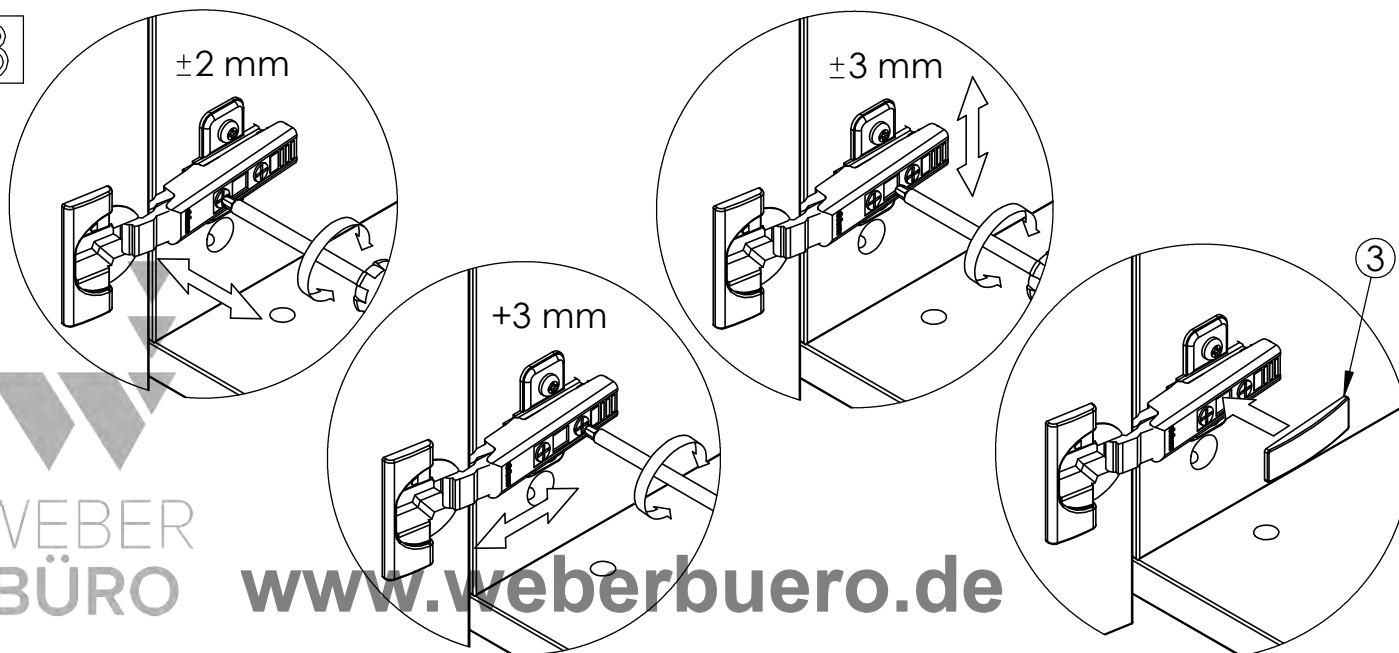

4

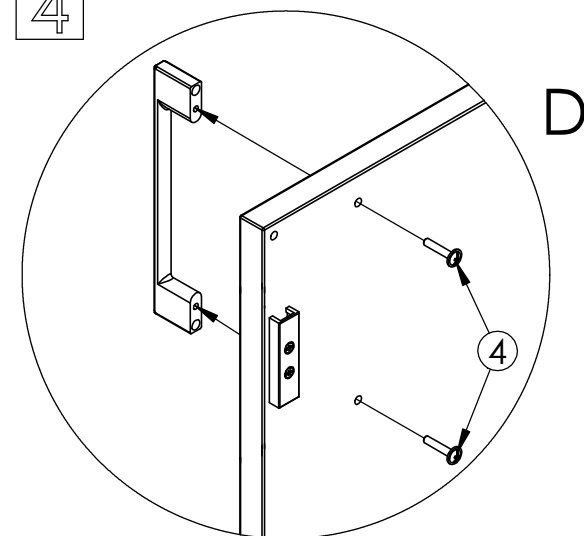

WEBER
BÜRO

www.weberbuero.de