



M60EC104									
EN	Assembling scheme		15/18 M42B0001	x12	5/11x34 M42B0022	x12	∅8x30 M42H0001	x12	
DE	Montageschema								
FR	Schéma d'assemblage								
<p>a - x1</p>		<p>b - x1</p> <p>c - x2</p> <p>d - x1</p> <p>e - x1</p>							
				<p>∅4/18 M45A3010</p>		<p>∅10/13 M45A2031</p>		<p>4.5x45 M42A0110</p>	
				<p>4,0x15 M42A0056</p>		<p>6,3x13 M42C0029</p>		<p>20x17 M42J0027</p>	


C2S080

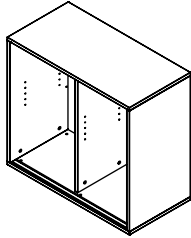


C3S080

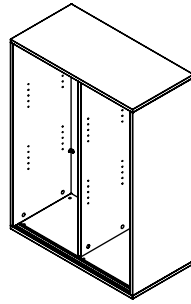


C2S100

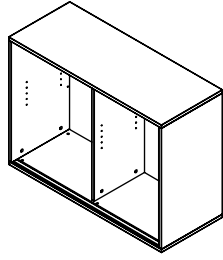


C3S100

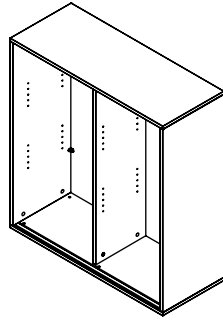


C2S120

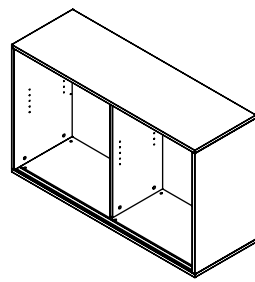



C3S120

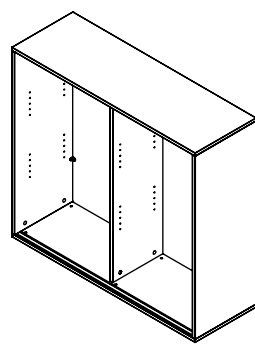

C2S160

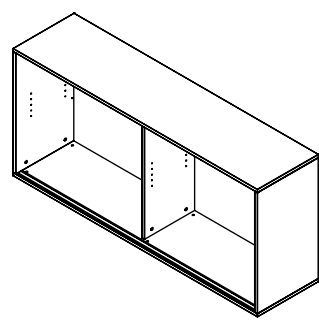


C3S160

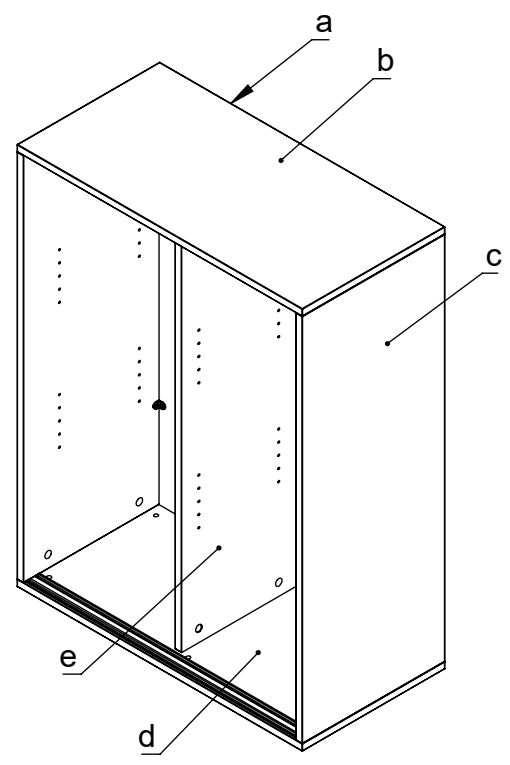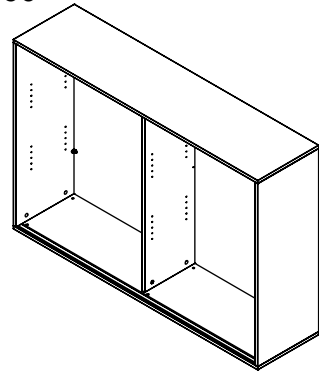


EN	*Configuration depends on order option
DE	*Die Konfiguration hängt davon der Bestelloption ab
FR	*La configuration dépend de l'option de commande



1

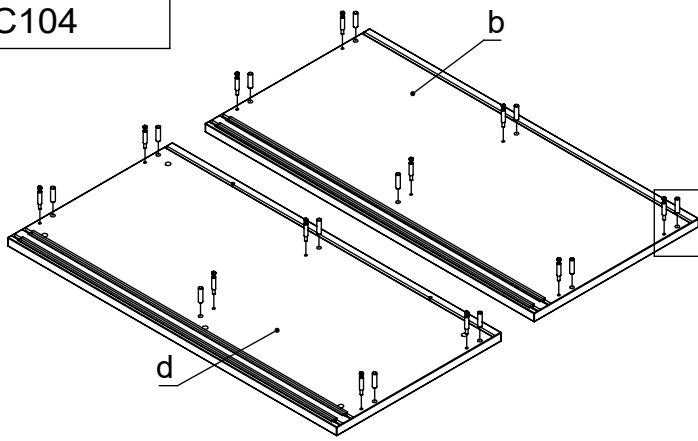


2

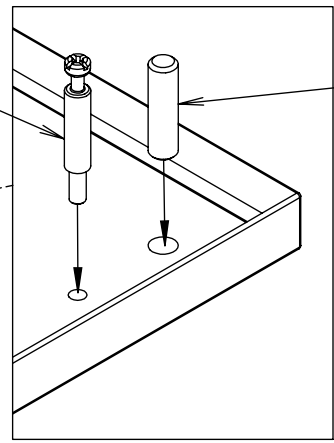


3





2

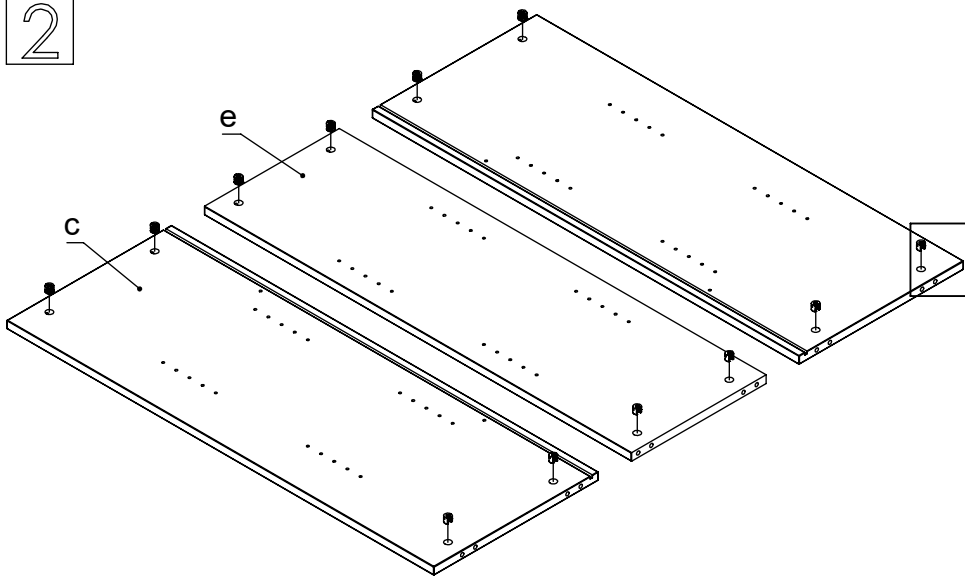


1

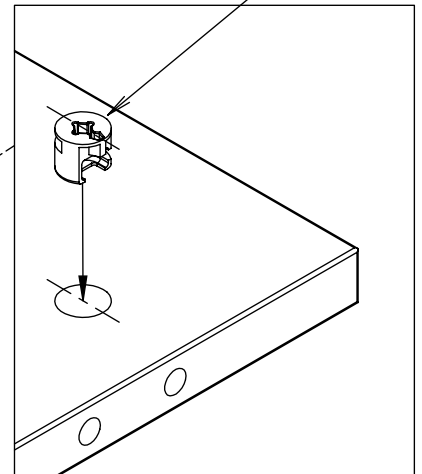


3

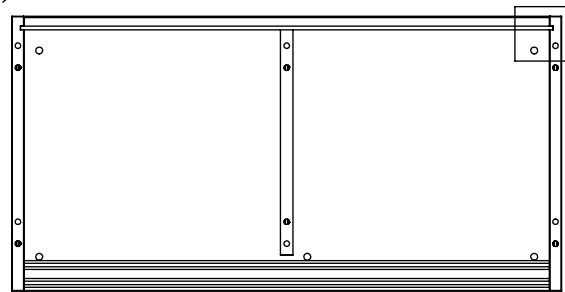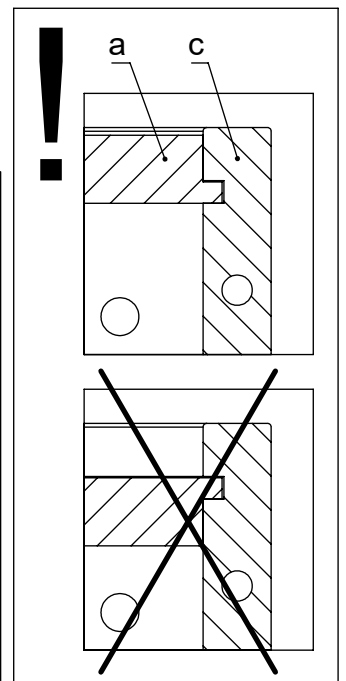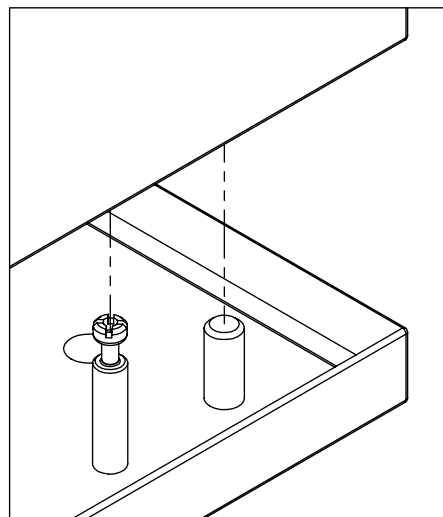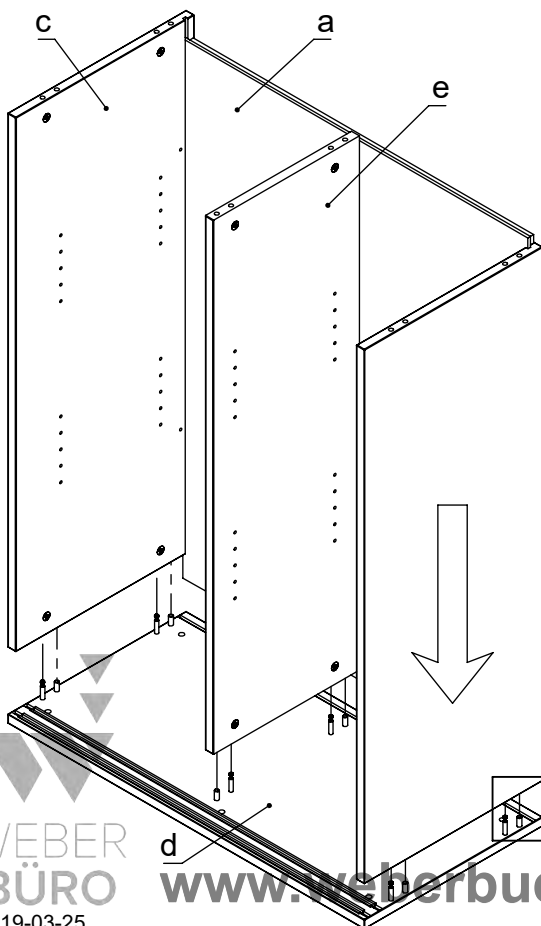




4

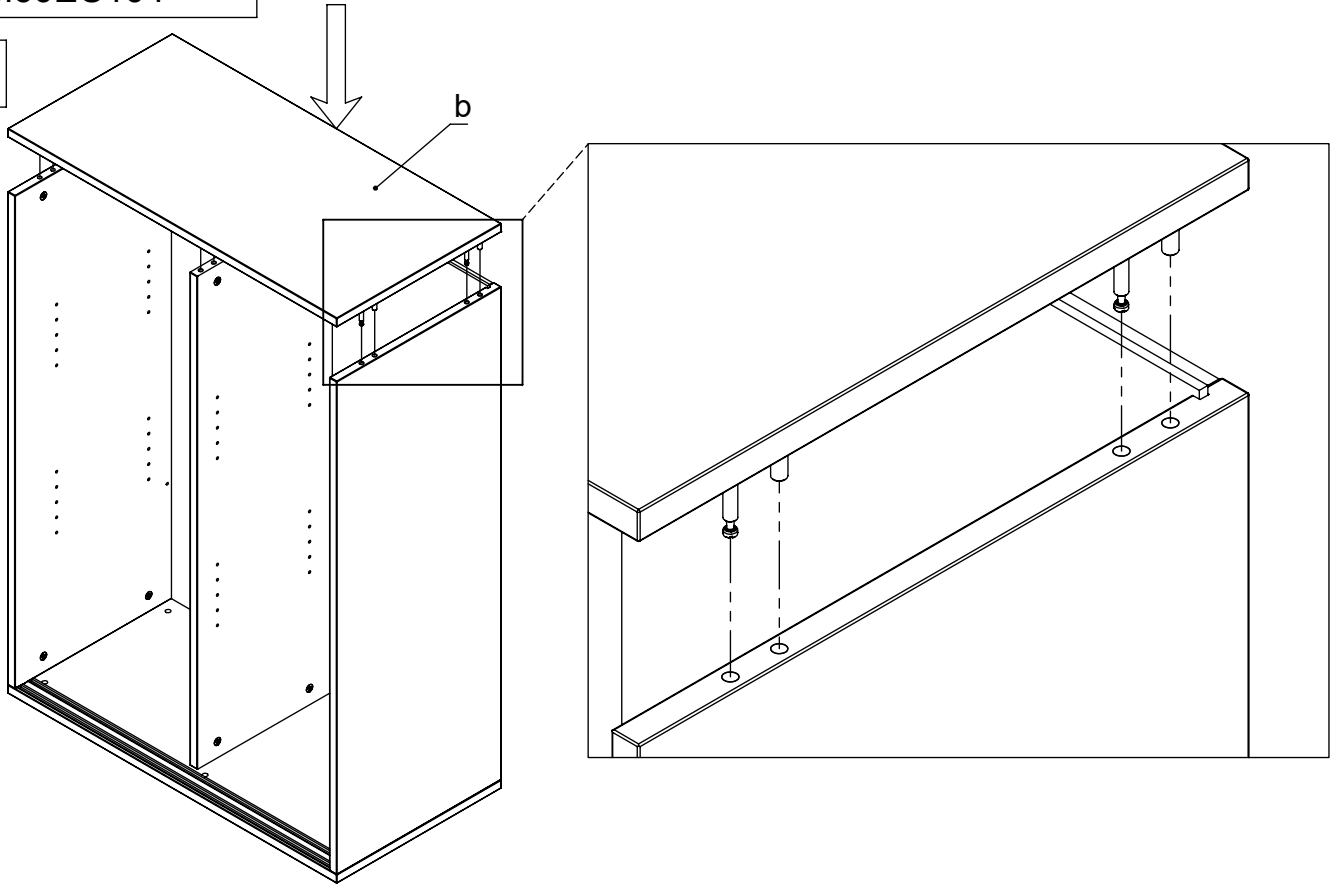


5

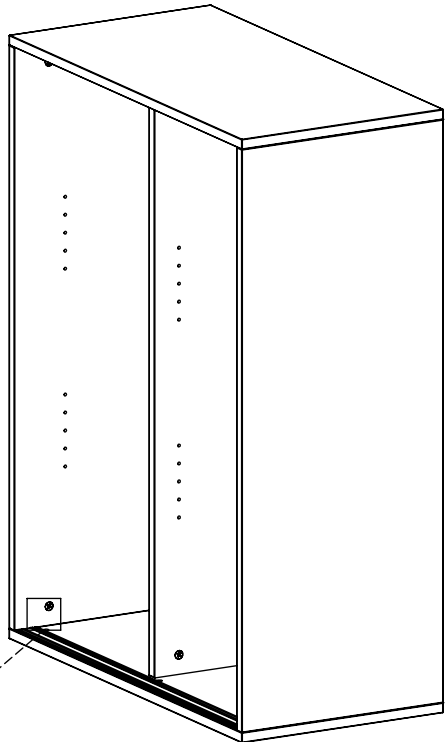


6

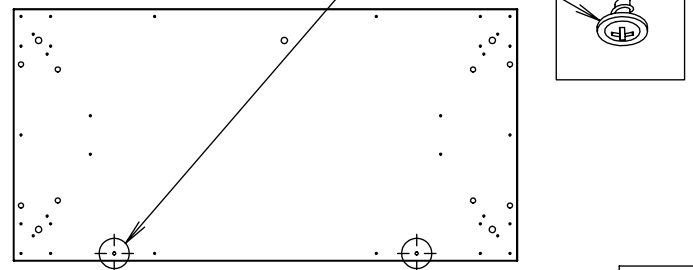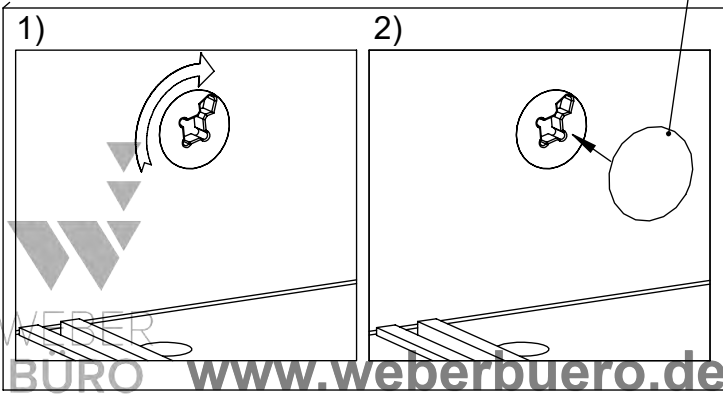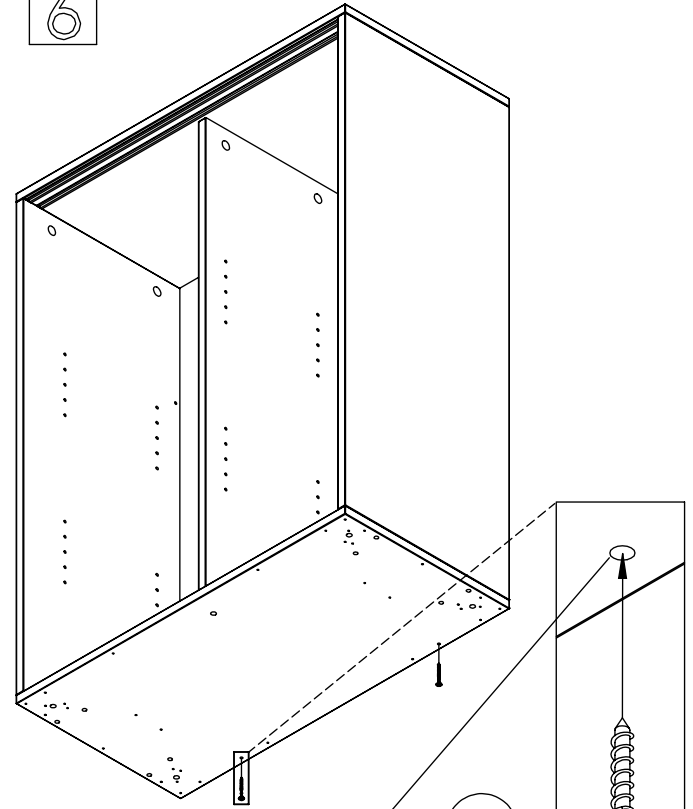



7

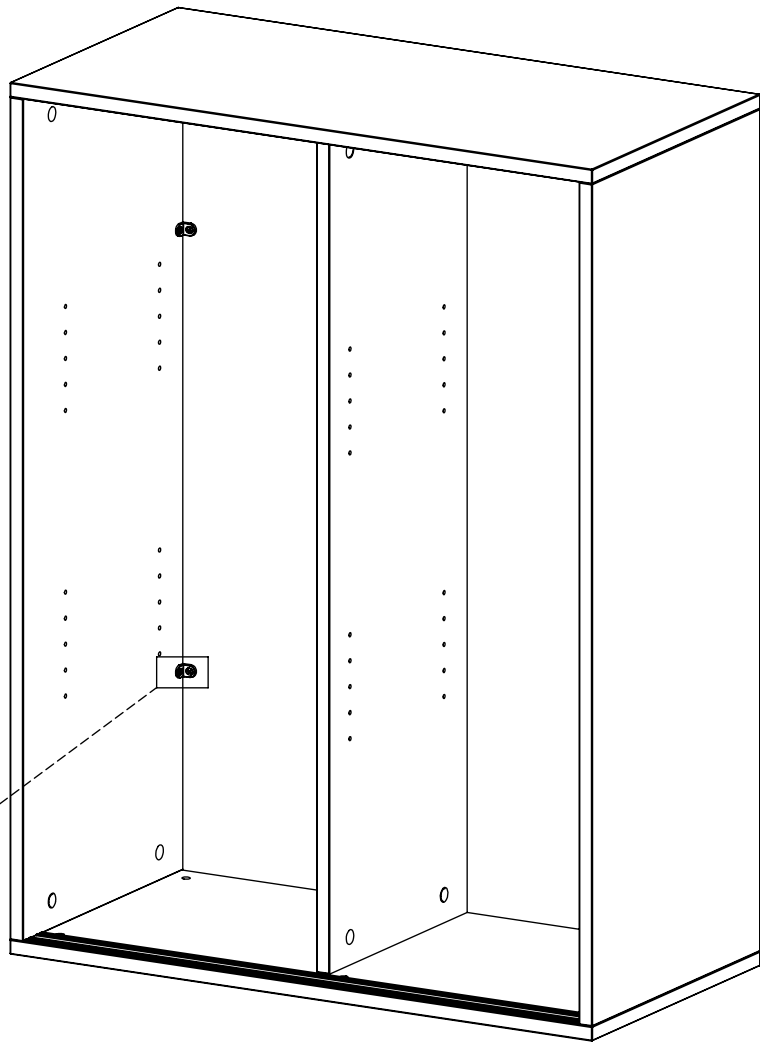

1)

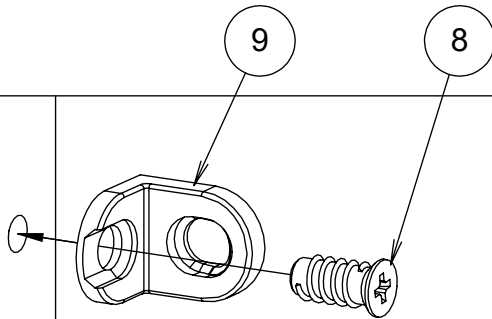

2)

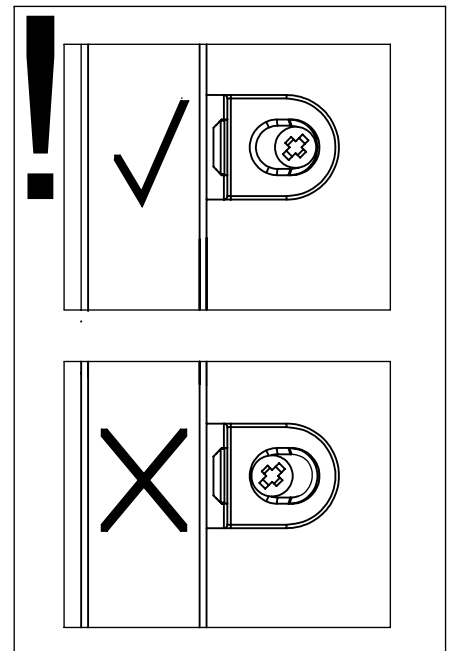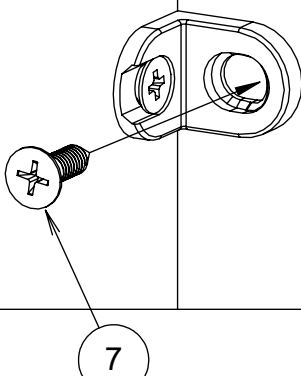

M60EC108 1 / 1

Reikalingi įrankiai:




①



②













③



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

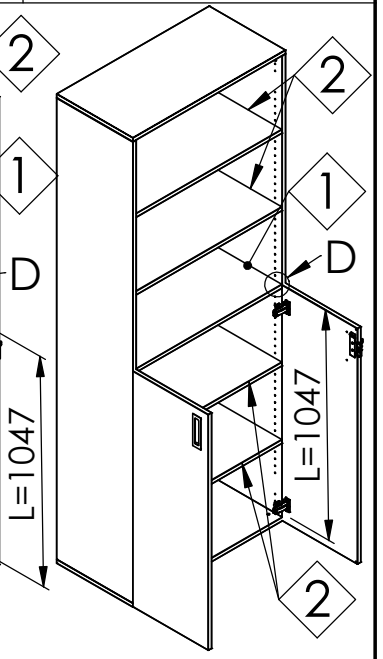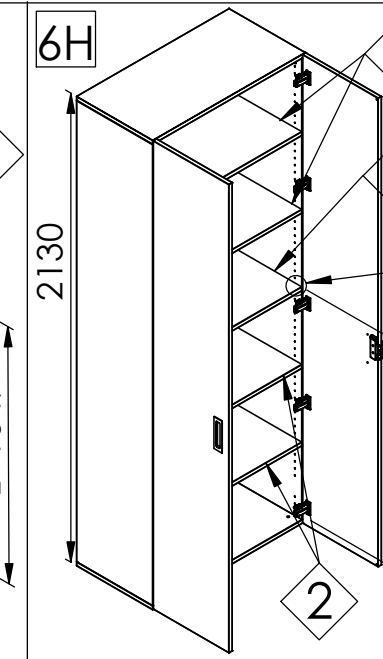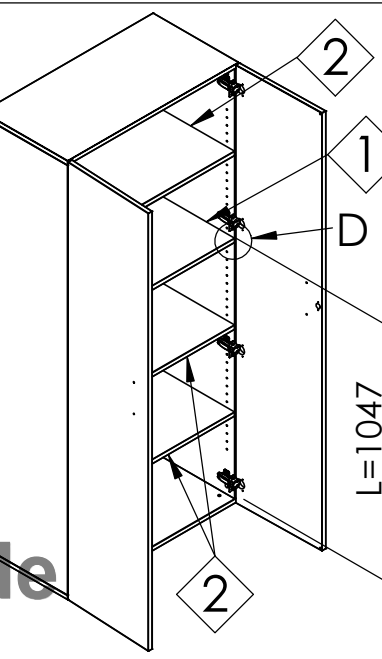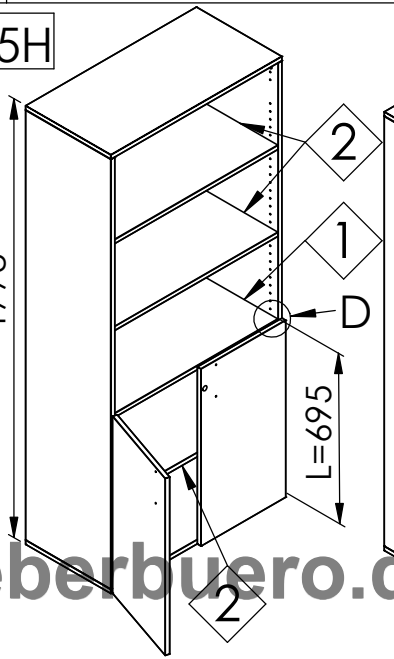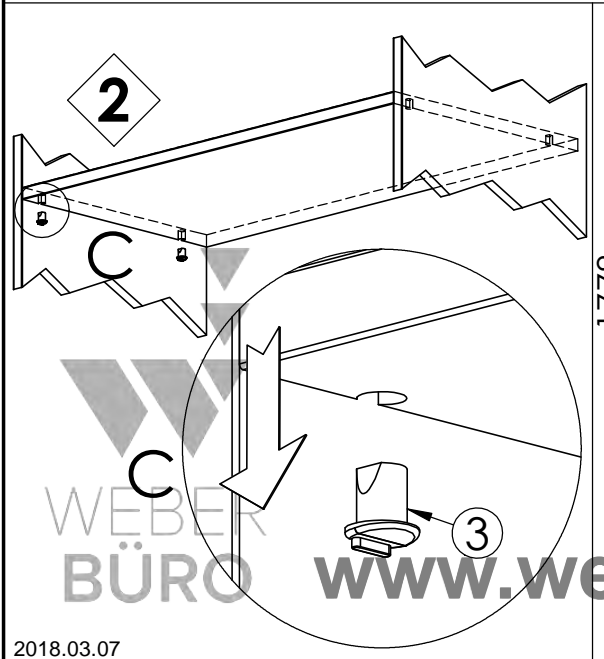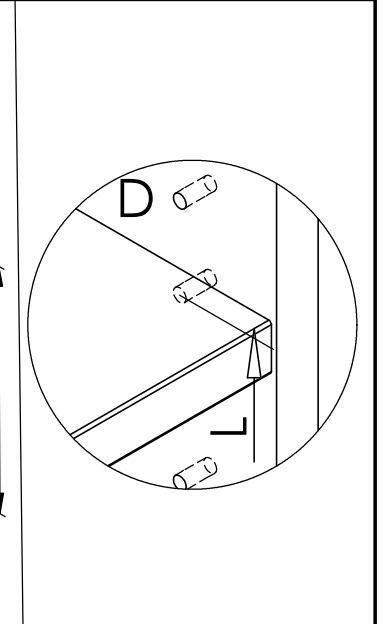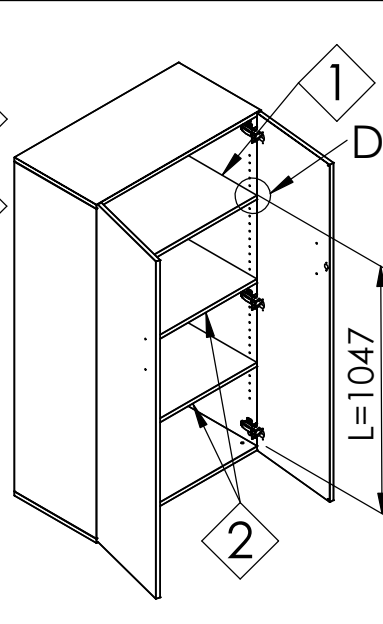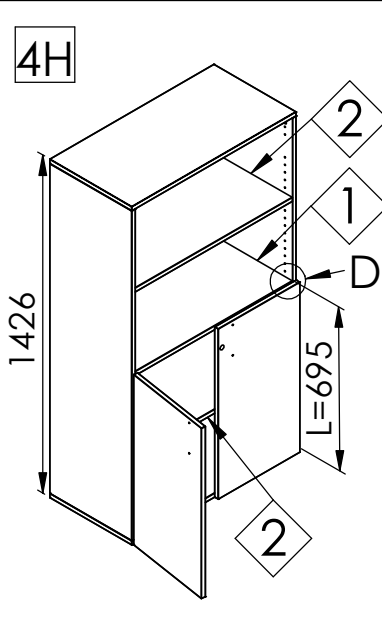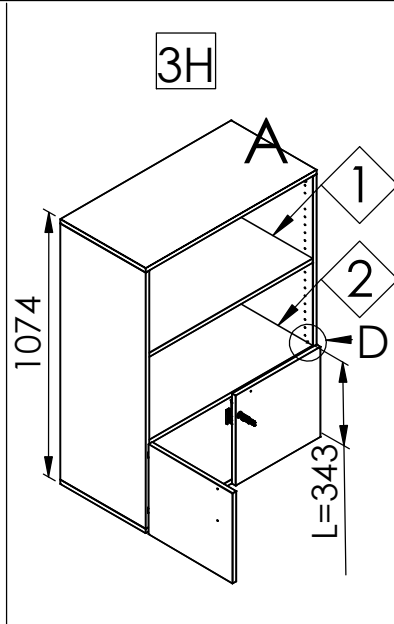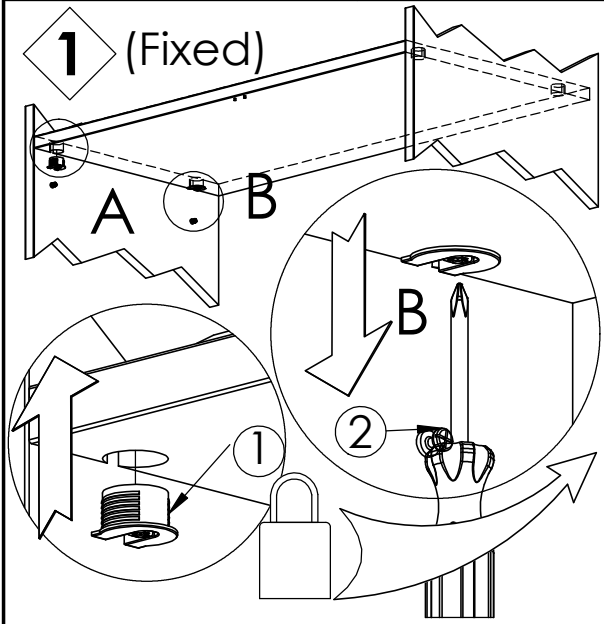


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

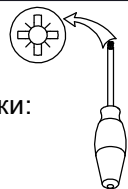


1




2



3

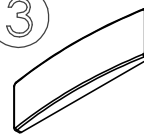


4

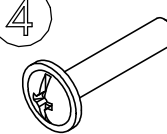


Surinkimo schema
Схема сборки
Assembling scheme


1

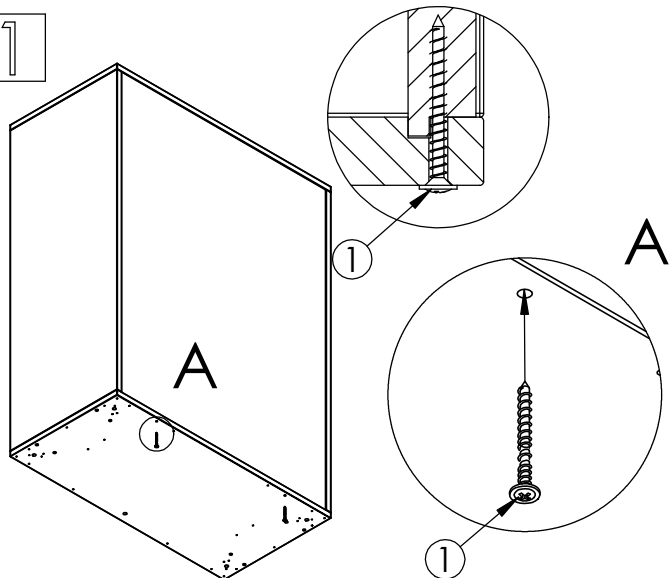


Attention! COZ053

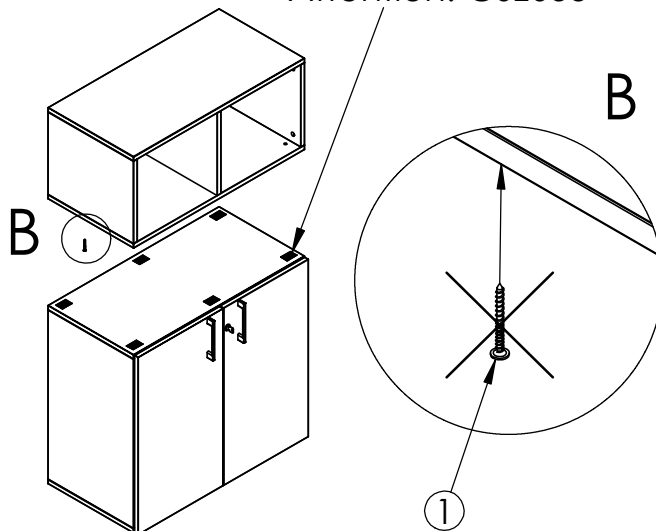


2

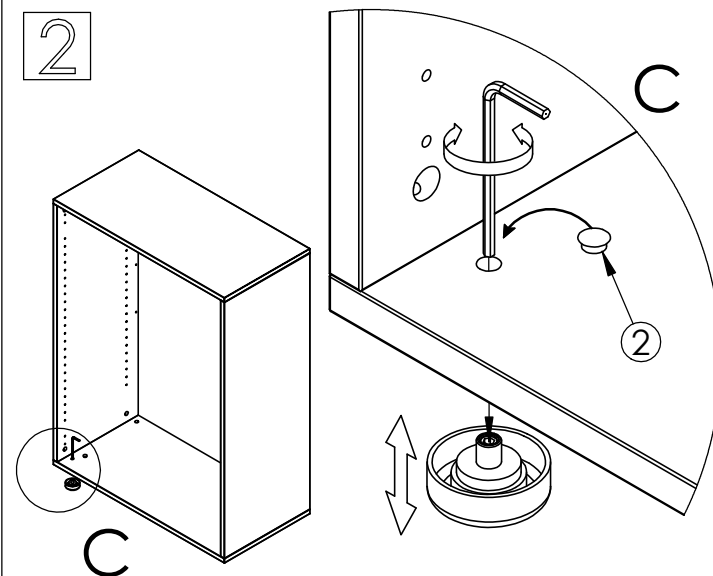

3

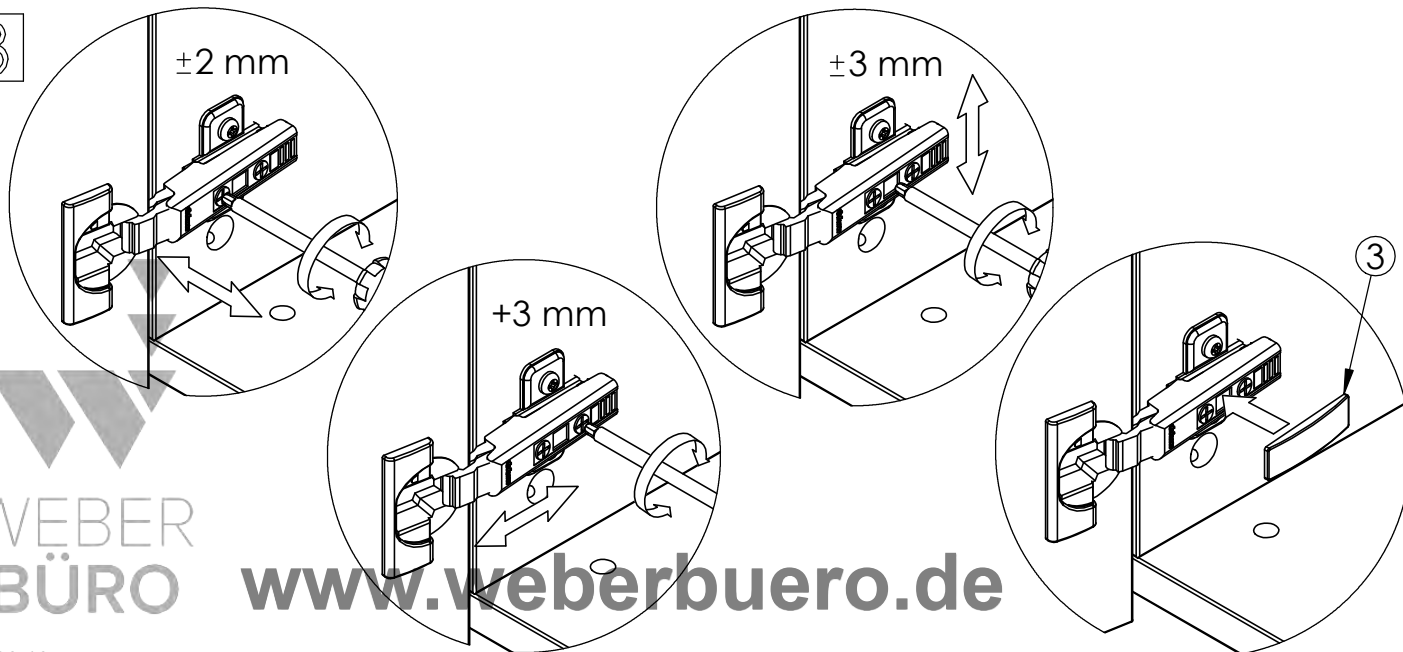

4

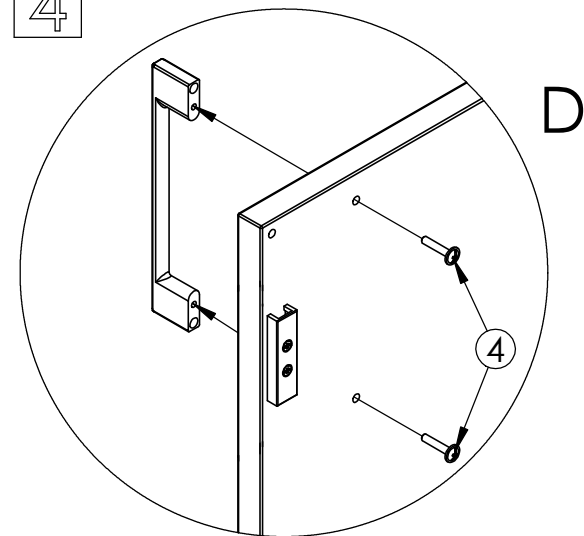

WEBER
BÜRO

www.weberbuero.de