




M60EC101				①		②		③	
EN	Assembling scheme			15/18 M42B0001	x8	5/11x34 M42B0022	x8	∅ 8x30 M42H0001	x8
DE	Montageschema			④		⑤		⑥	
FR	Schéma d'assemblage			∅ 4/18 M45A3010	x8	∅ 10/13 M45A2031	x4	4.5x45 M42A0110	x2
a - x2 c - x1 e - x1		b - x1		d - x*		⑦		⑧	
						∅ 20x12.5 M42B0049	*	∅ 5x11 M42B0067	*

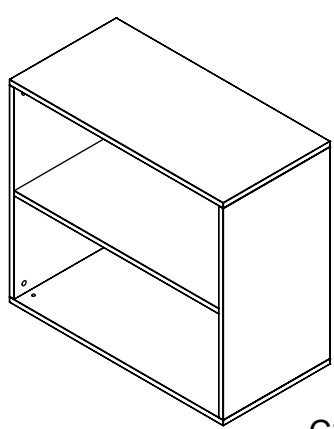


C2N080

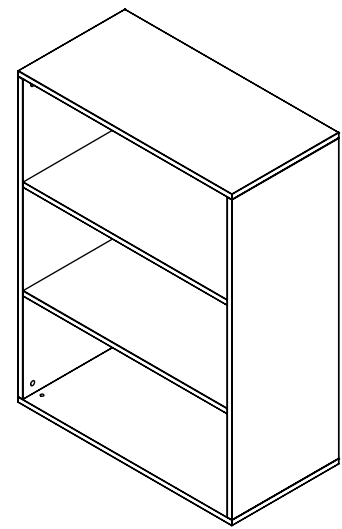

C3N080

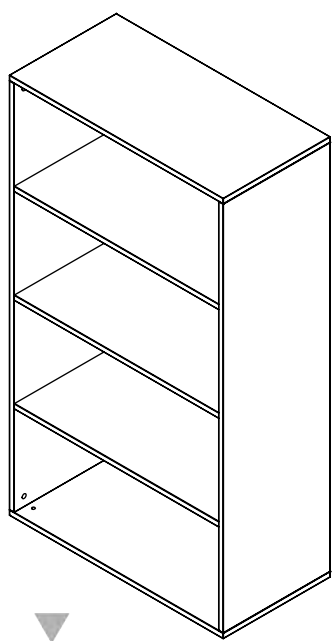


C4N080

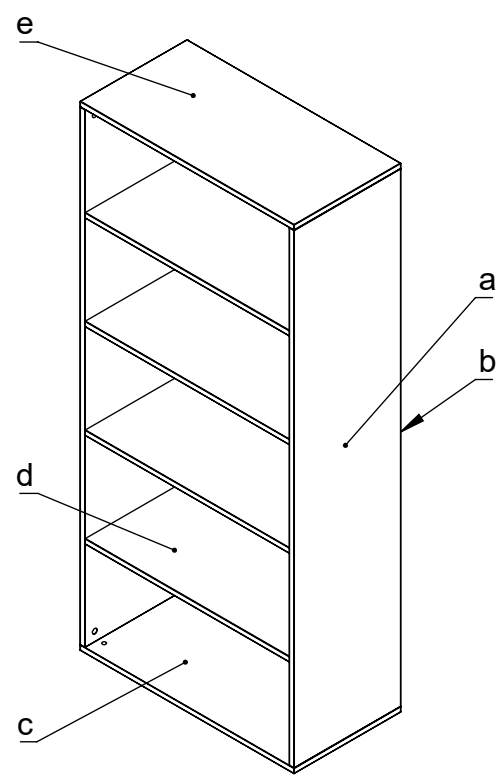


C5N080


1

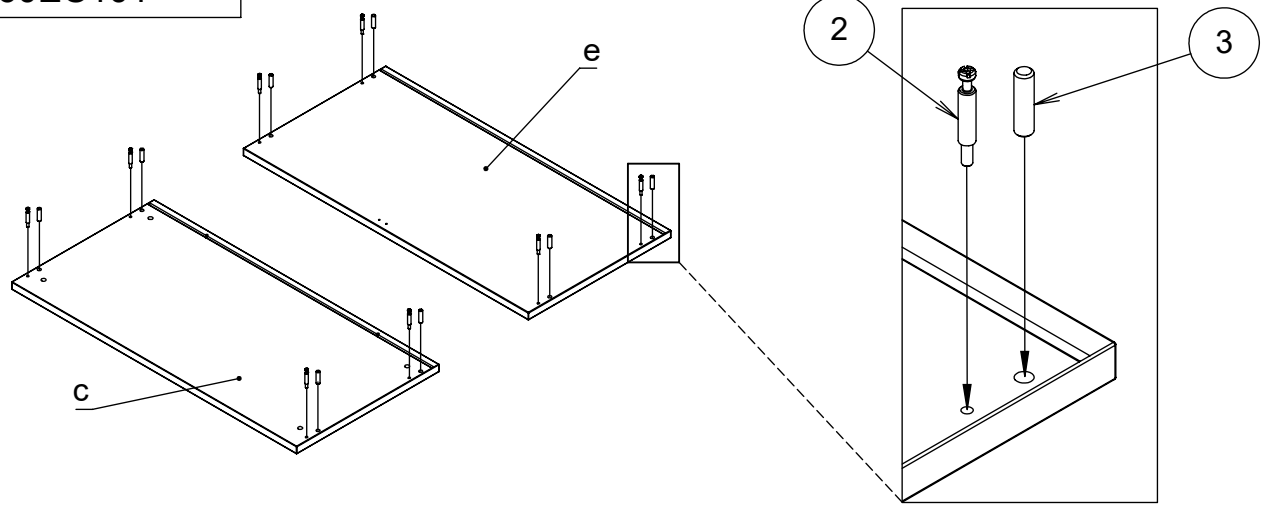


2

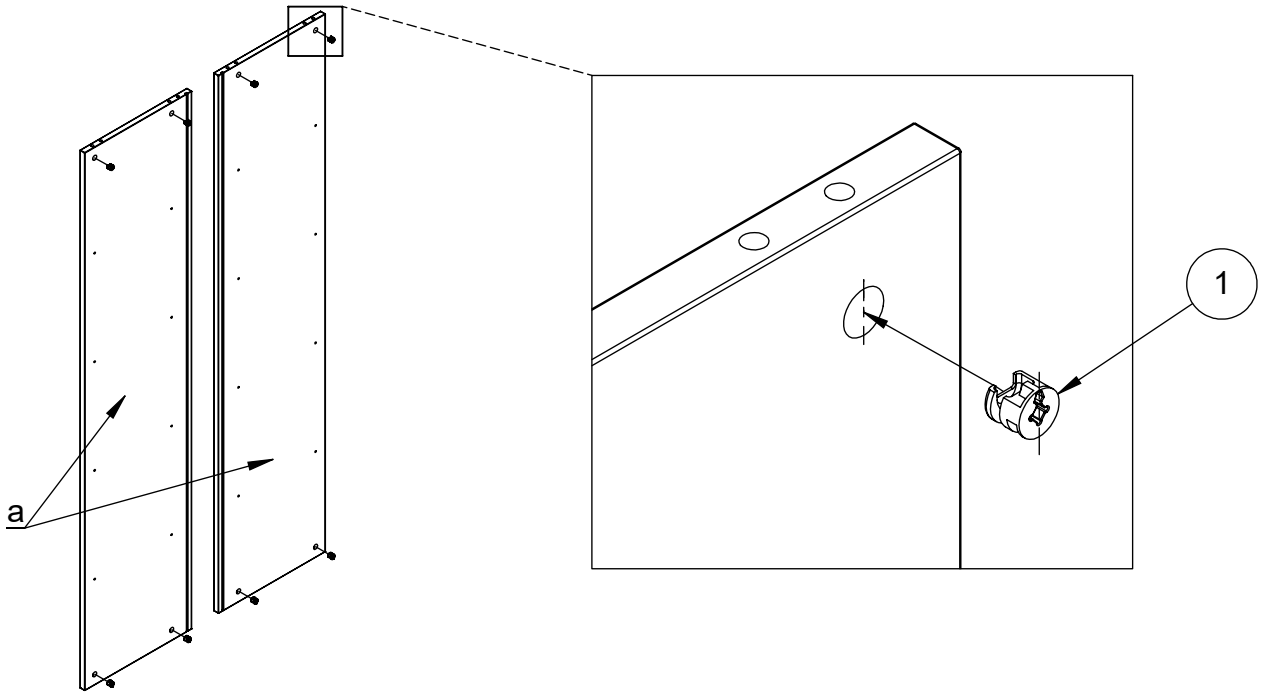


3

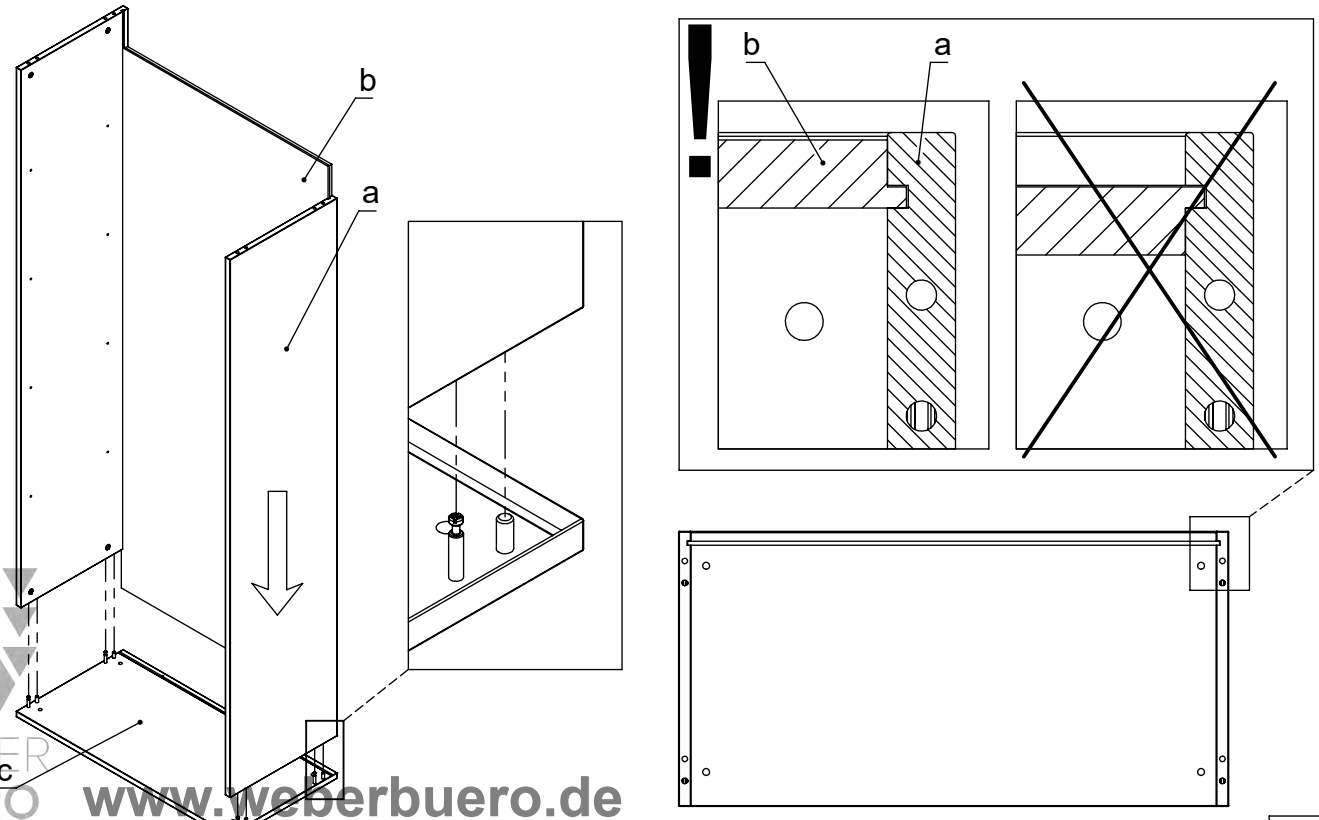




4

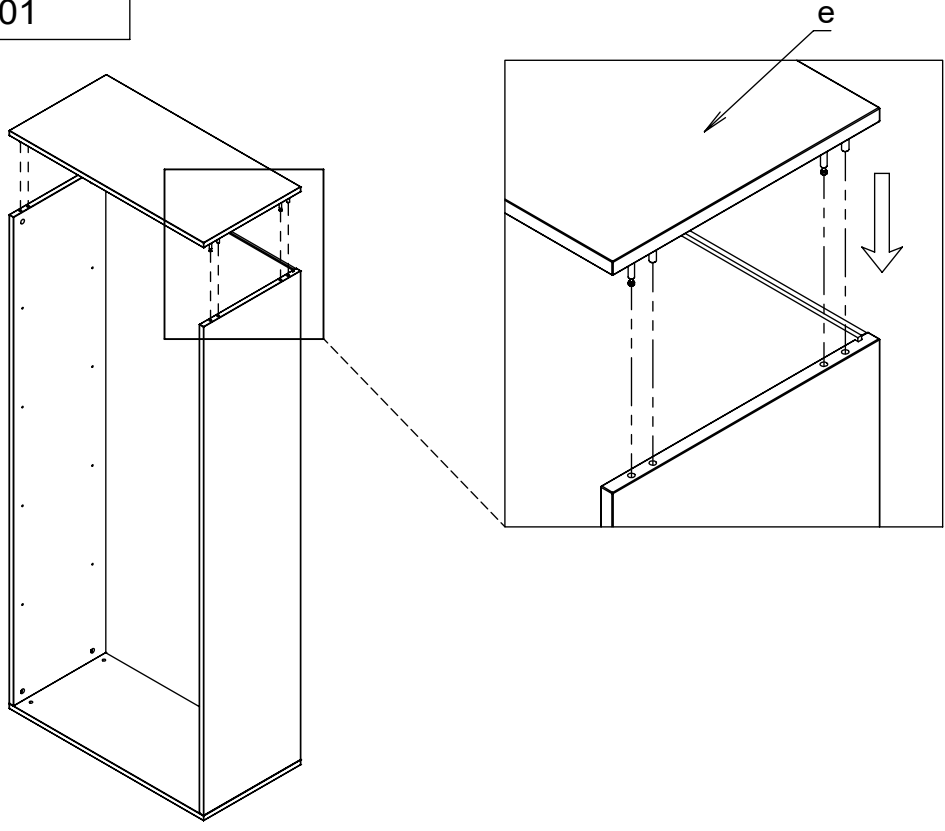



5

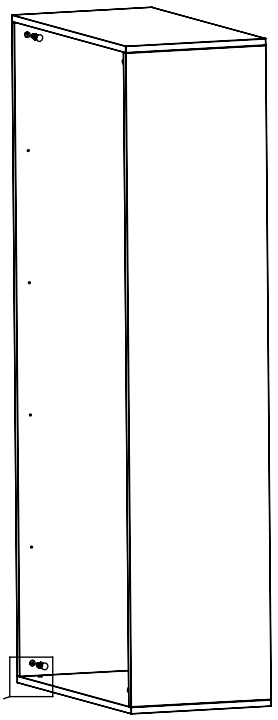




6

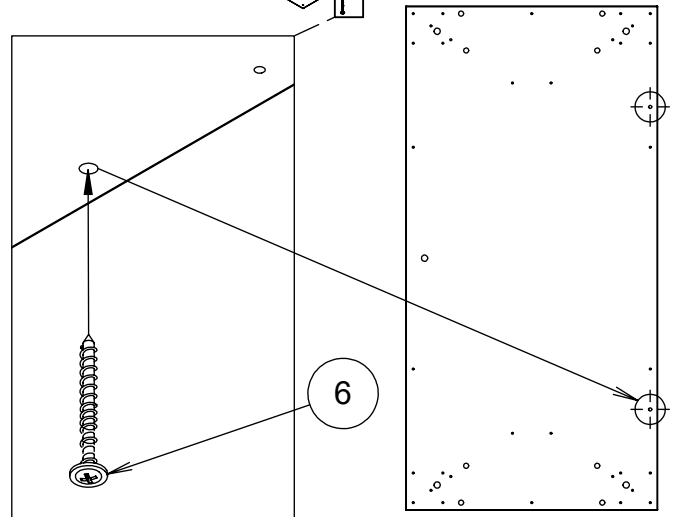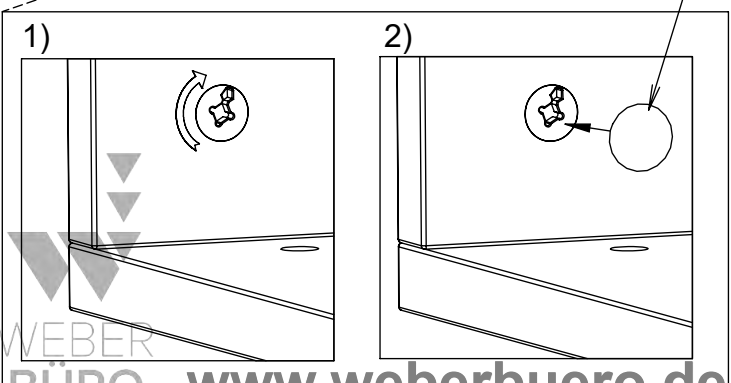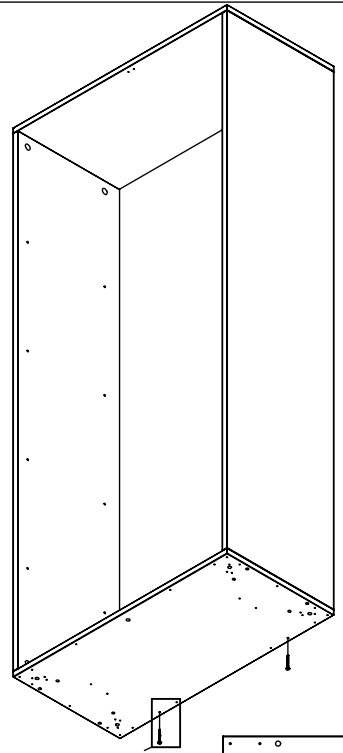




7

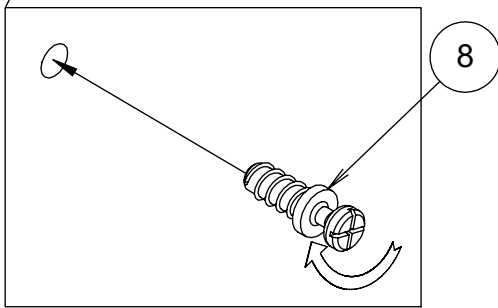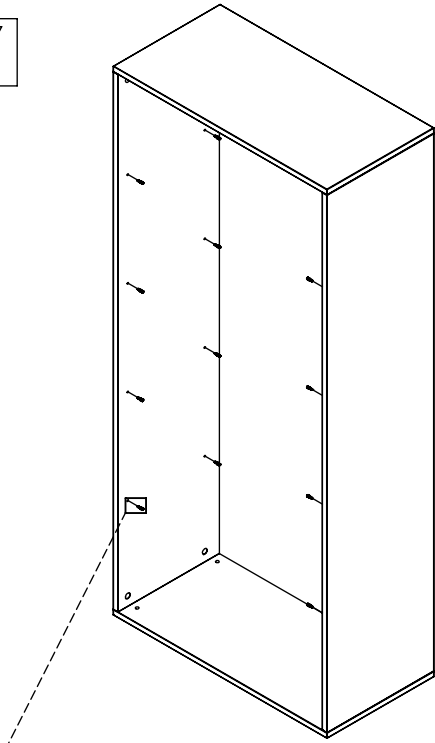

8

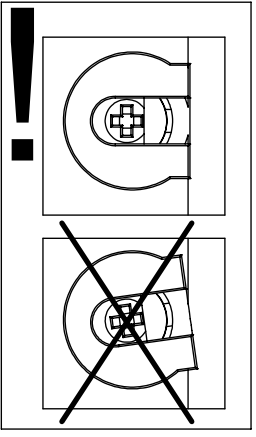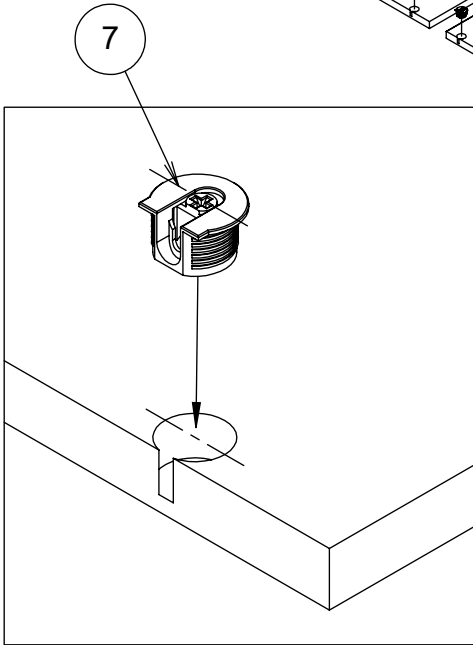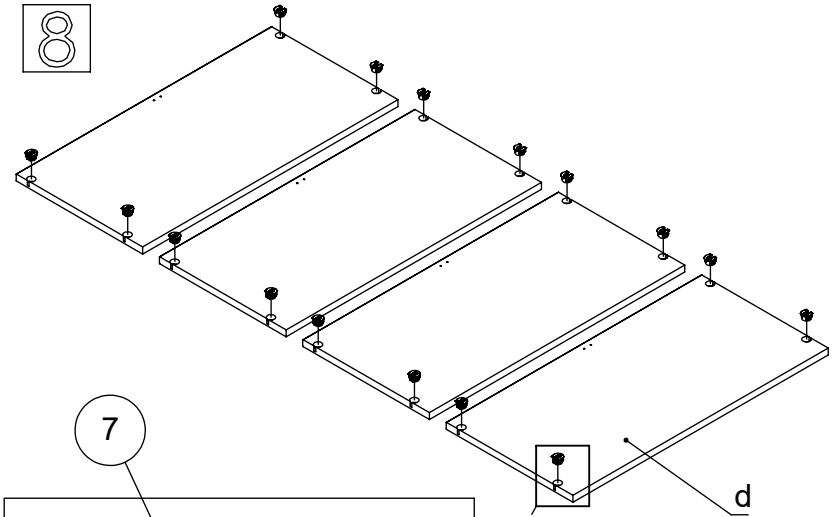

9

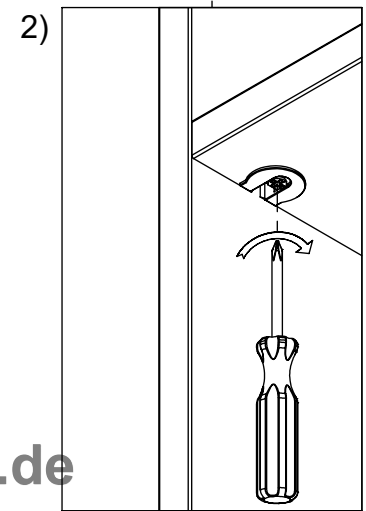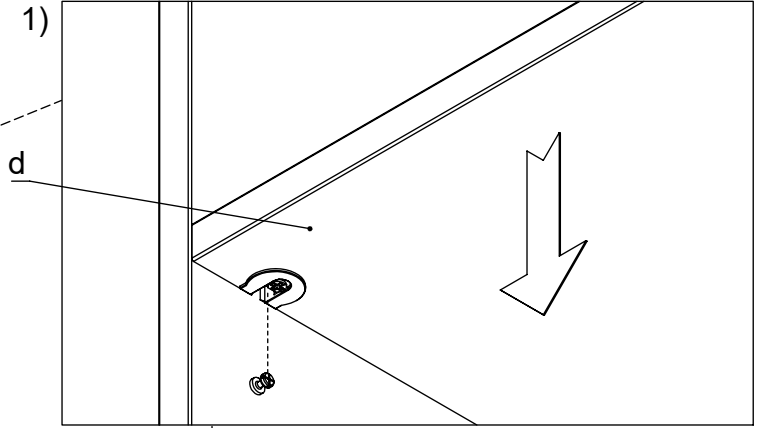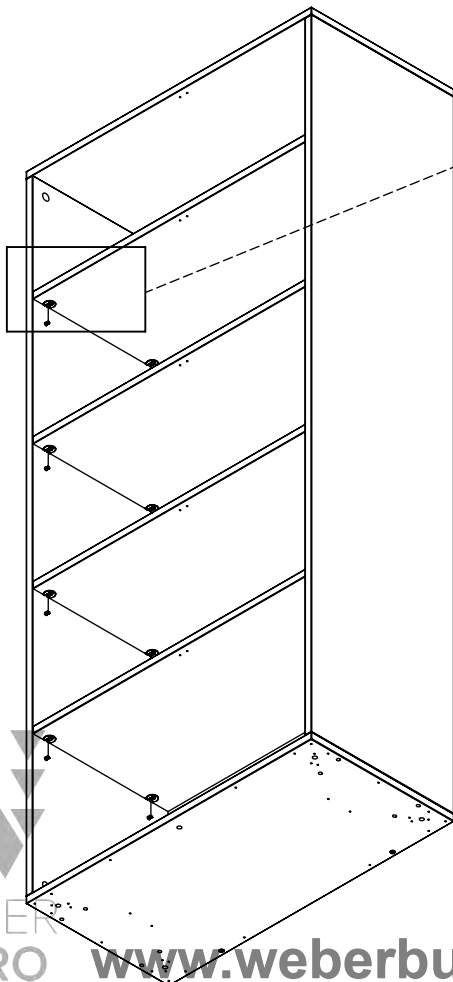

M60EC108 1 / 1

Reikalingi įrankiai:




①



②













③



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

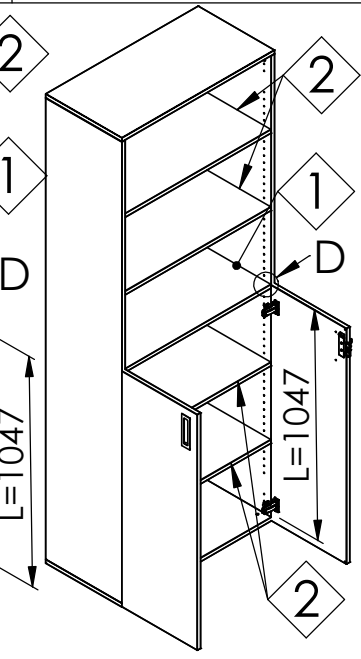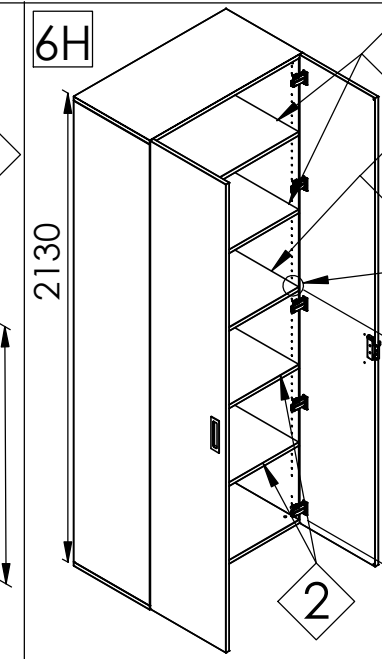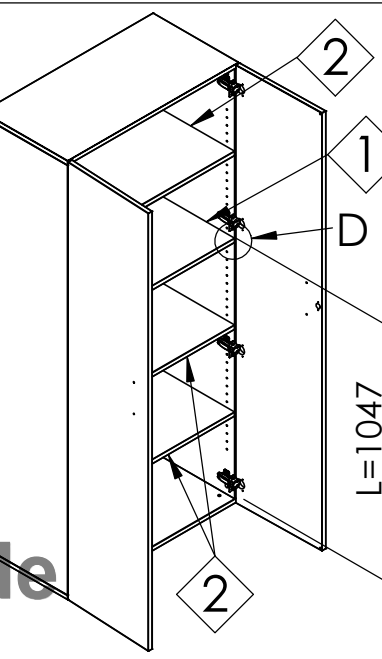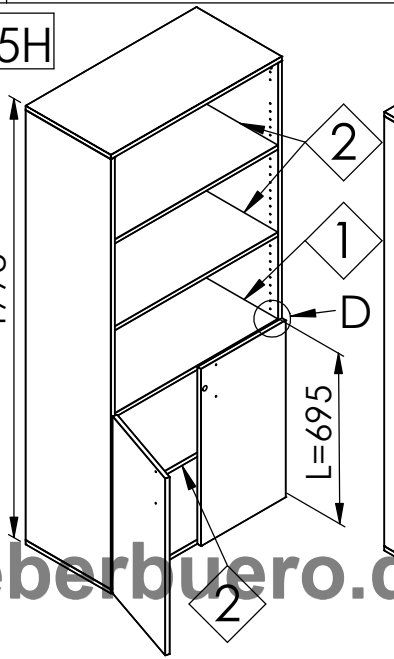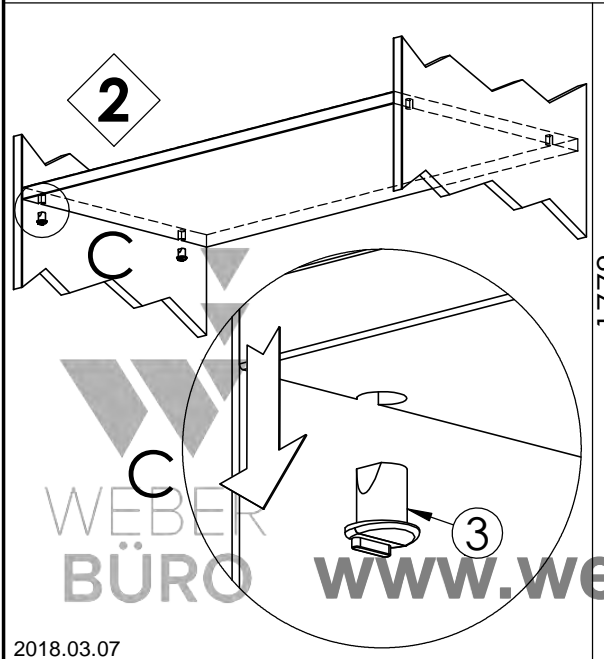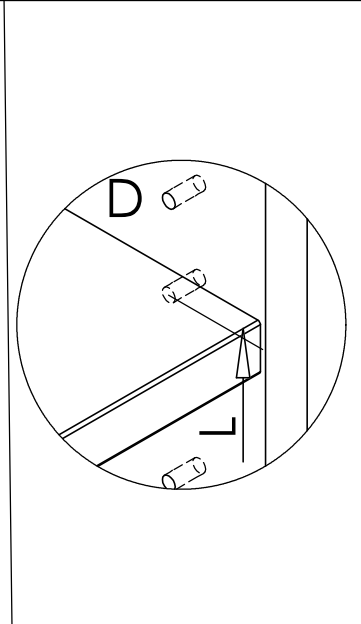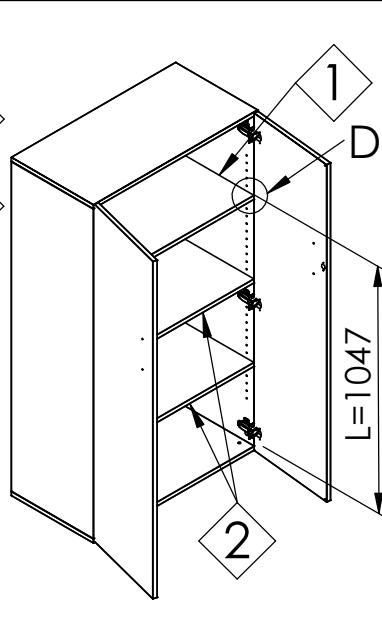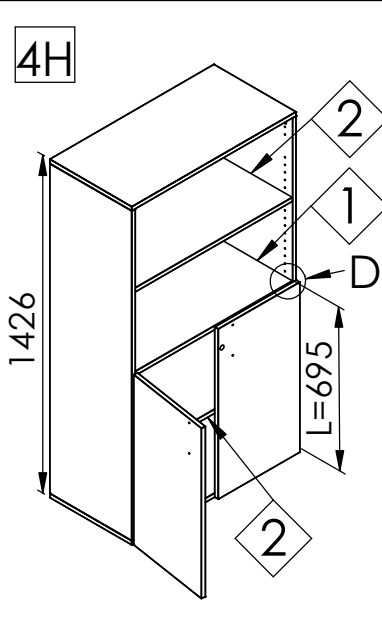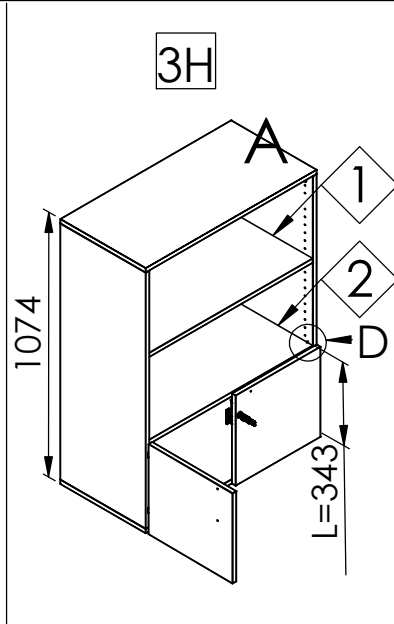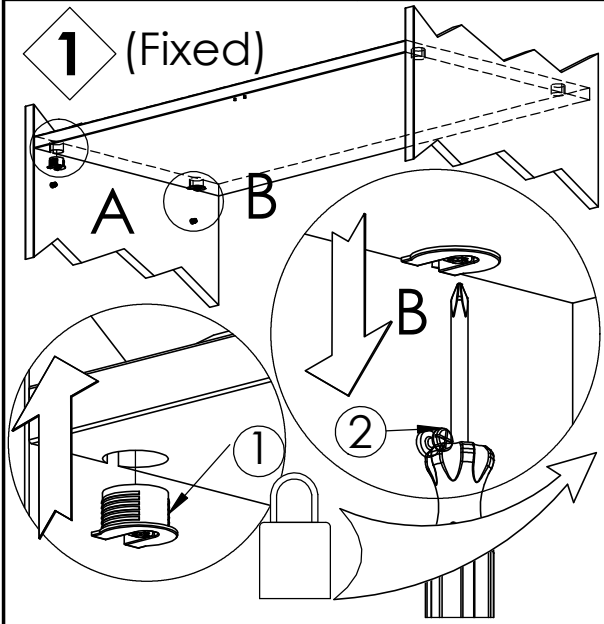

WEBER
BÜRO

www.weberbuero.de


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

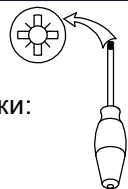


1




2



3

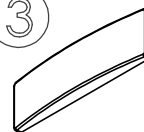


4

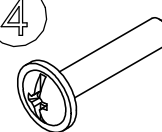


Surinkimo schema
Схема сборки
Assembling scheme


1

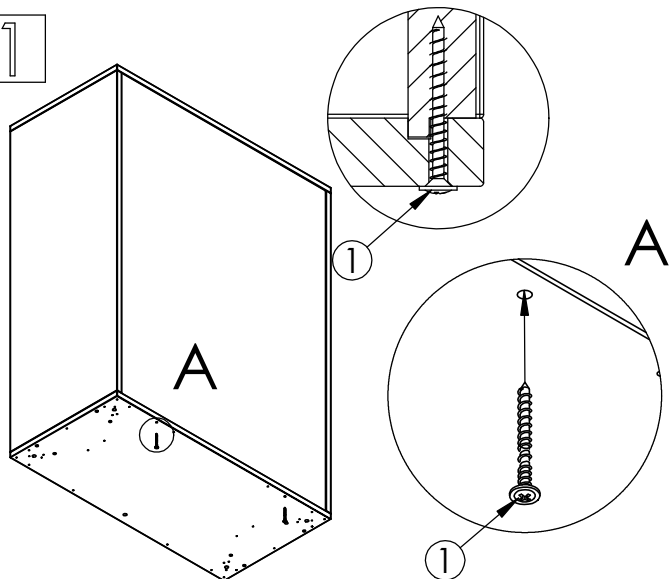


Attention! COZ053

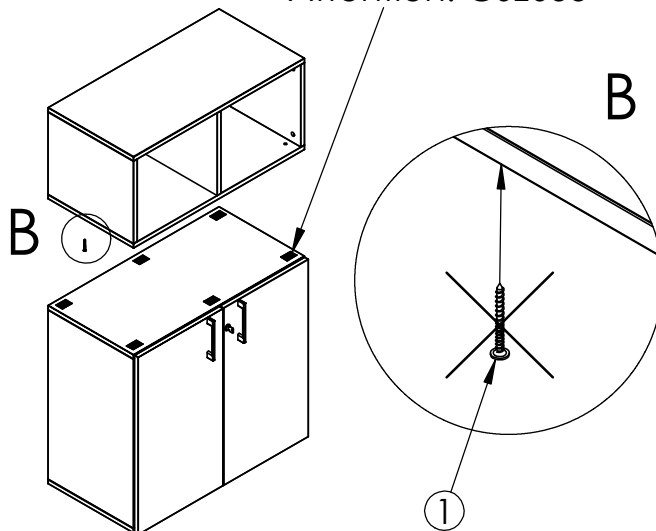


2

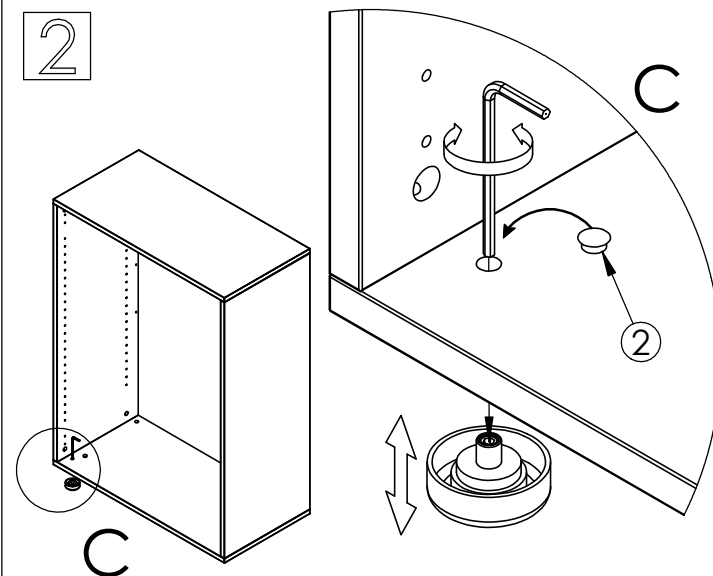

3

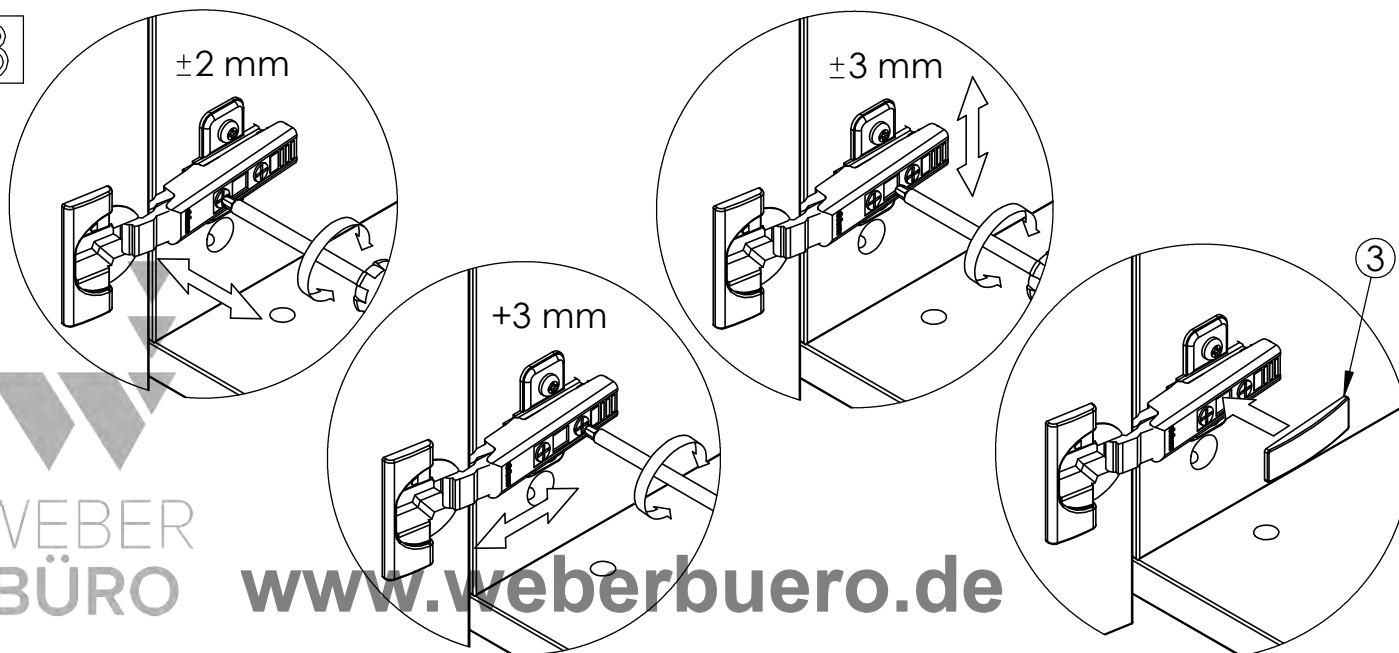

4

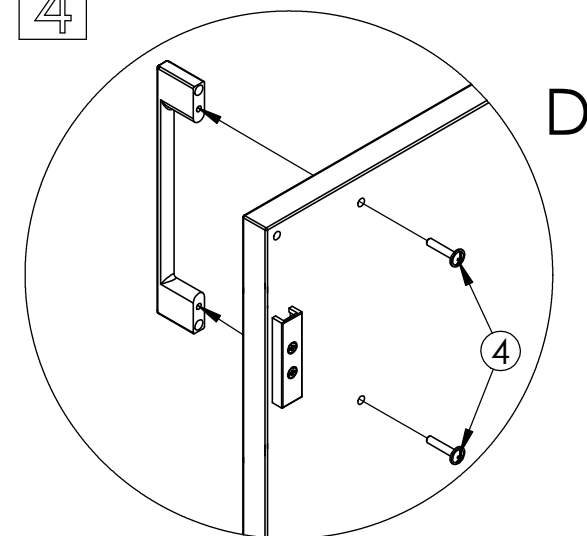

WEBER
BÜRO

www.weberbuero.de