
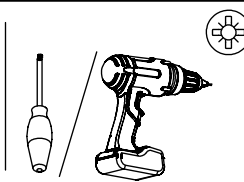
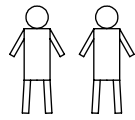




M60EC102


EN Assembling scheme
 DE Montageschema
 FR Schéma d'assemblage





1  15/18
M42B0001 x12


2  5/11x34
M42B0022 x12


3  \varnothing 8x30
M42H0001 x12

4  \varnothing 4/18
M45A3010 x12


5  \varnothing 10/13
M45A2031 x5

6  4.5x45
M42A0110 x2


7  \varnothing 20x12.5
M42B0049 *

8  \varnothing 5x8
M42B0050 *


a - x1

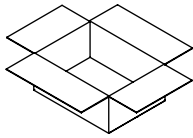


b - x1
c - x2
d - x1

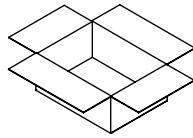


e - x*
f - x1

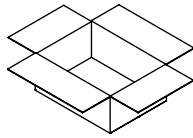


C2N081

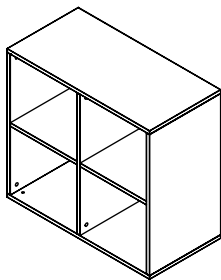


C2N100

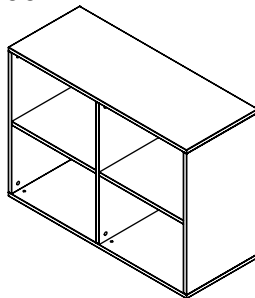


C3N081

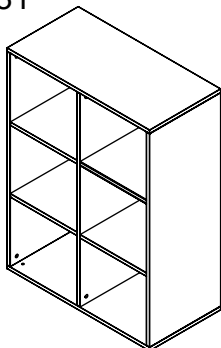


C3N100

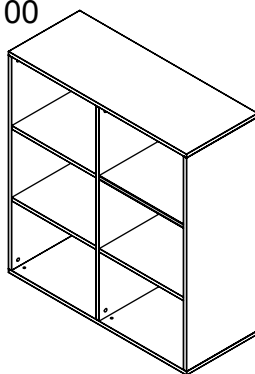


C4N100

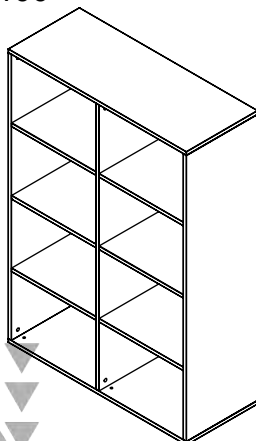

C5N100

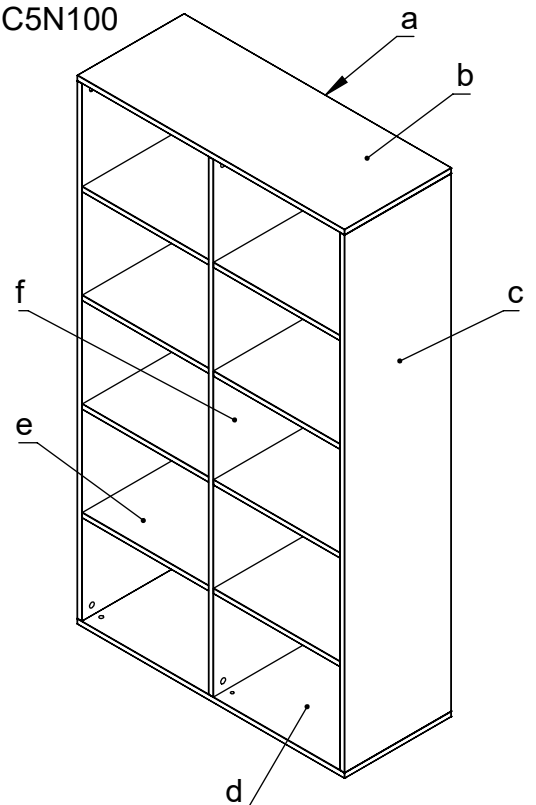


1


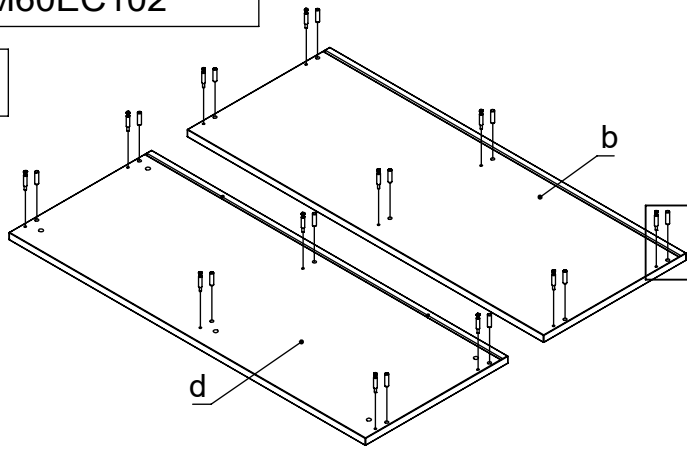


2




3

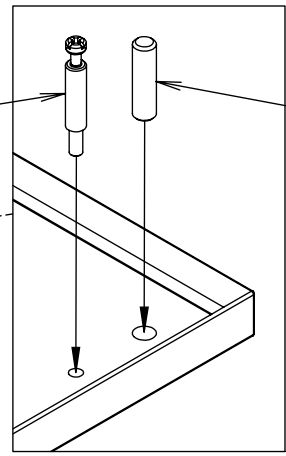


2

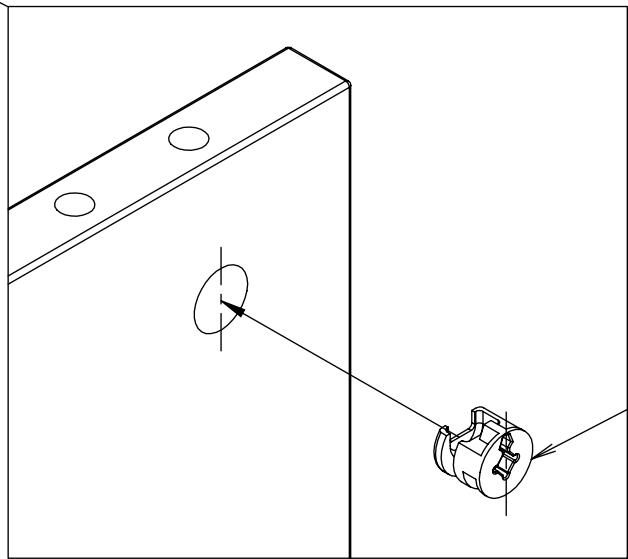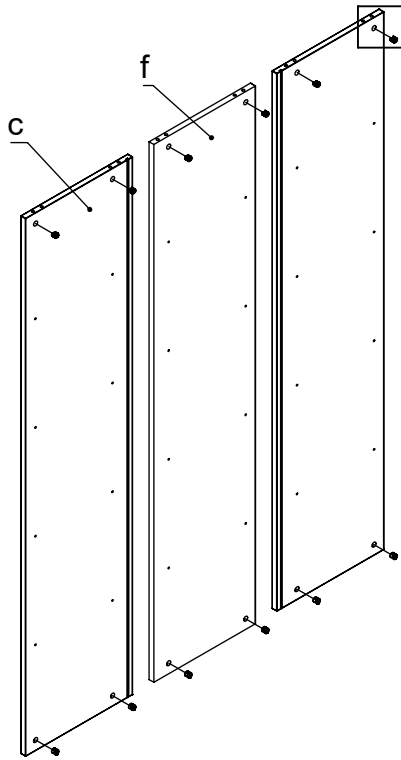


3

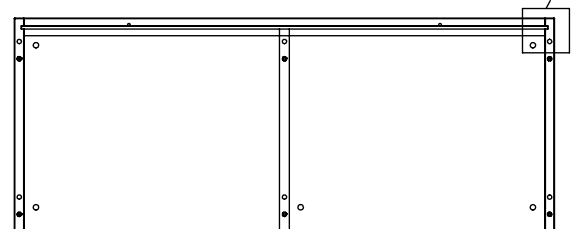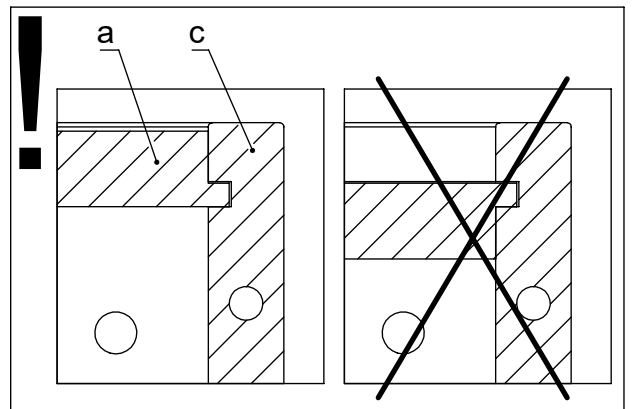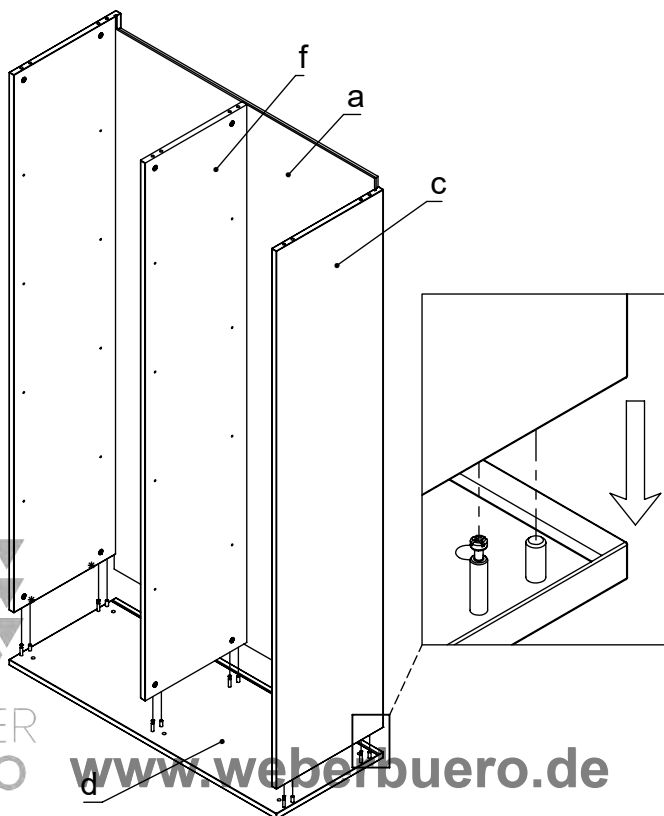




4

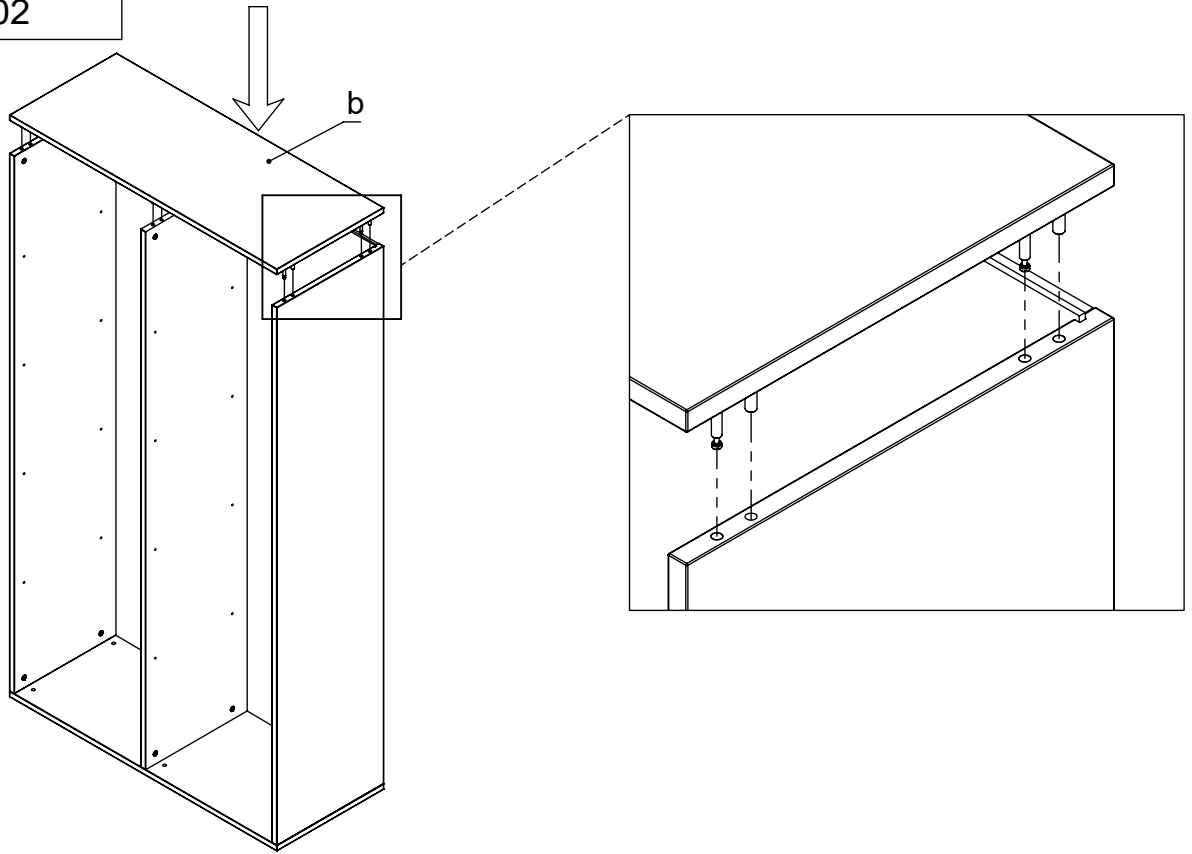



5

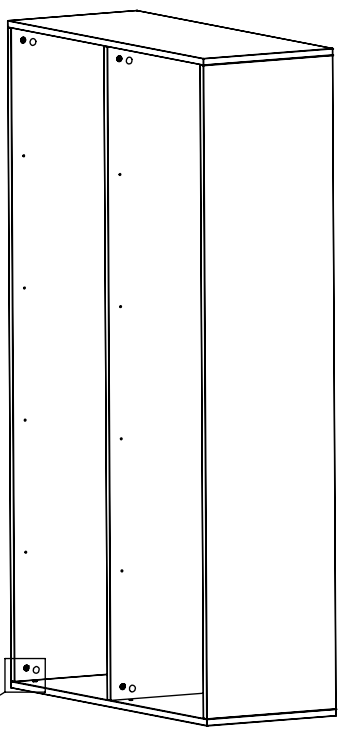

6

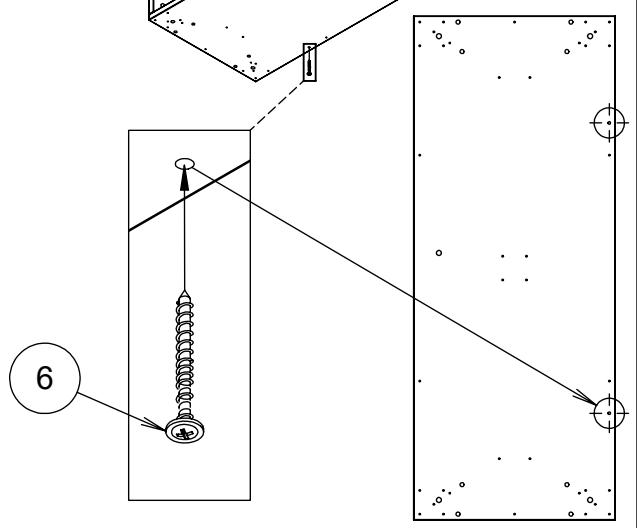
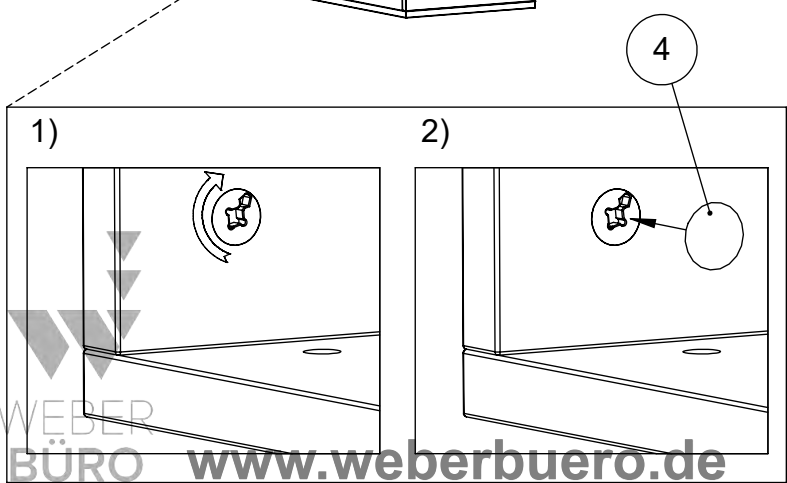
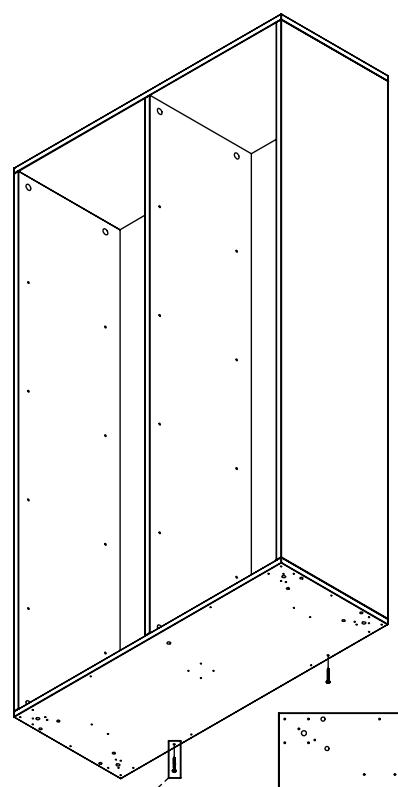


7


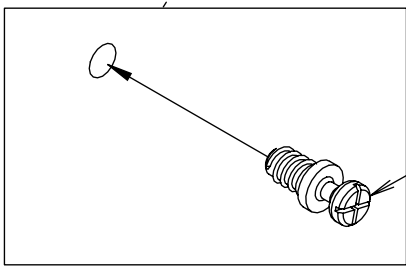
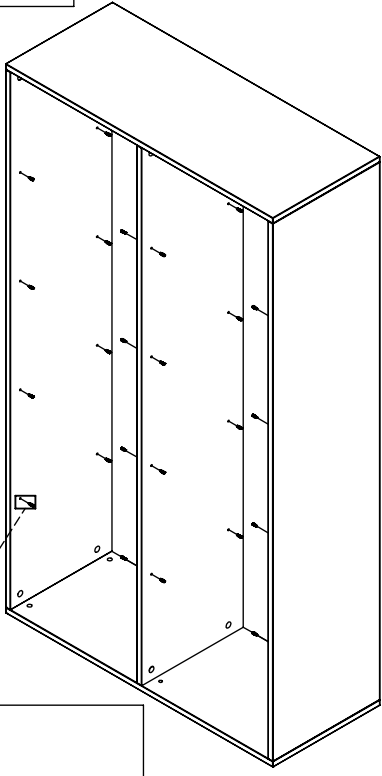


8

8

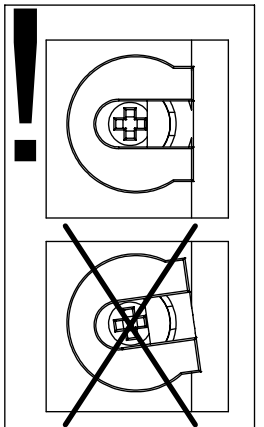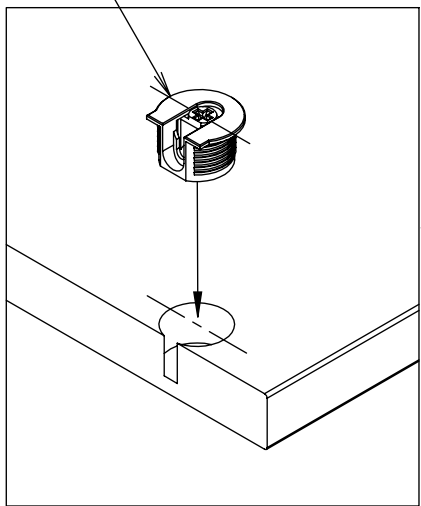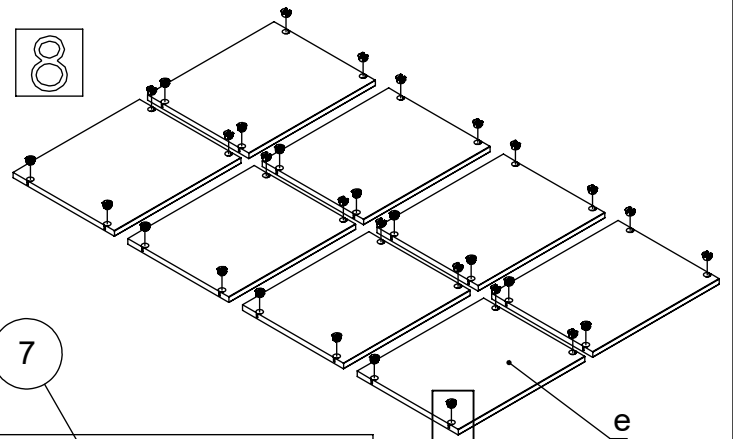

9

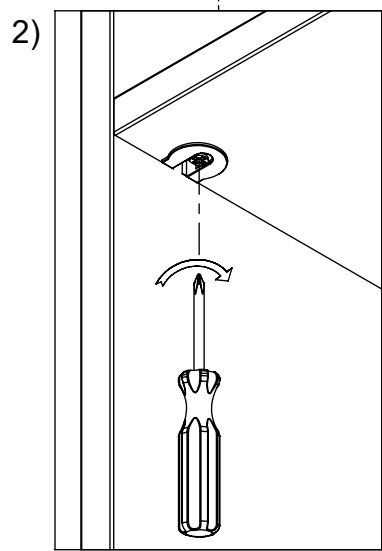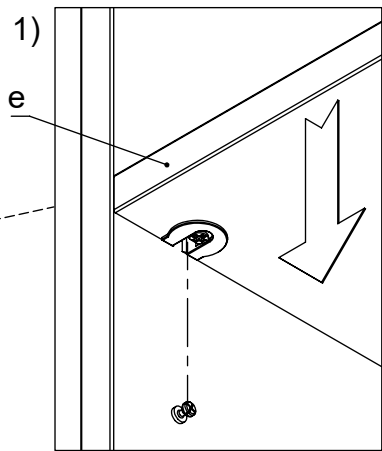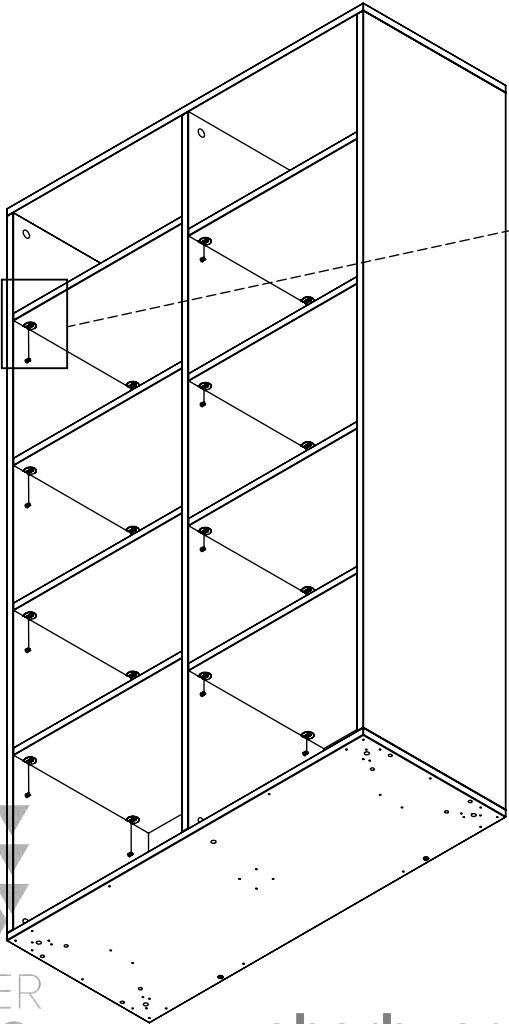

M60EC108 1 / 1

Reikalingi įrankiai:




①



②













③



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

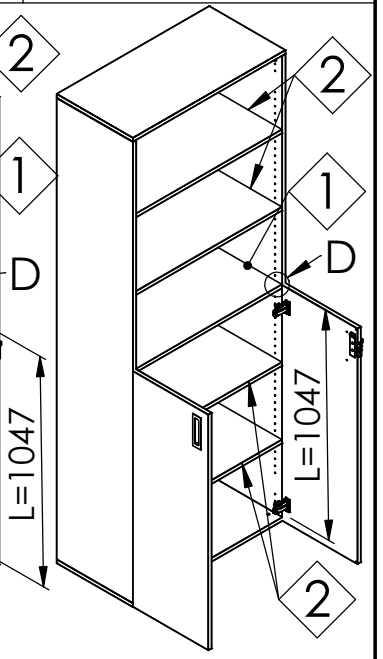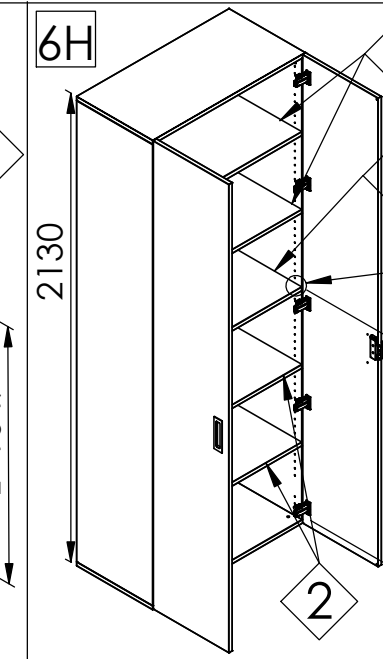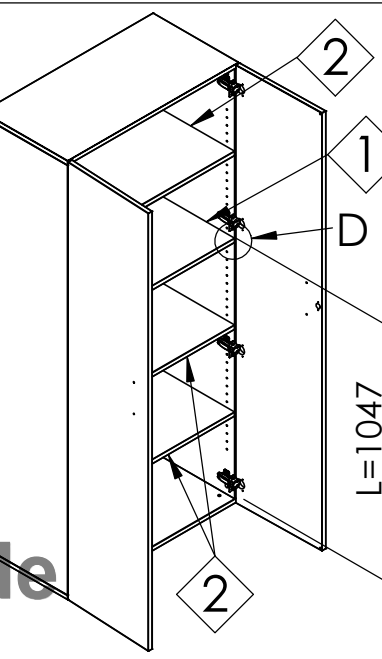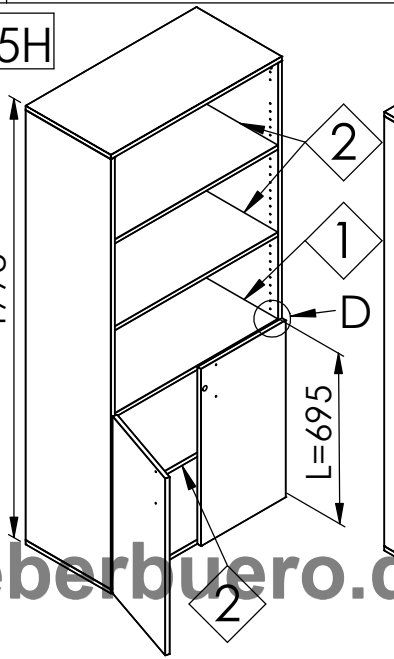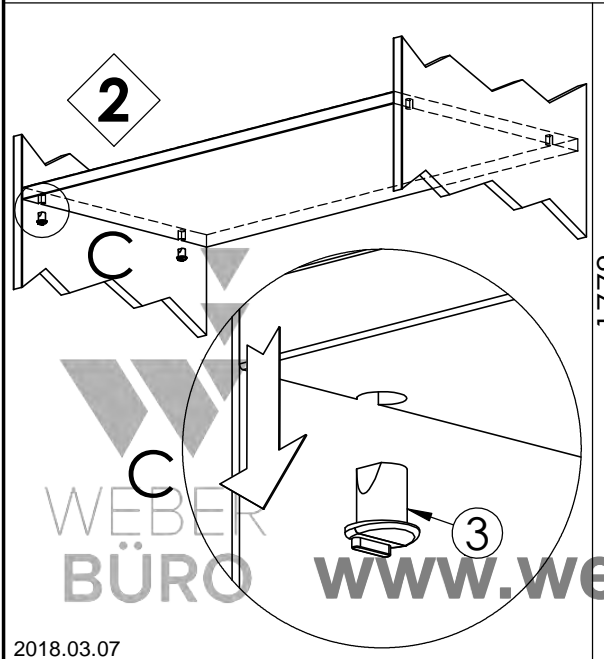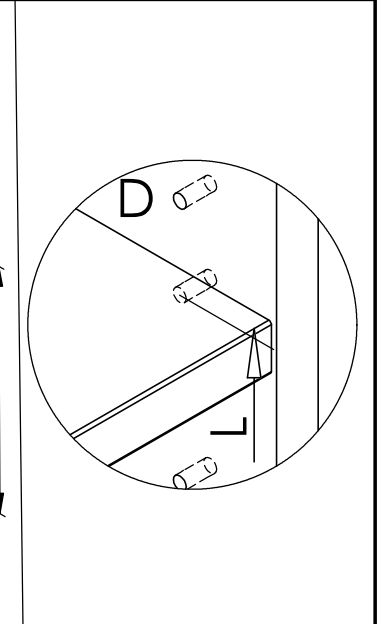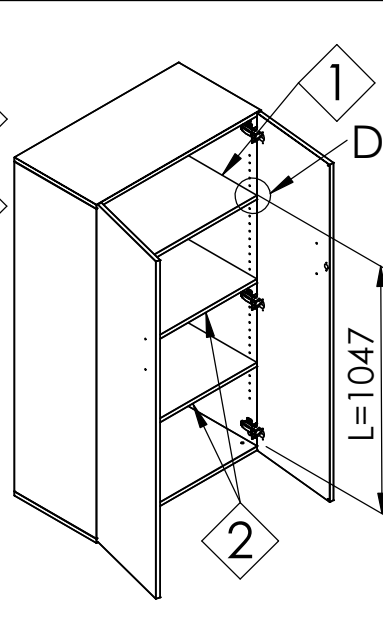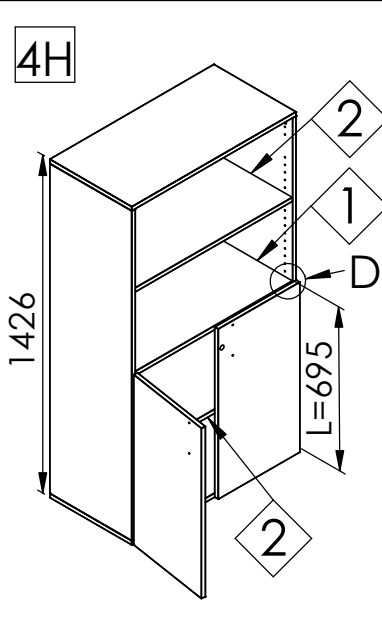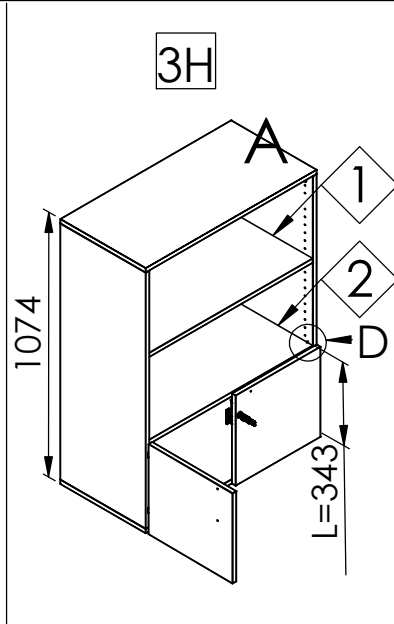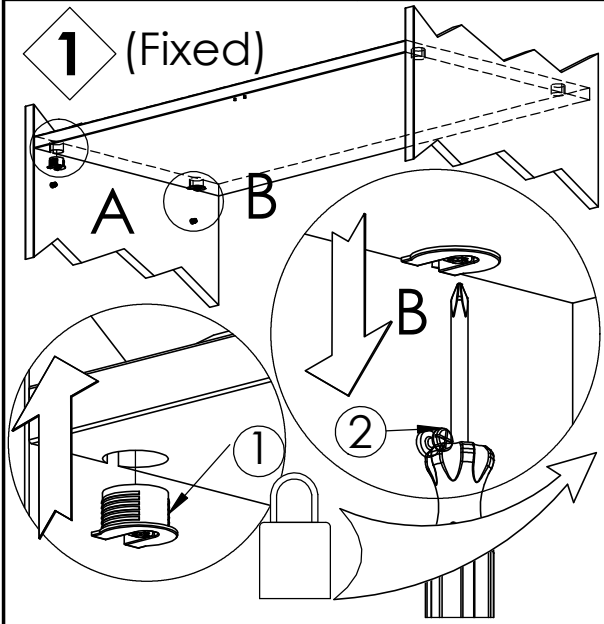

WEBER
BÜRO

www.weberbuero.de


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

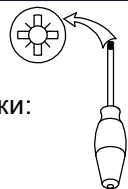


1




2



3

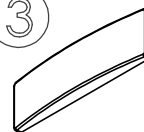


4

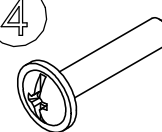


Surinkimo schema
Схема сборки
Assembling scheme


1

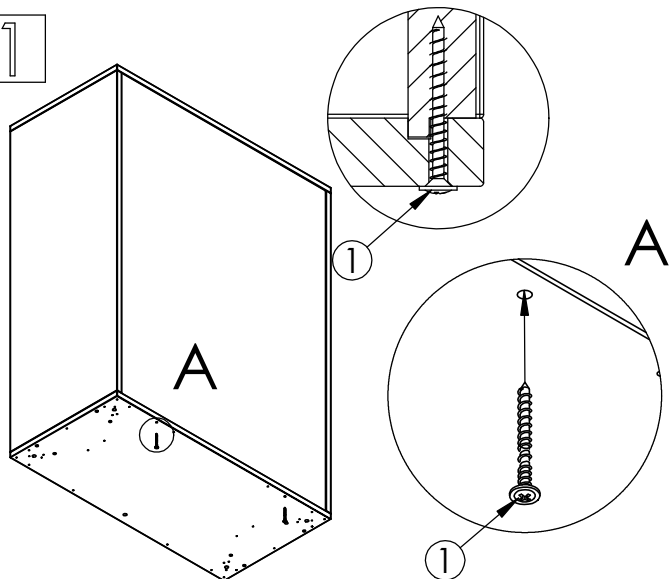


Attention! COZ053

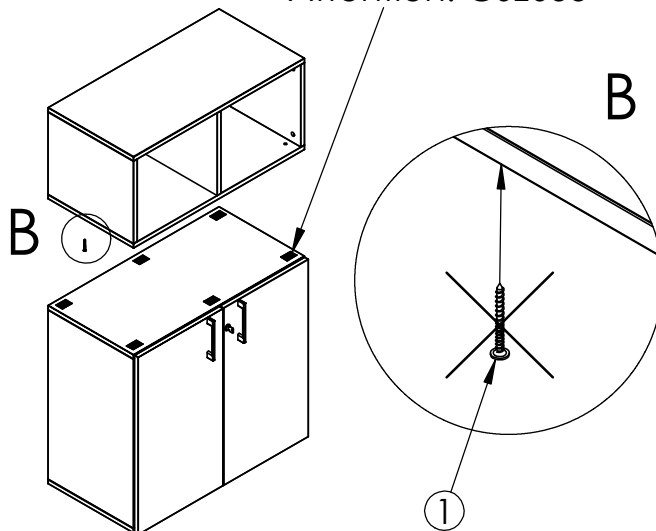


2

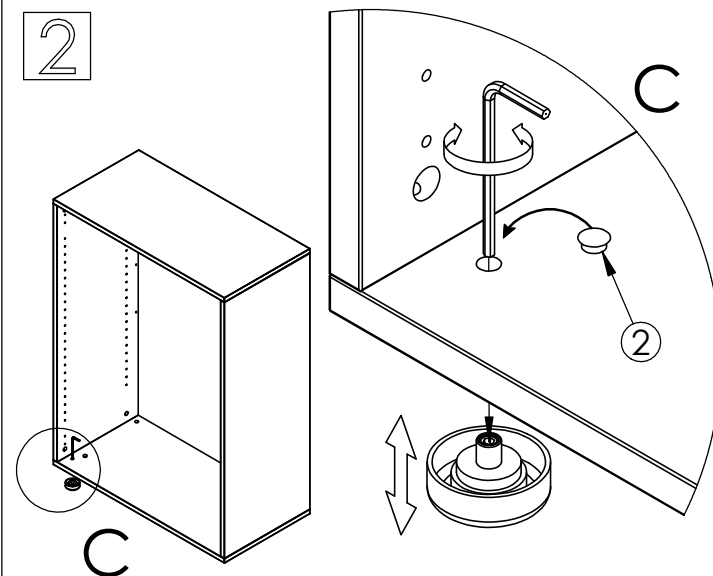

3

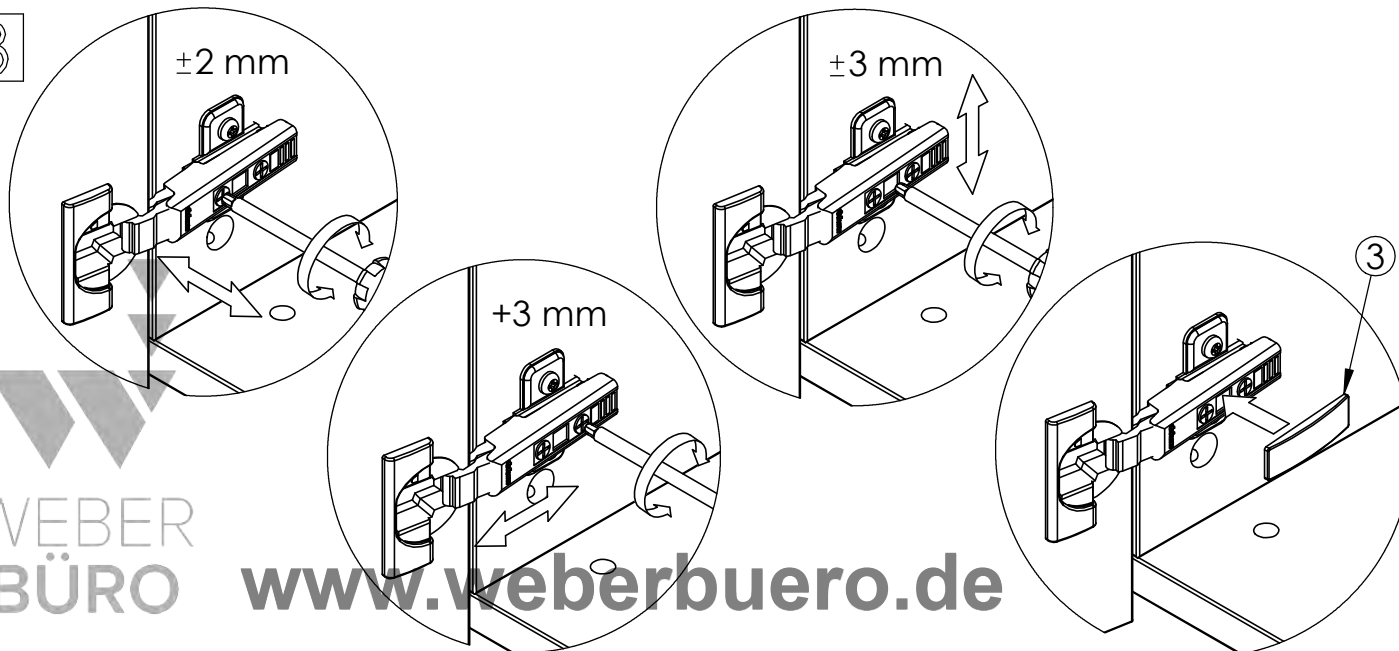

4

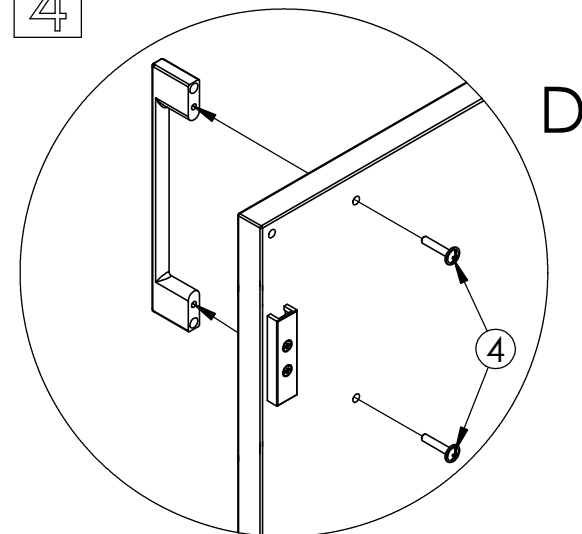

WEBER
BÜRO

www.weberbuero.de