

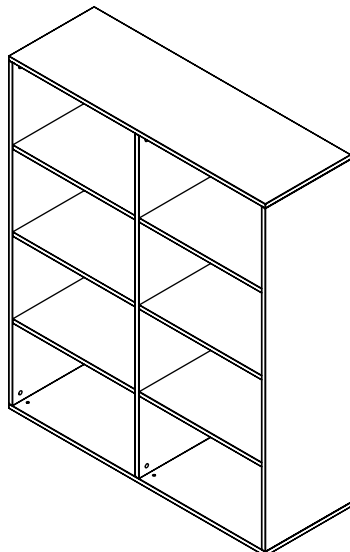


M60EC106									
EN	Assembling scheme			$\frac{15}{18}$ M42B0001	x12	$\frac{5}{11} \times 34$ M42B0022	x12	$\varnothing 8 \times 30$ M42H0001	x12
DE	Montageschema								
FR	Schéma d'assemblage								
<p>a - x2</p>		<p>b - x1</p> <p>c - x2</p> <p>d - x1</p>		<p>e - x1</p> <p>f - x*</p>					
				$\varnothing 4/18$ M45A3010	x12	$\varnothing 10/13$ M45A2031	x6	4.5×45 M42A0110	x4
						$\varnothing 20 \times 12.5$ M42B0049	*	$\varnothing 5 \times 8$ M42B0050	*

C4N120

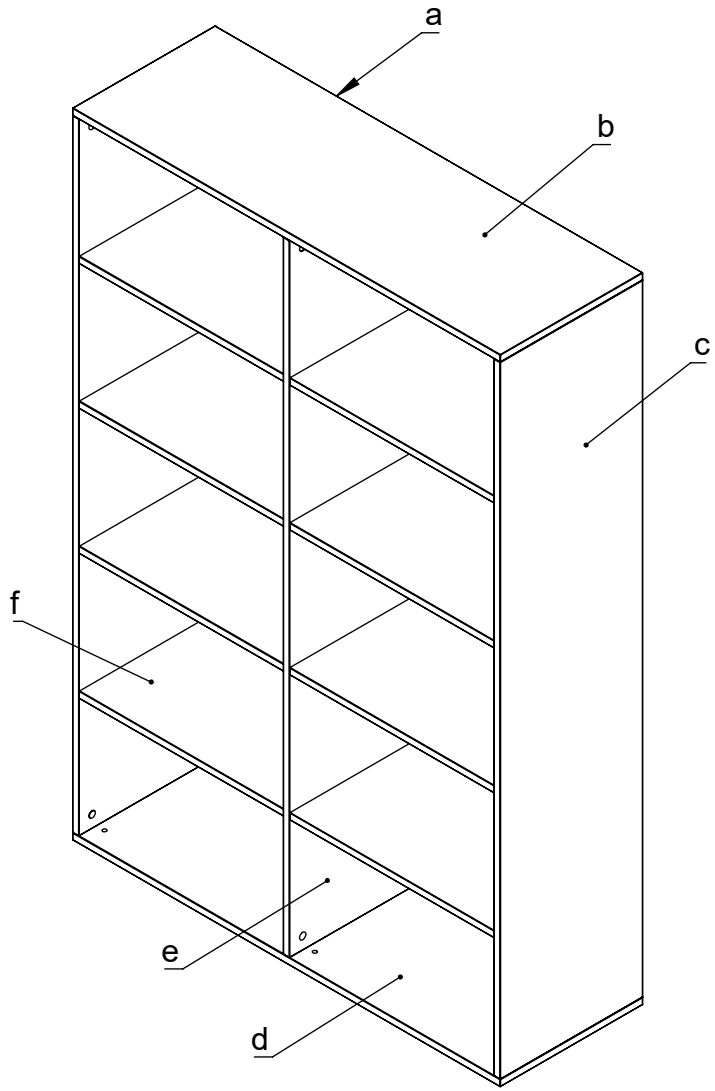


C5N120

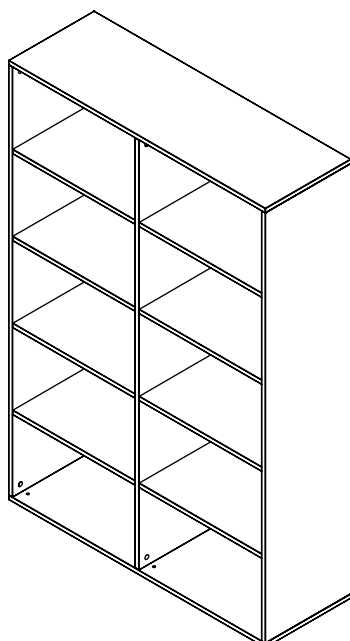


EN *Configuration depends on order option
 DE *Die Konfiguration hängt davon der Bestelloption ab
 FR *La configuration dépend de l'option de commande



1

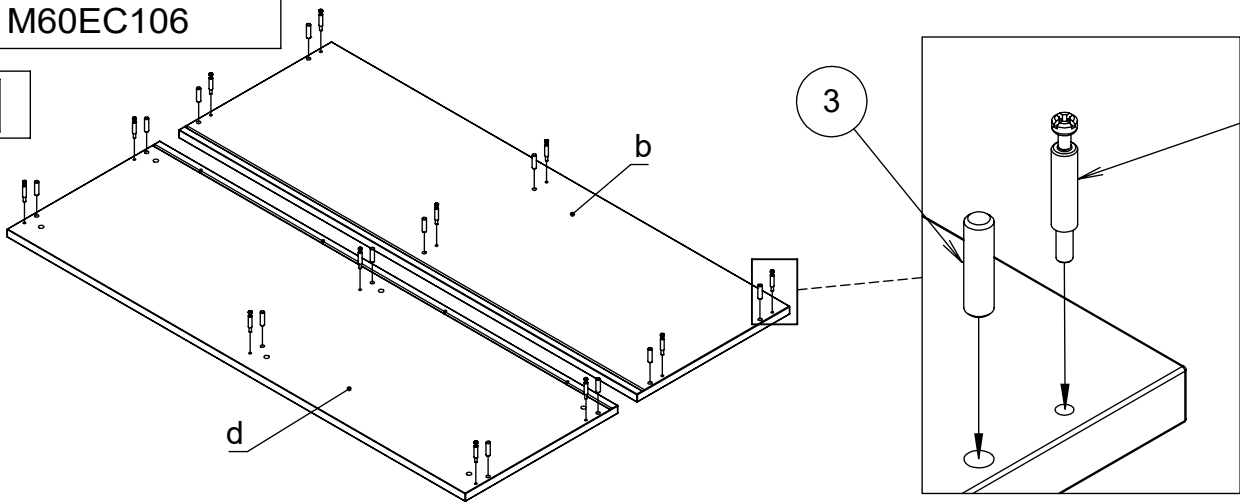



2

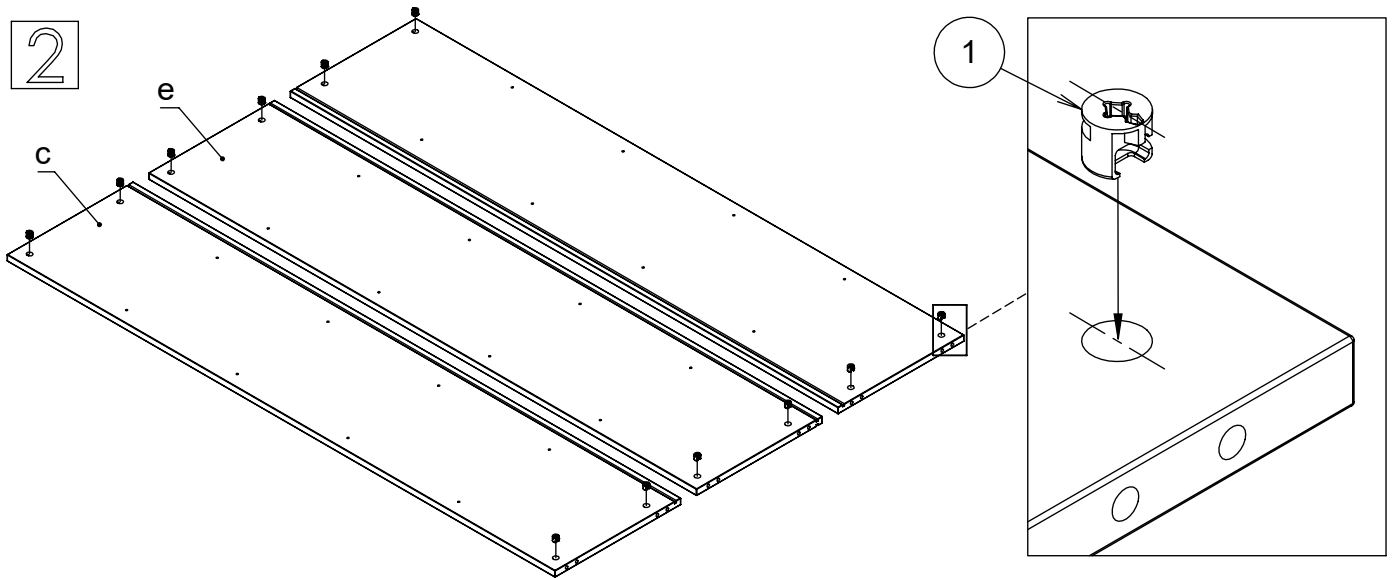




3

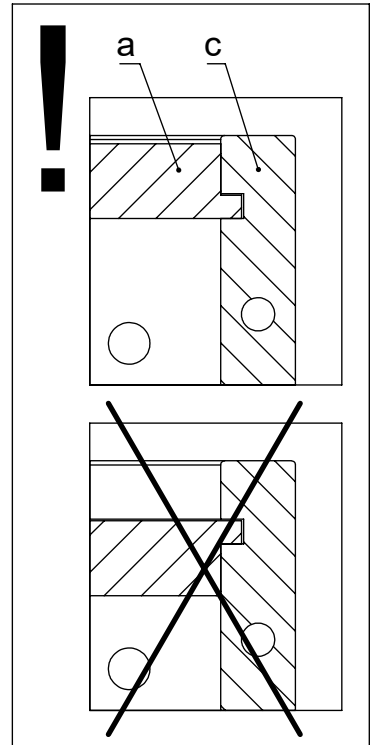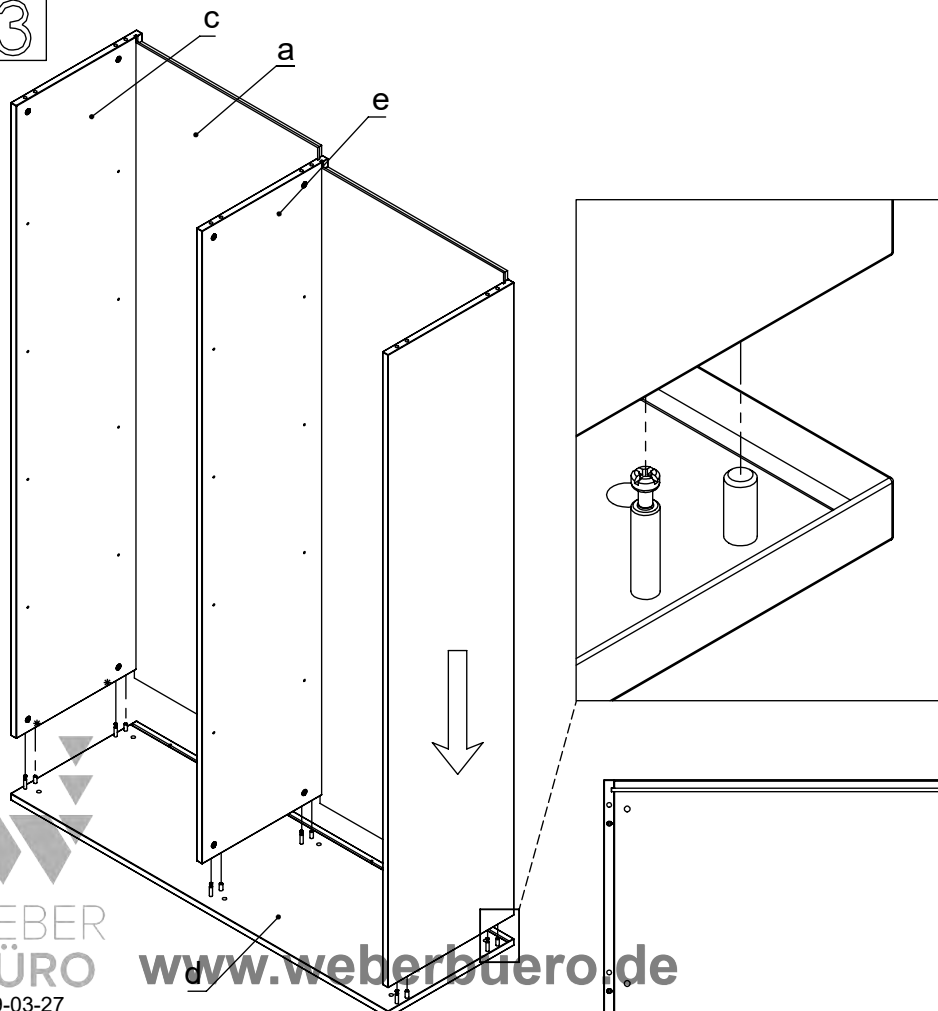




4

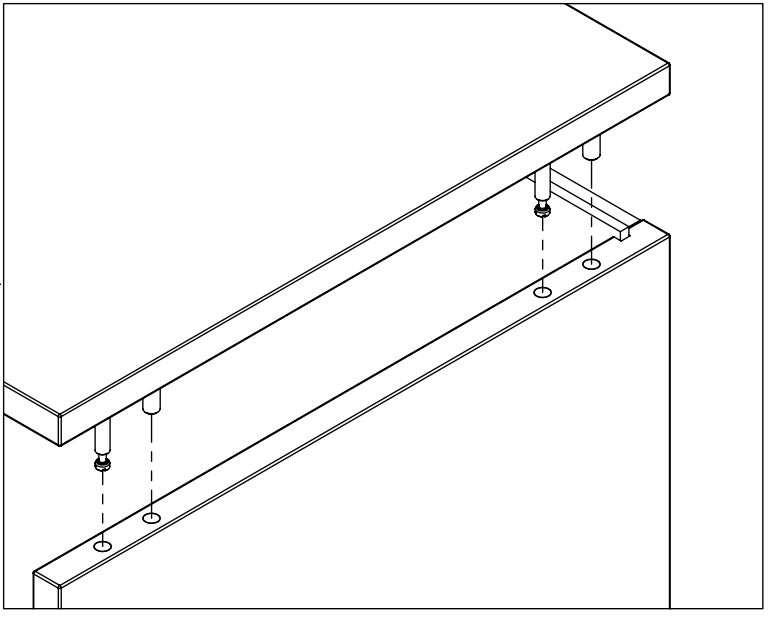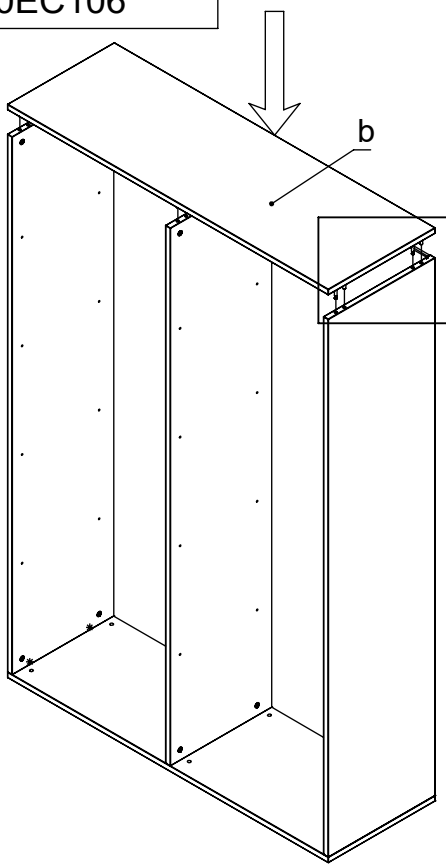



5

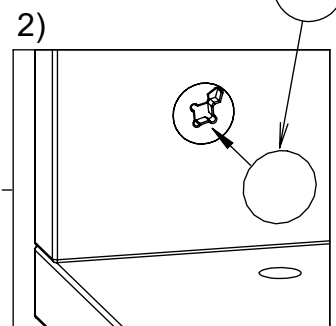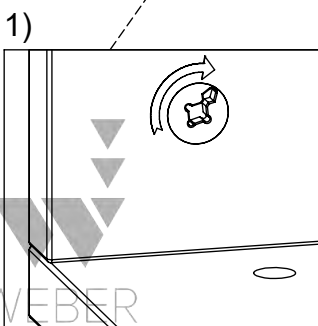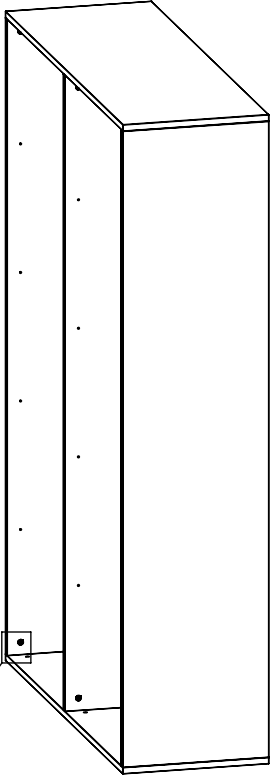

6

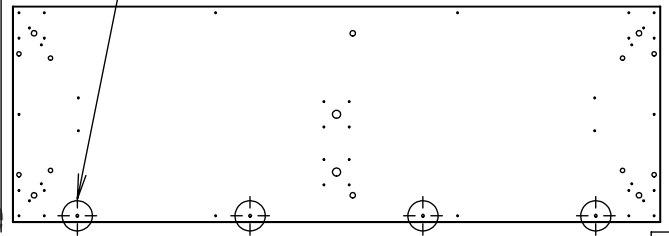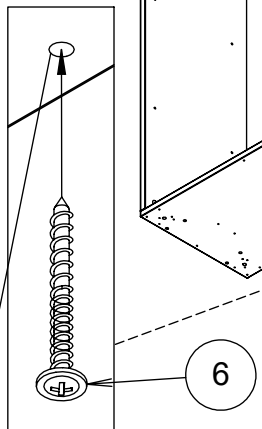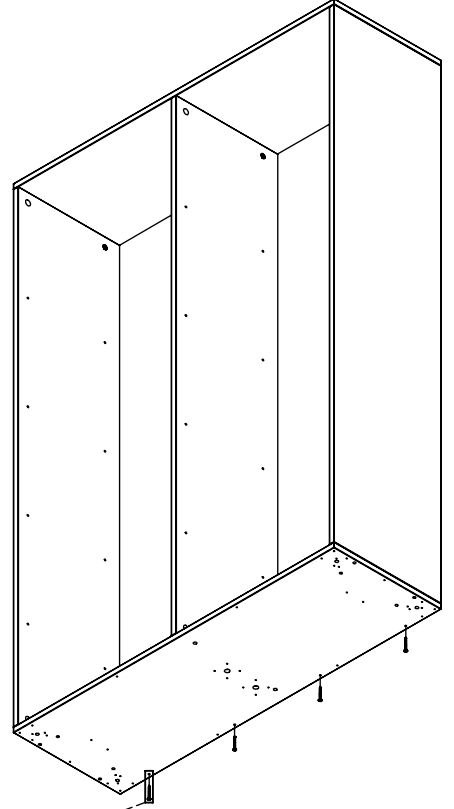


7

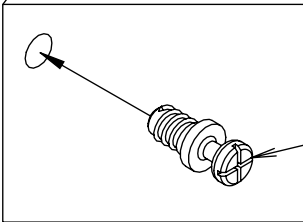
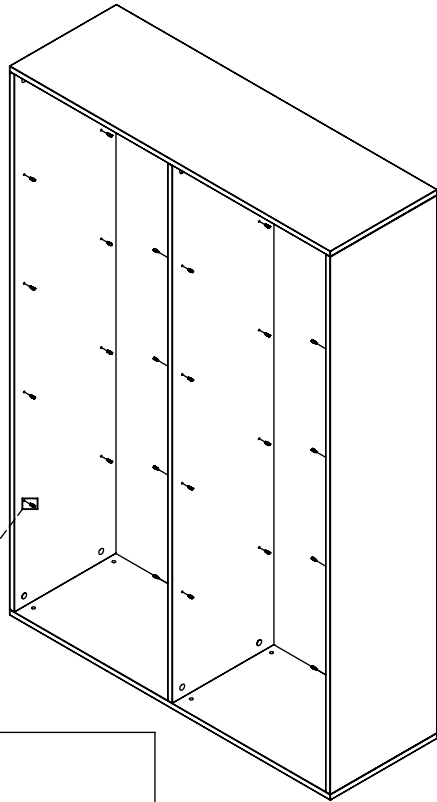


8


8

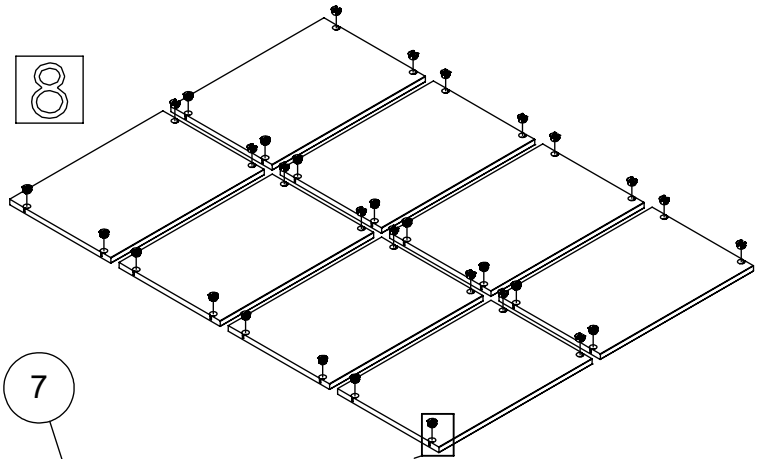


7

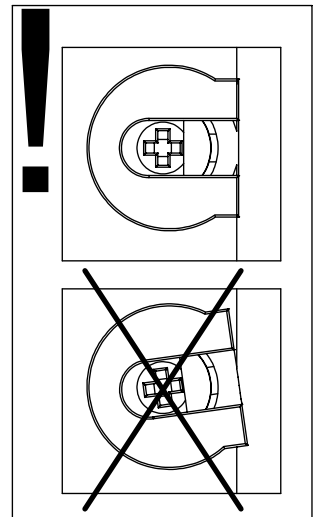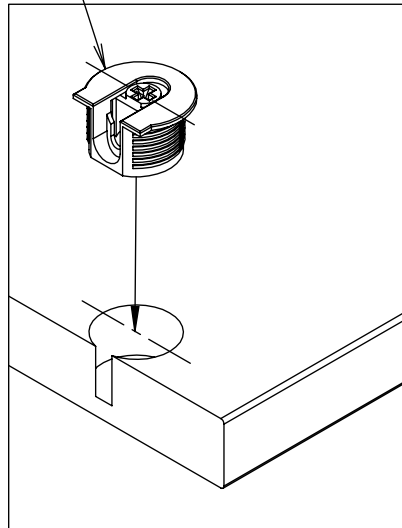


9

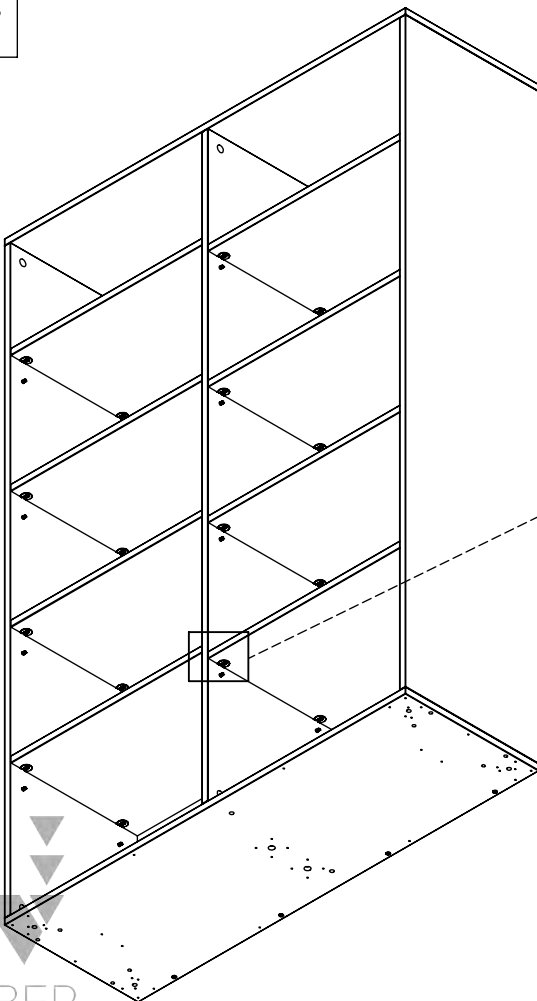

1)

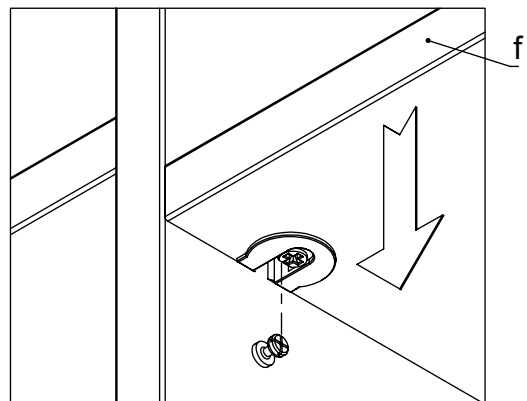

2)

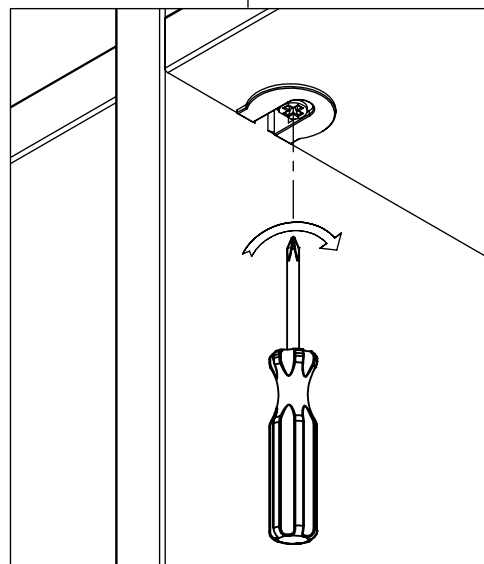

M60EC108 1 / 1

Reikalingi įrankiai:




1



2













3



Инструменты для сборки:

Requiring tools:

Surinkimo schema
Схема сборки
Assembling scheme

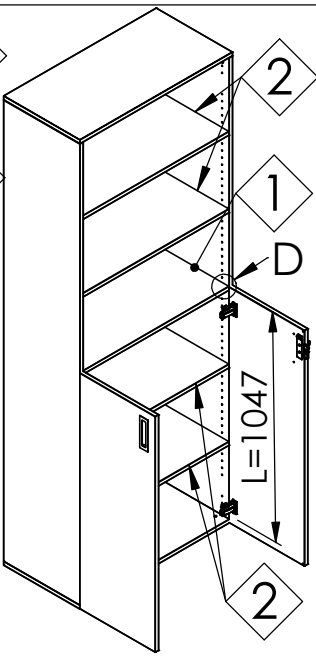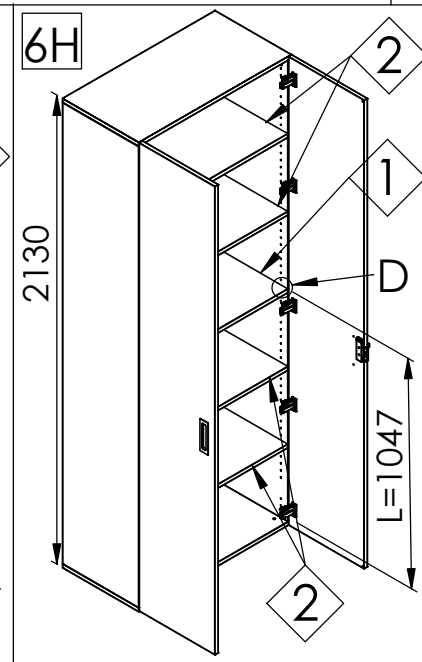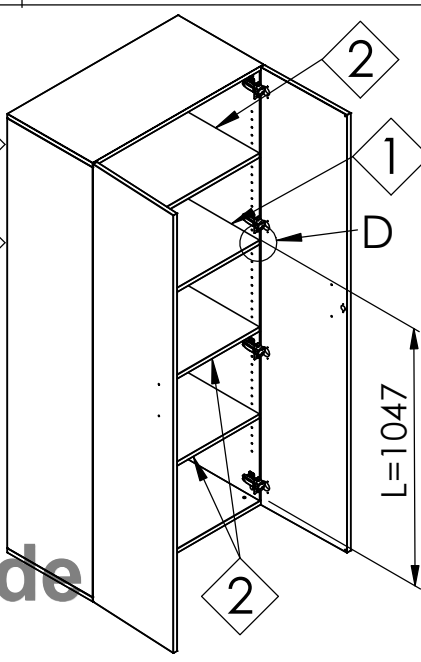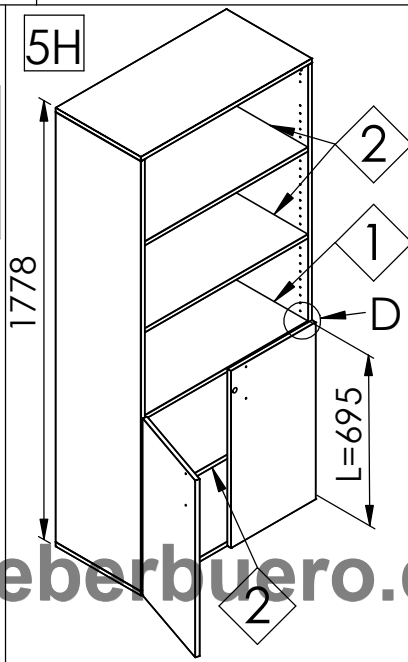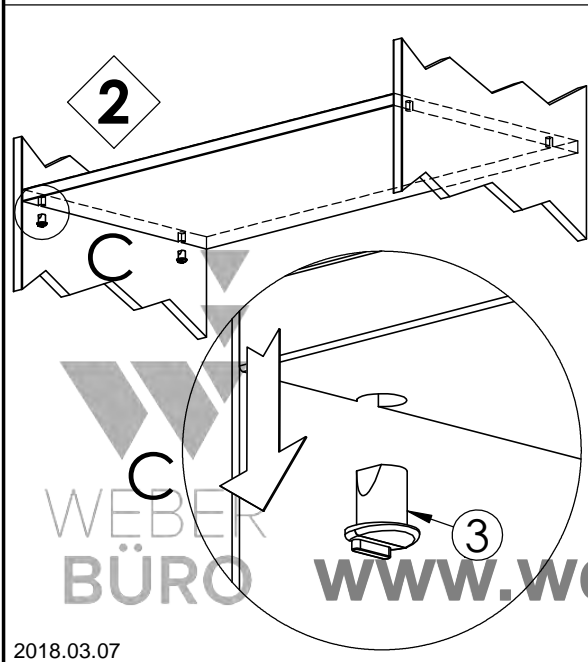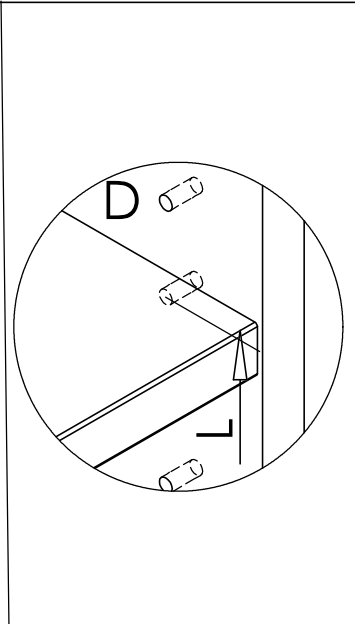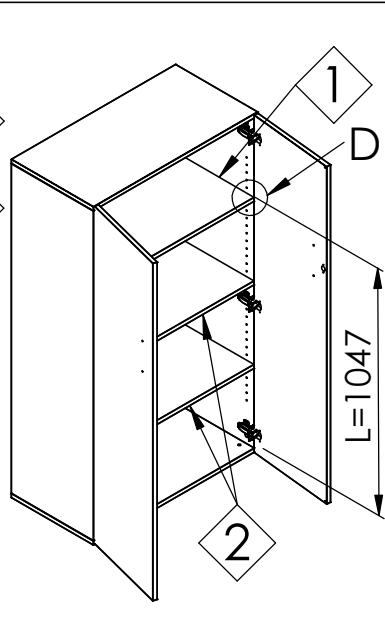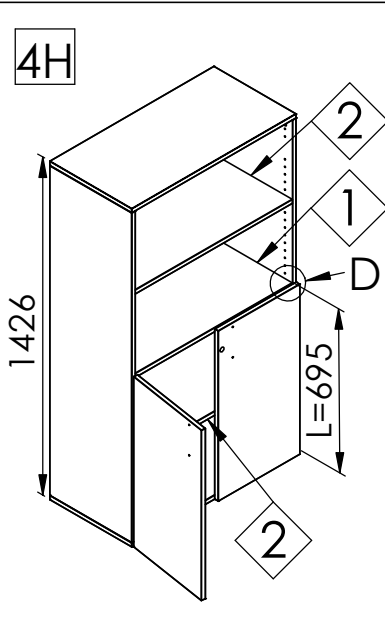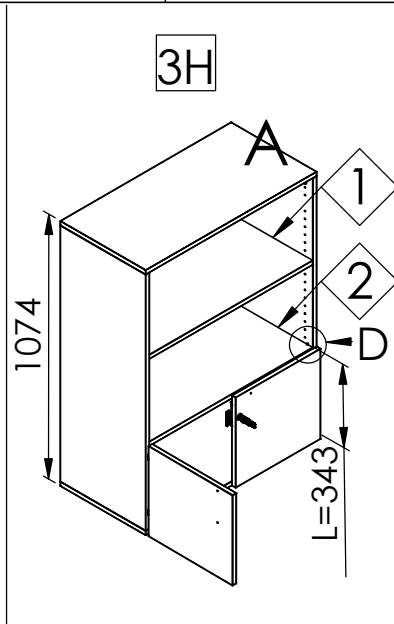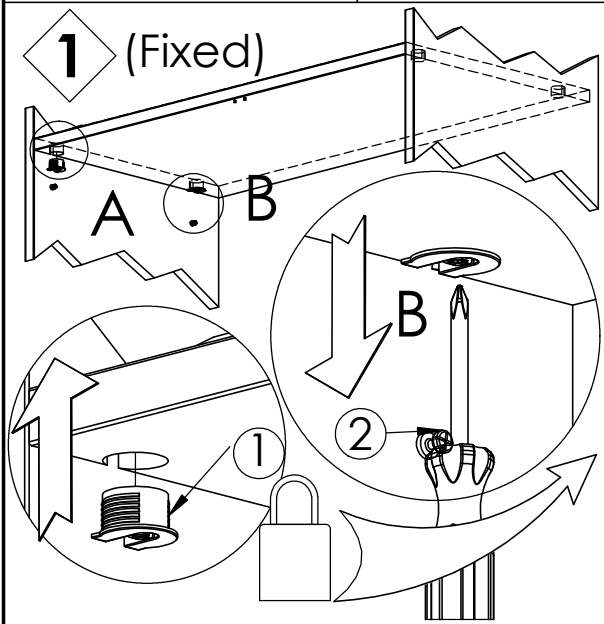

WEBER
BÜRO

www.weberbuero.de


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

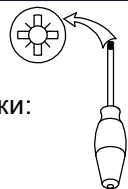


1




2



3

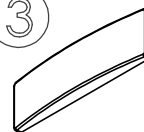


4

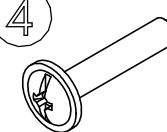


Surinkimo schema
Схема сборки
Assembling scheme


1

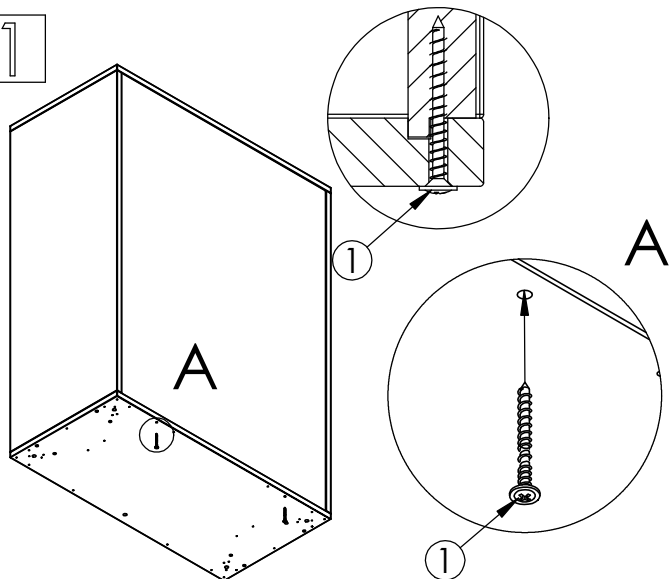


Attention! COZ053

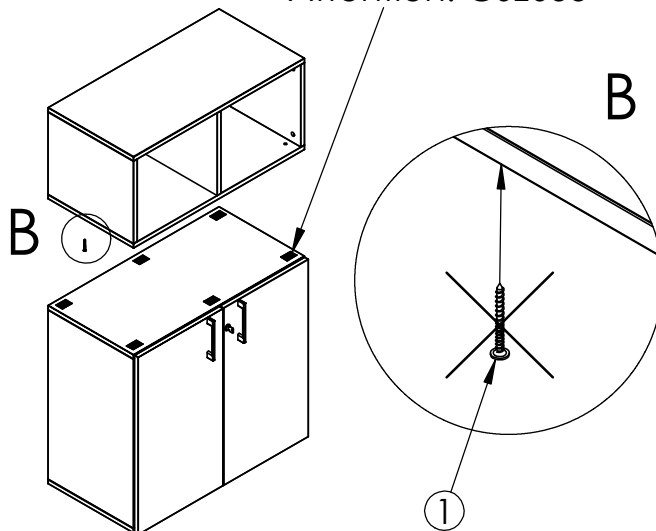


2

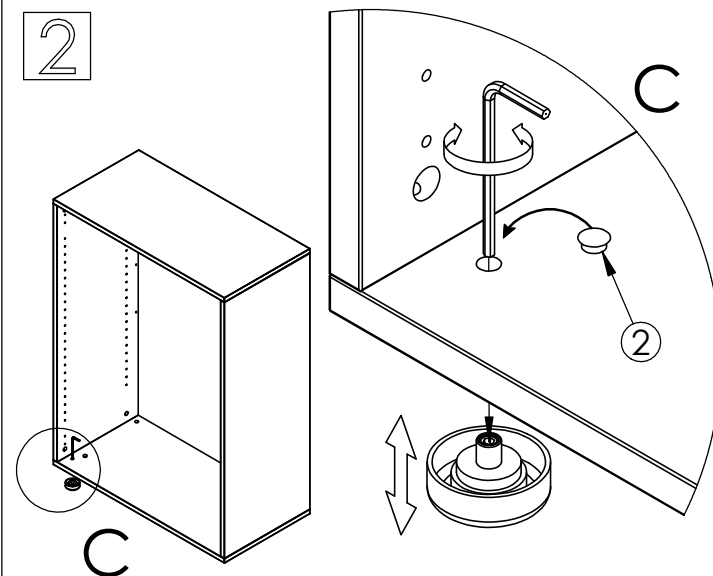

3

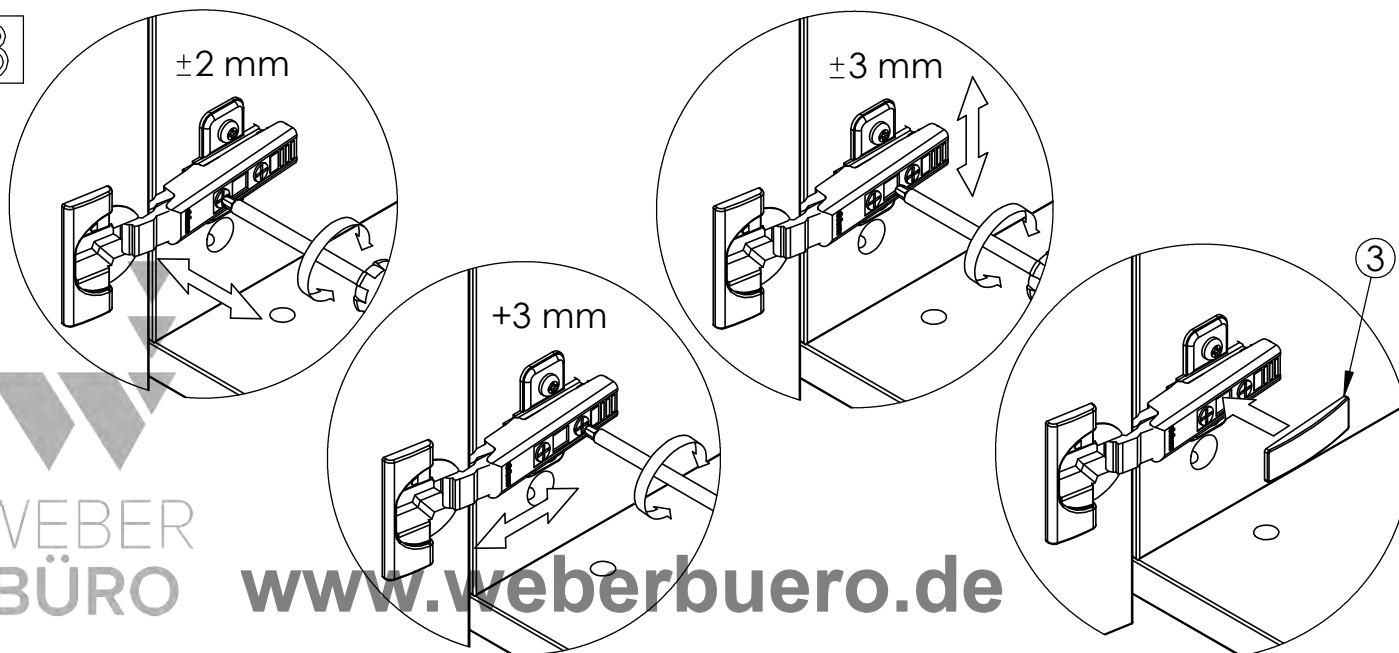

4

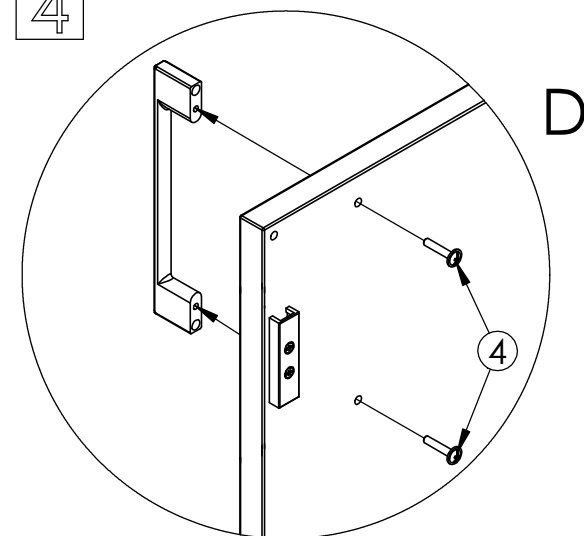

WEBER
BÜRO

www.weberbuero.de