


M60EK013

1/1

Surinkimo schema  
Схема сборки  
Assembling scheme

Reikalingi įrankiai:

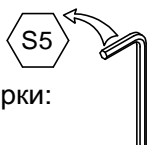


DIN911

Инструменты для сборки:


Requiring tools:

M6x30

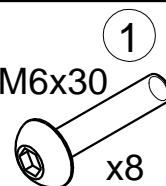


x8

I

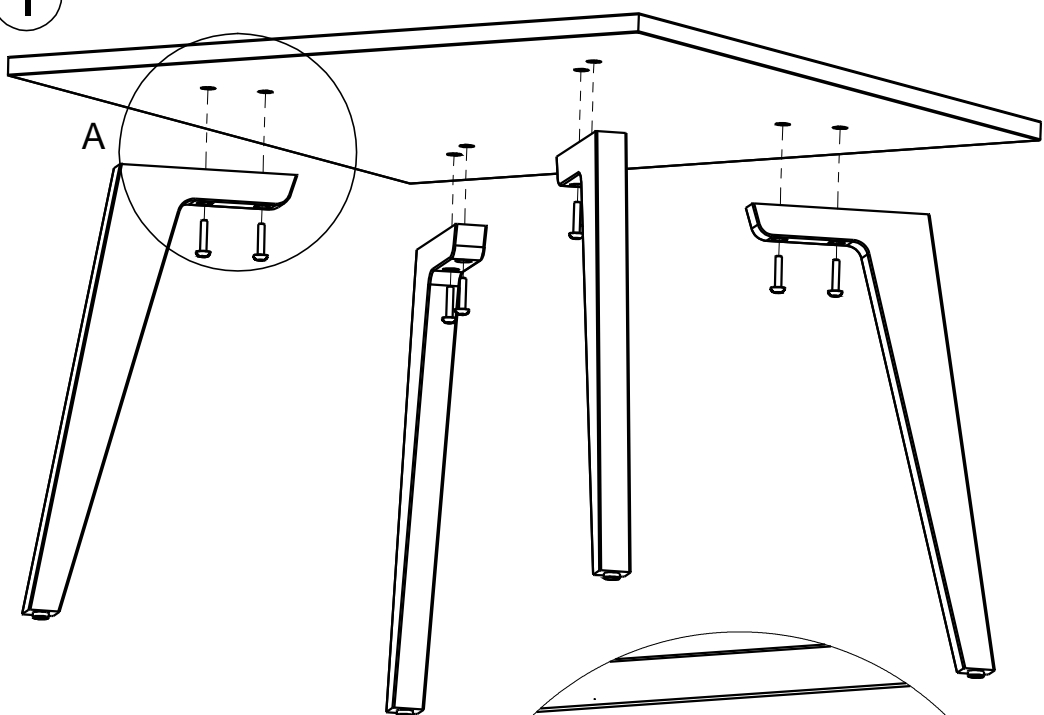

II

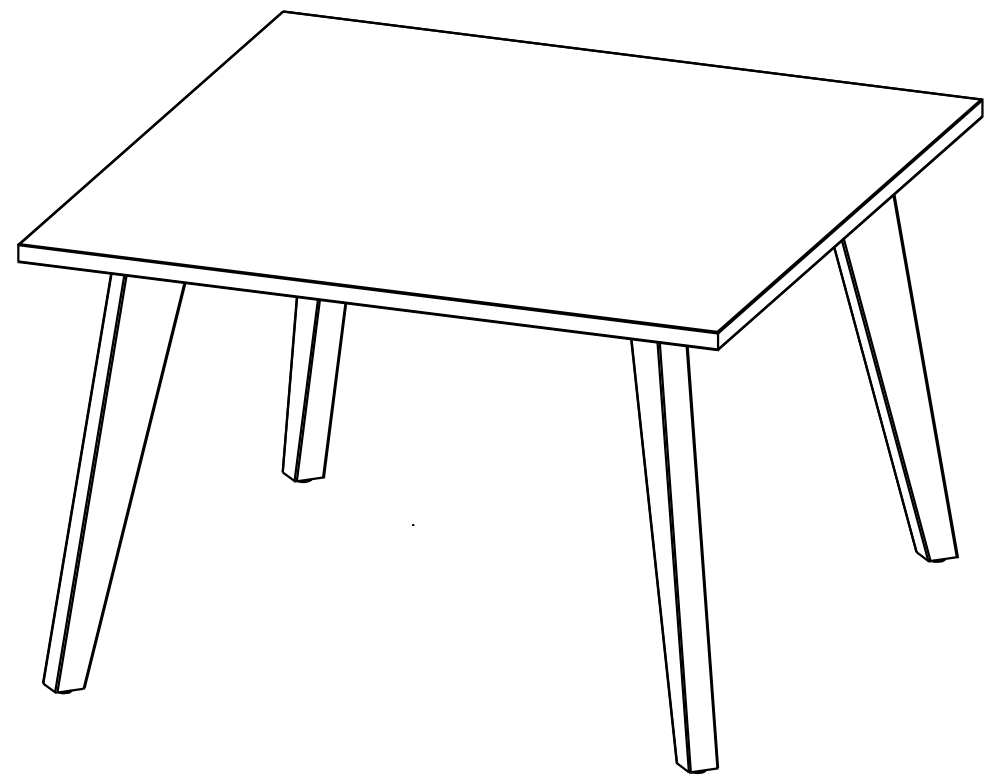

WEBER  
BÜRO

[www.weberbuero.de](http://www.weberbuero.de)

2016.03.15

CZZ701