



# M60EN193

1/1

Reikalingi įrankiai:


Инструменты для сборки:

Requiring tools:

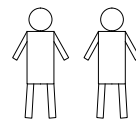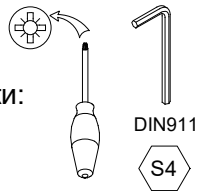

Pertvaros surinkimas  
Сборка перегородки  
Screen assembly

①

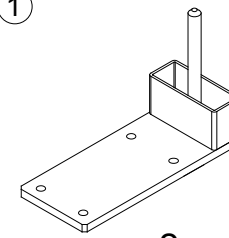

x2

②





x8

③





x4


1

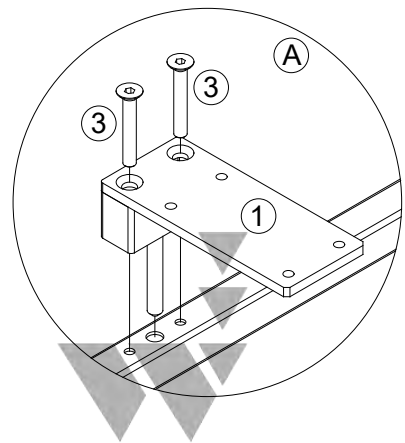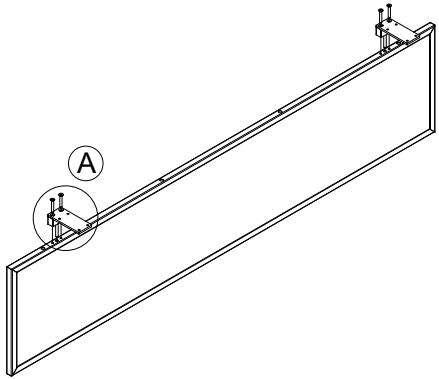

2

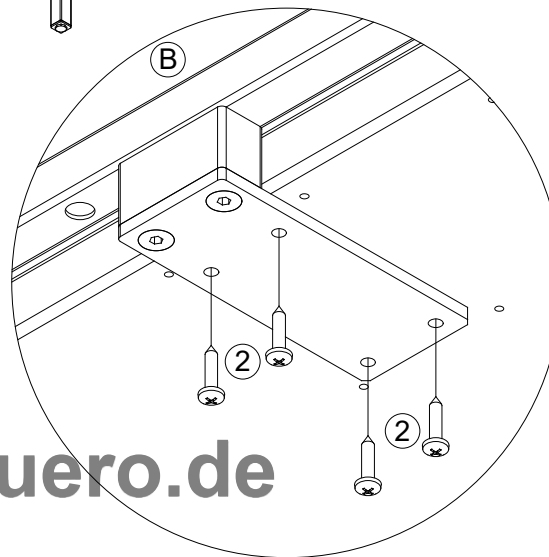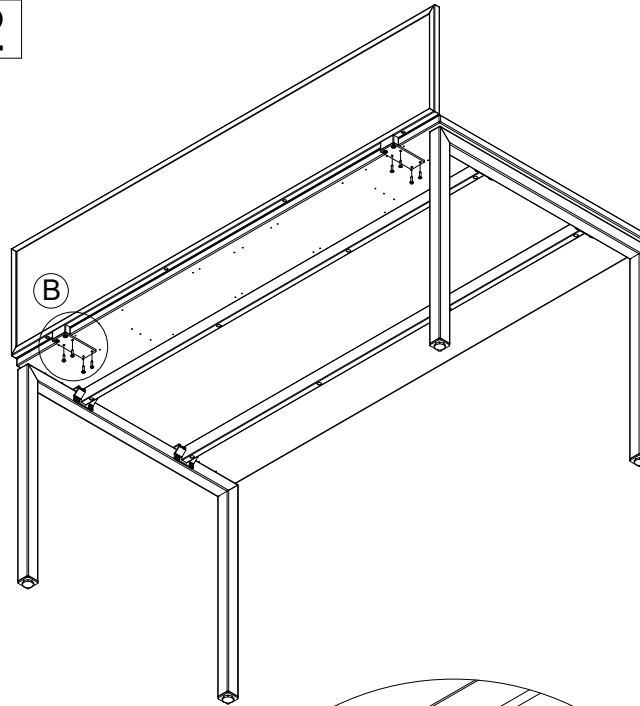

3

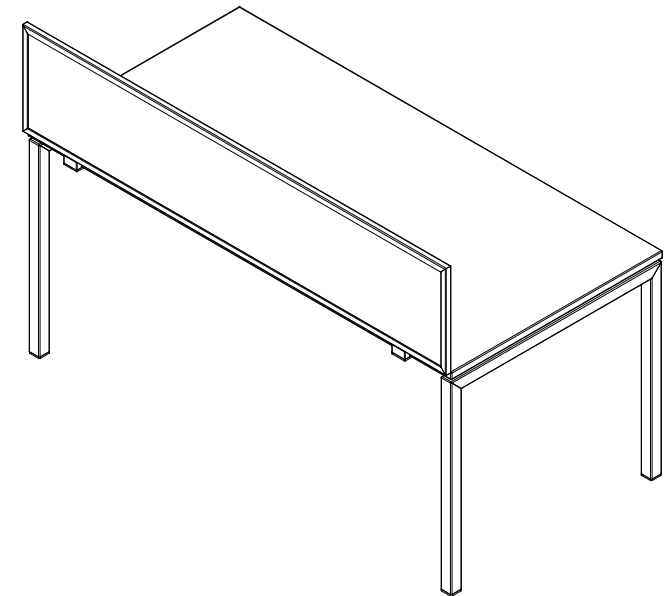

WEBER  
BÜRO

[www.weberbuero.de](http://www.weberbuero.de)

G4A292  
G4A293  
G4A294  
G4A295