
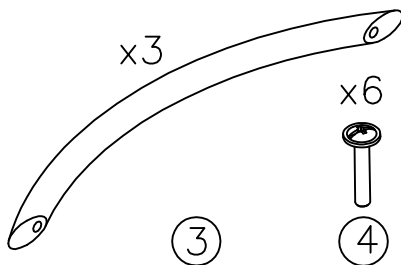





Surinkimo schema

Assembling scheme


Схема сборки

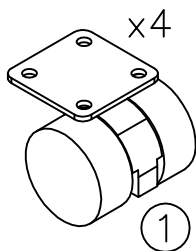

PUR635

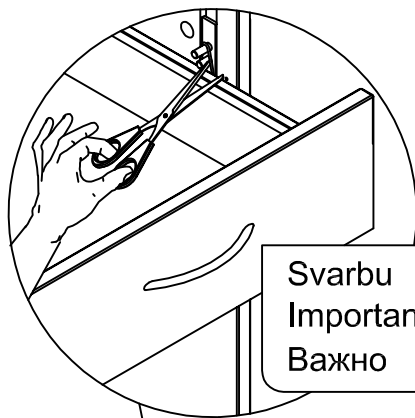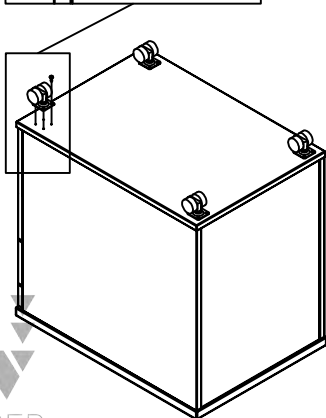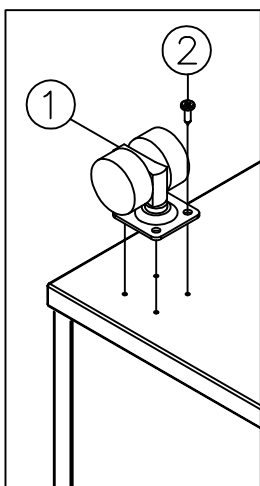

Svarbu  
Important  
Важно

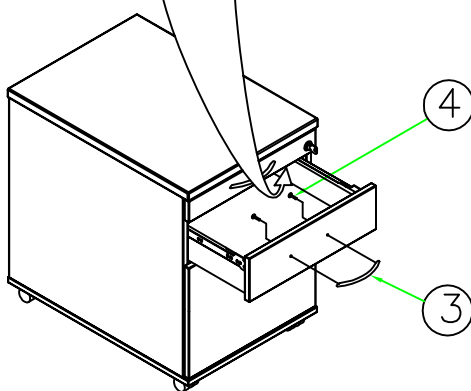

WEBER  
BÜRO

[www.weberbuero.de](http://www.weberbuero.de)

DATA 06.02.02

M60EZ008