

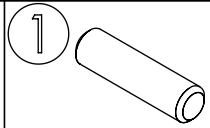
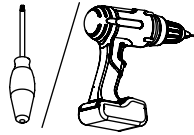


# M60EX053


EN Assembling scheme  
 DE Aufbauanleitung  
 FR Schéma d'assemblage

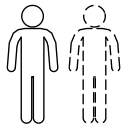


∅8x30  
M42H0001 x12

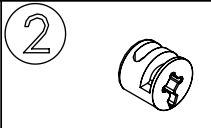


15/18  
M42B0001 x4

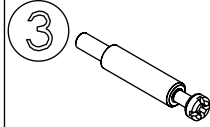


5/11x34  
M42B0022 x4

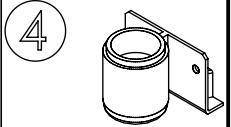


M45C0030 x4

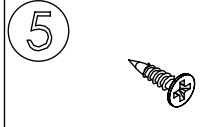




3.5x15  
M42A0012 x16

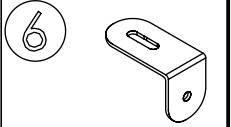




M42J0007 x4

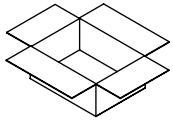



a - x2  
b - x2

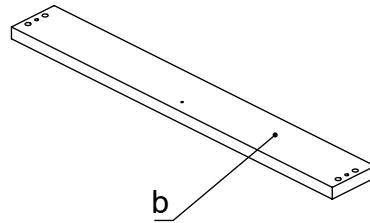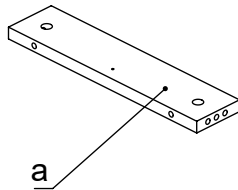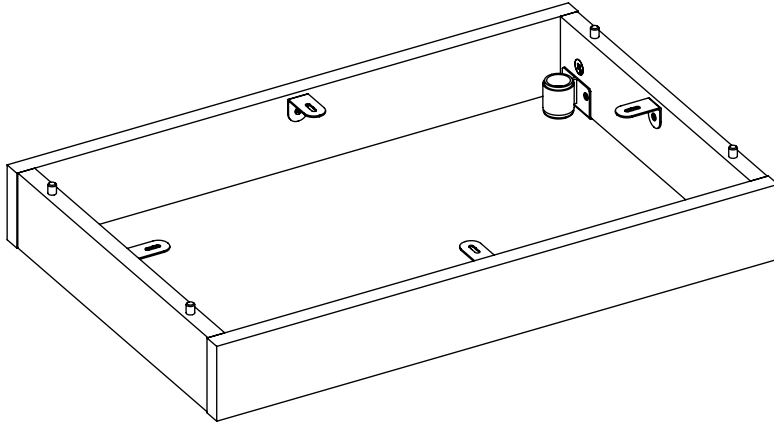

1

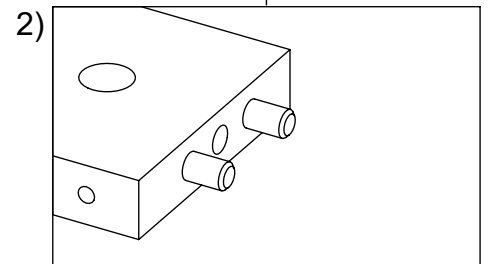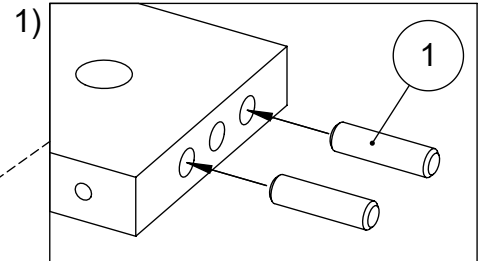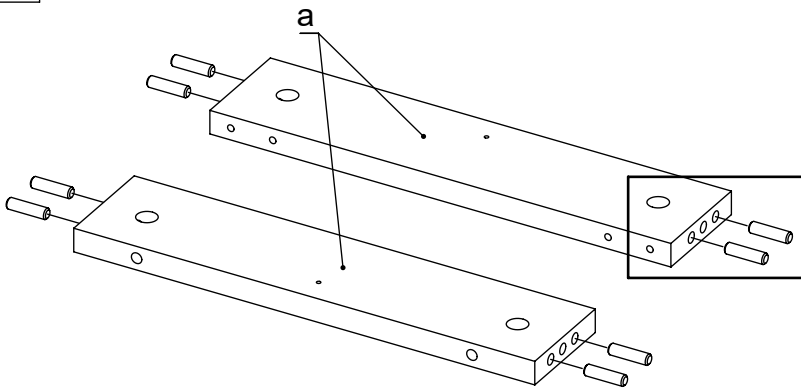


2

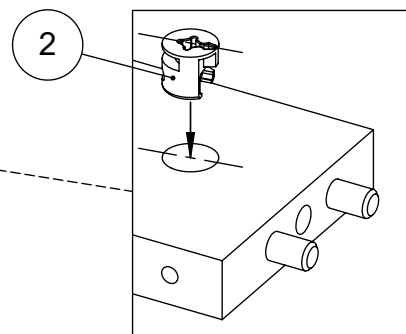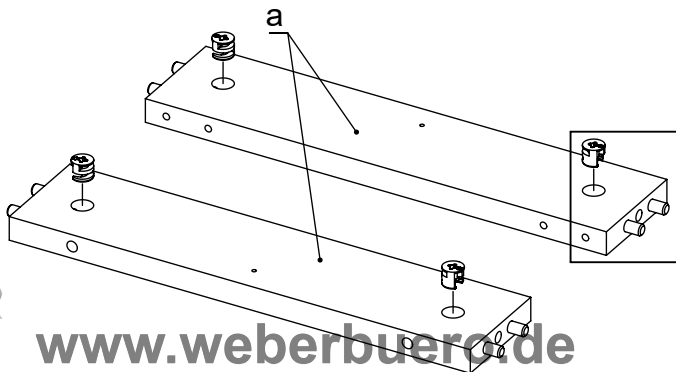


WEBER  
 BÜRO [www.weberbuero.de](http://www.weberbuero.de)

2020-01-17



3

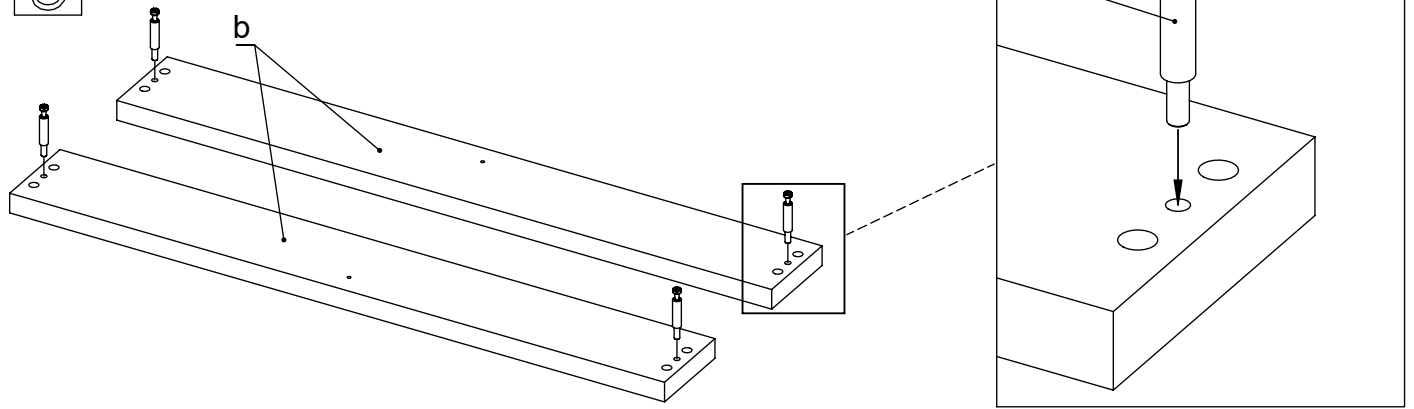




4

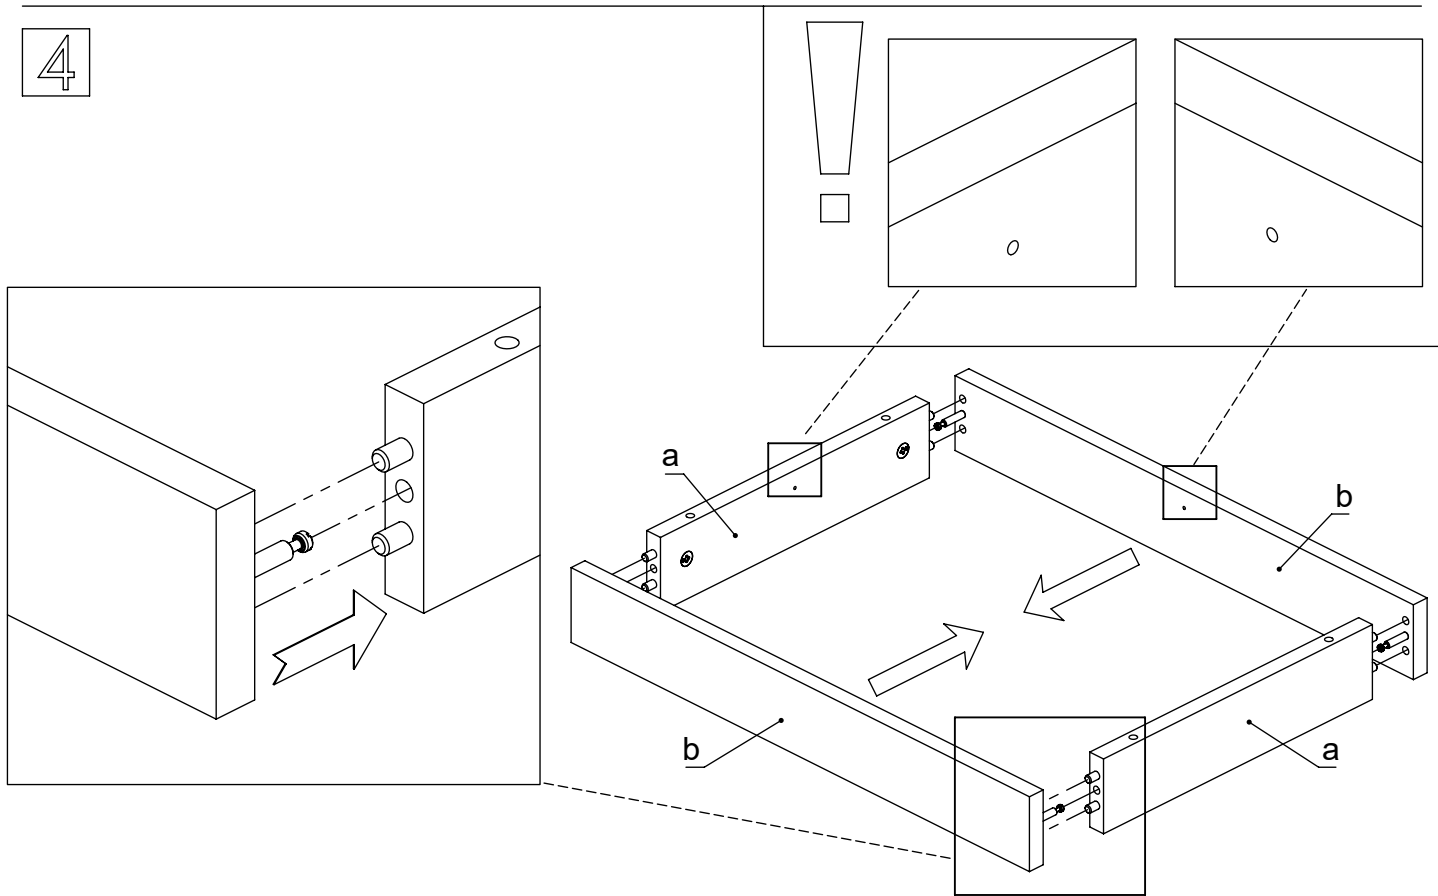



5

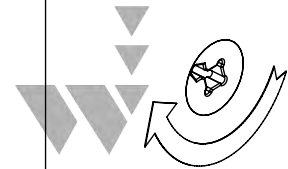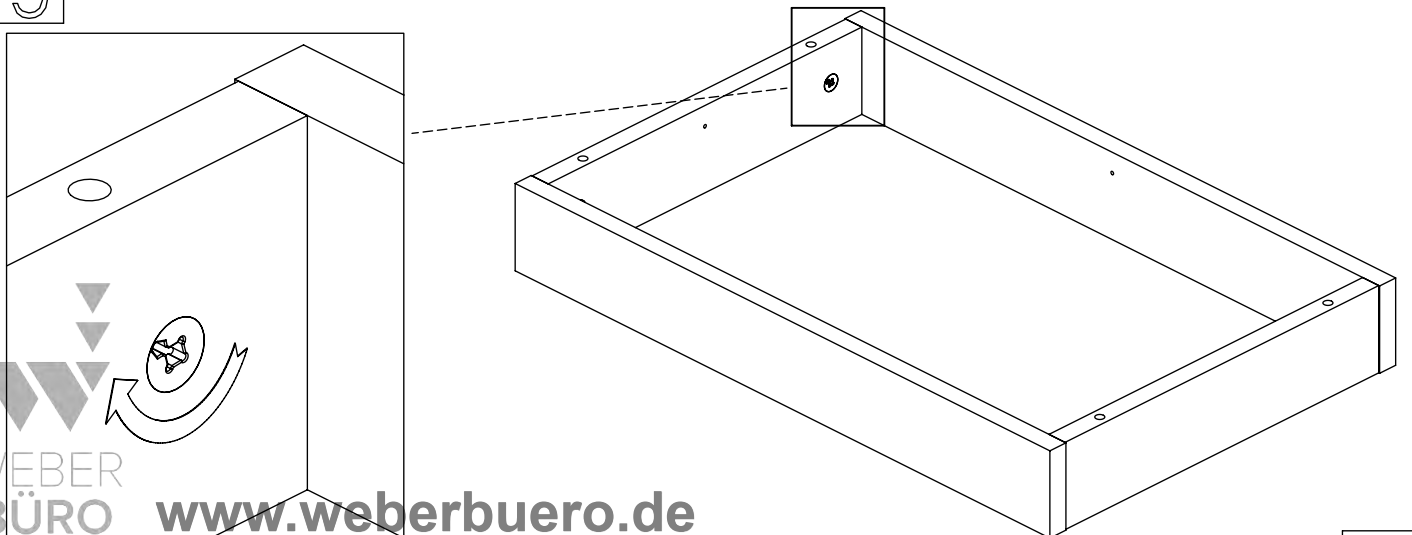



6

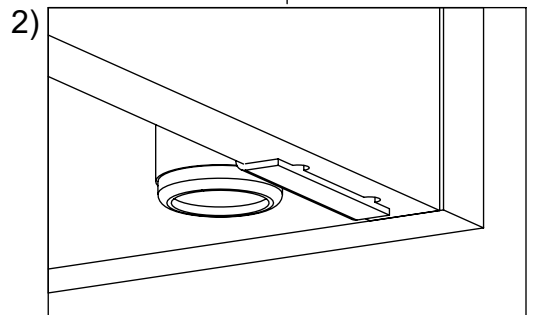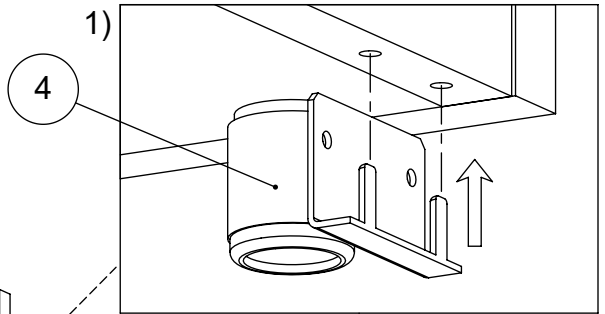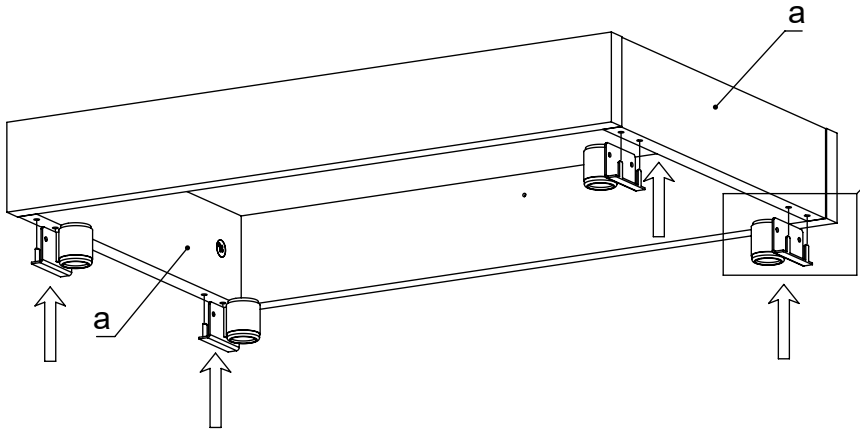



7

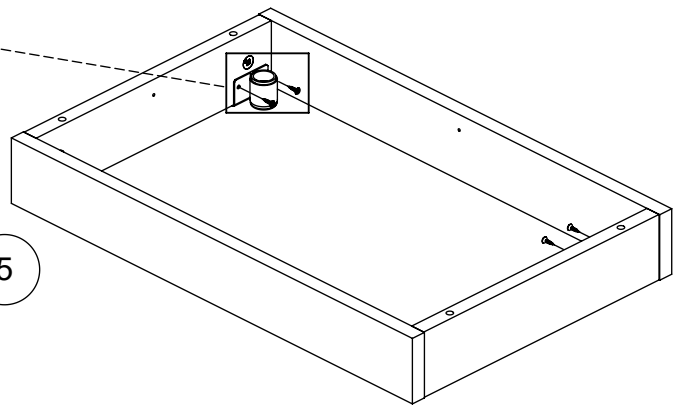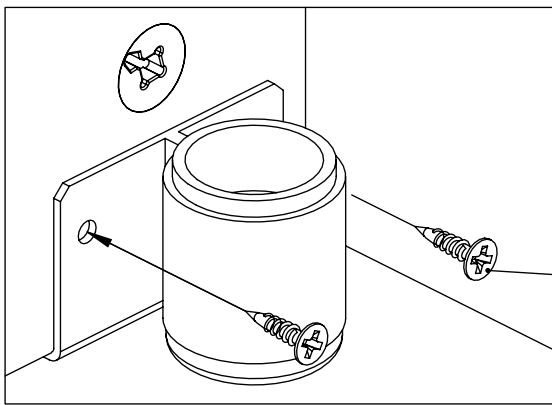


8

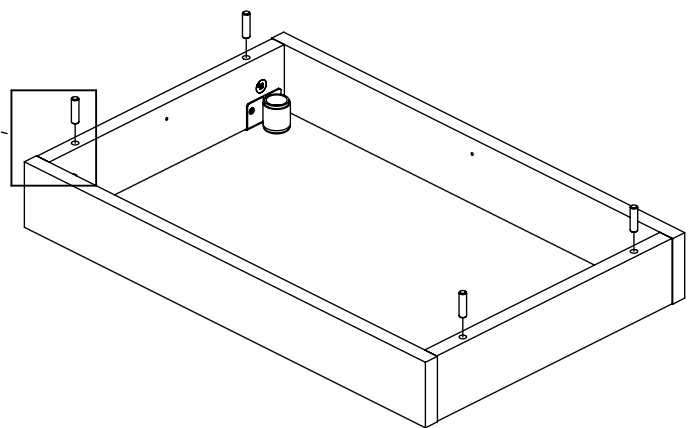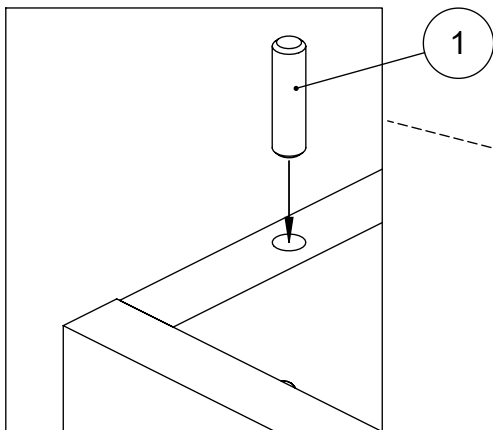


9

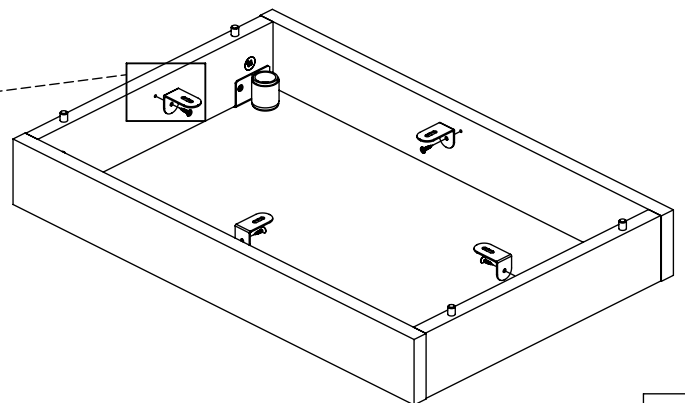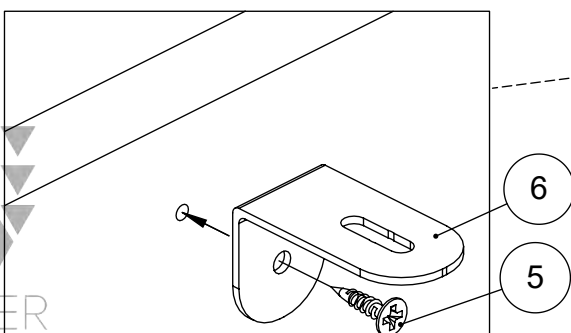


1)

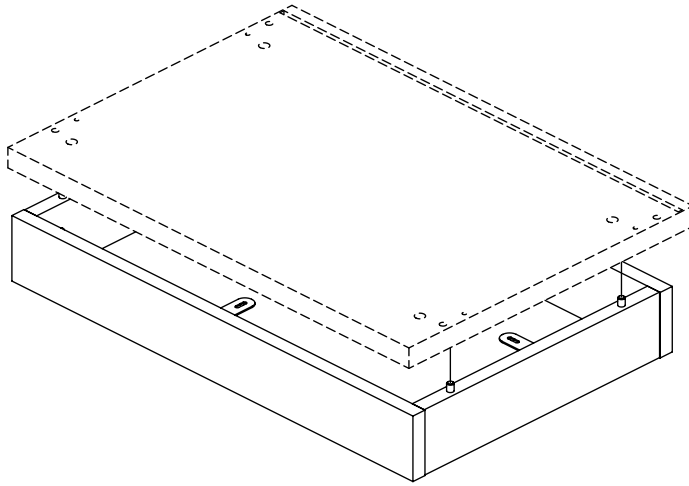

2)

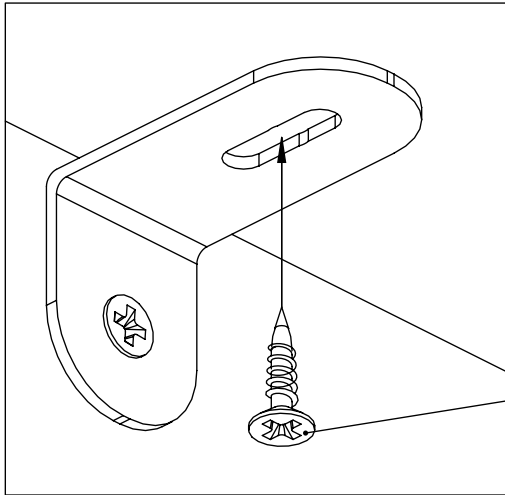



5

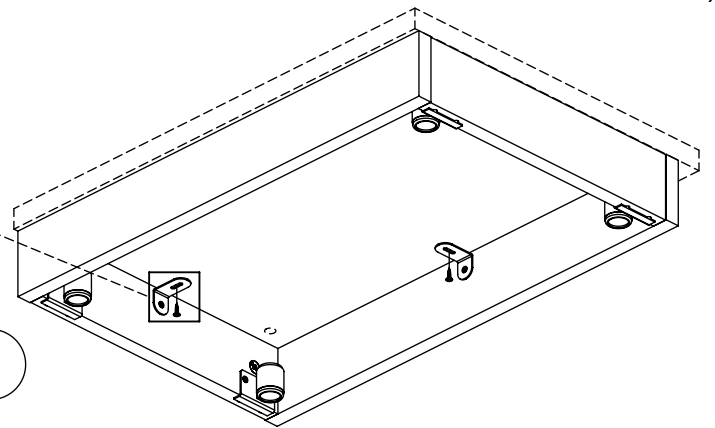


B



1)

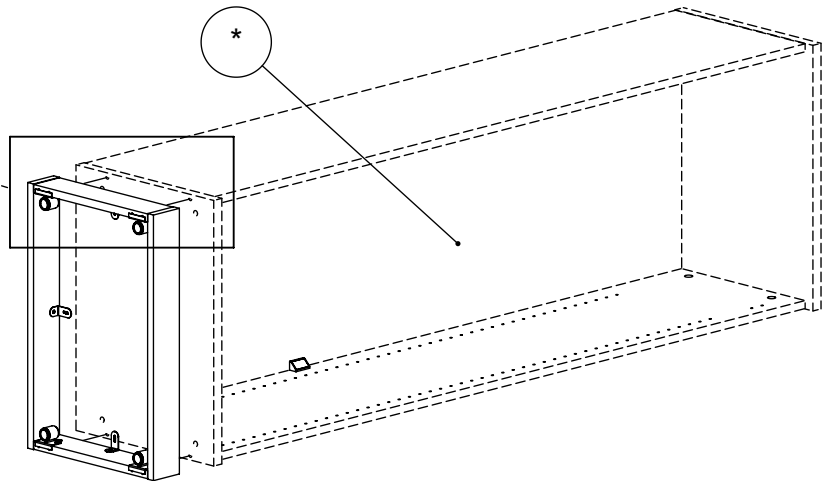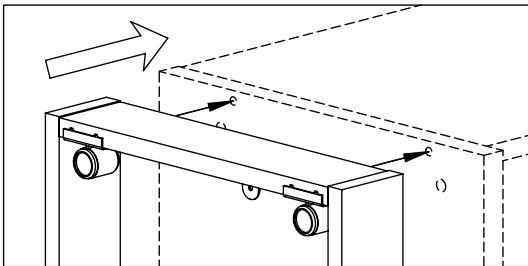

2)

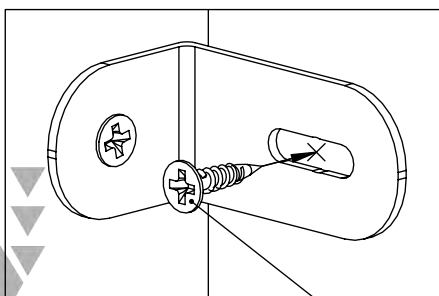

5

