

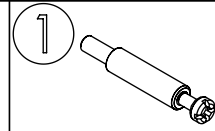
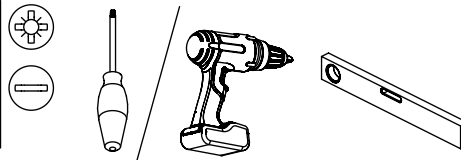


M60EX003

EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage


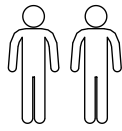


5/11x34
M42B0022 x8

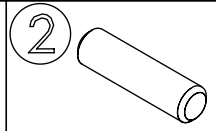


∅8x30
M42H0001 x8


a - x1
 b - x1
 c - x2
 d - x1

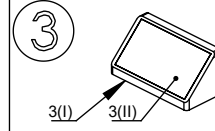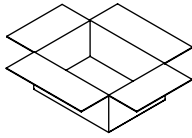


M45A9016 x2

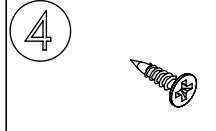


3.5x15
M42A0012 x8

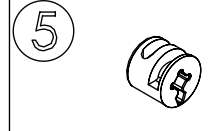






15/18
M42B0001 x8






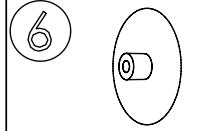


∅4/18
M45A30* x8


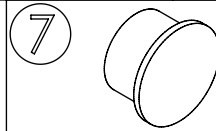


M45A20* x4

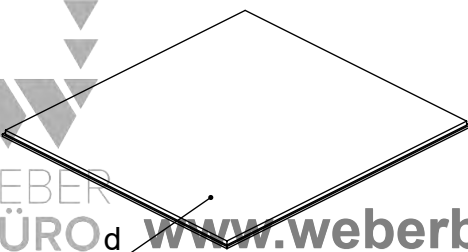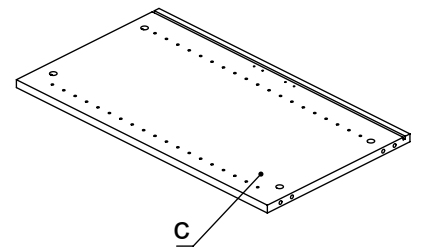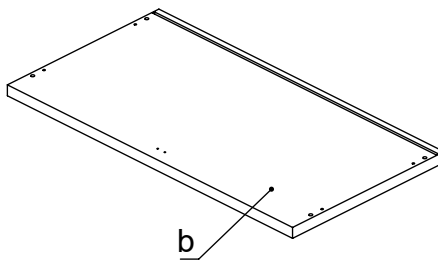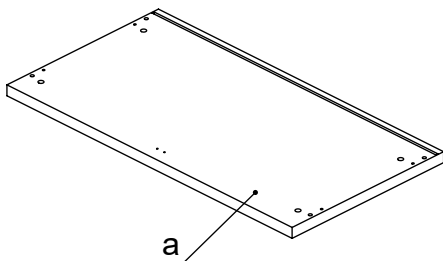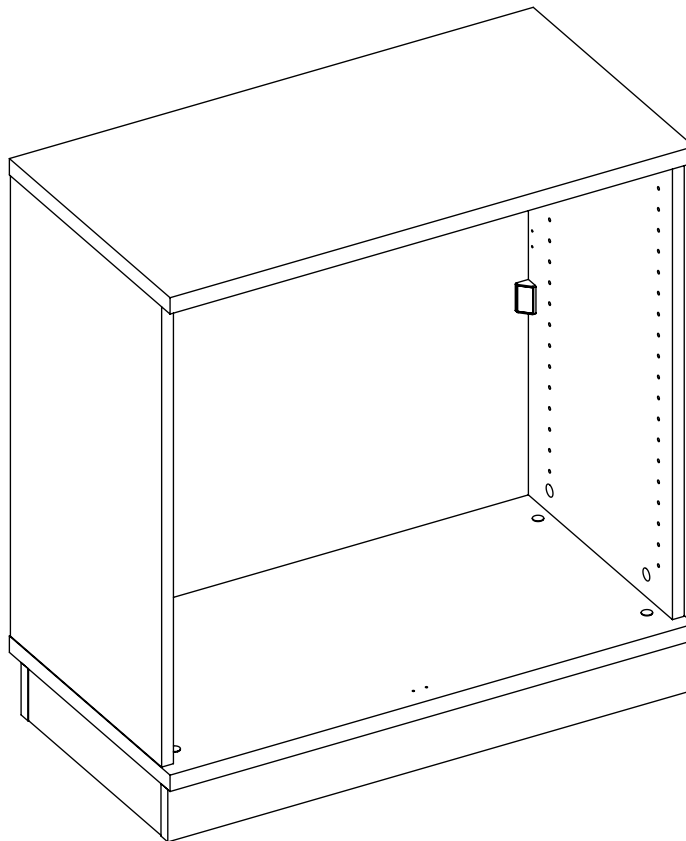


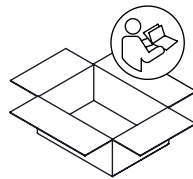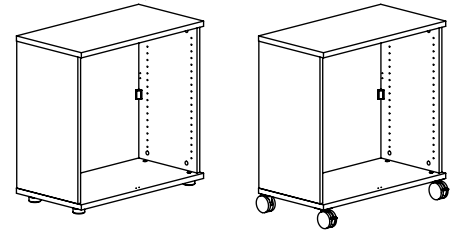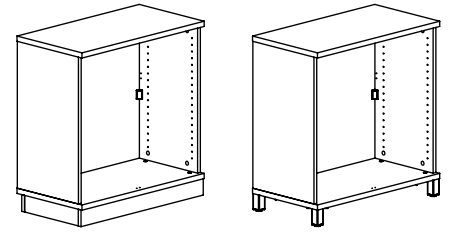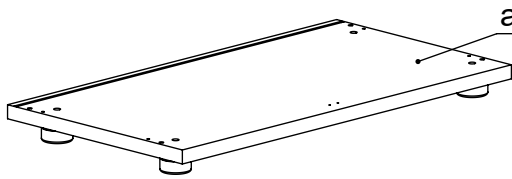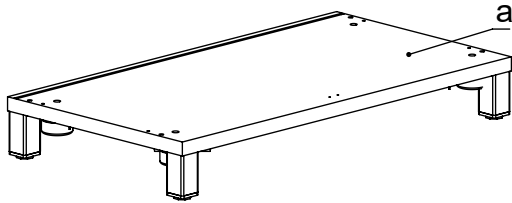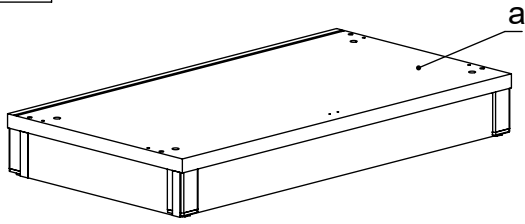


EN	The assembly scheme of base is included in the selected base package
DE	Die Aufbauanleitung zur Befestigung der Möbelbeine ist im entsprechenden Paket
FR	La fiche de montage de la base est incluse dans le colis de la base choisie

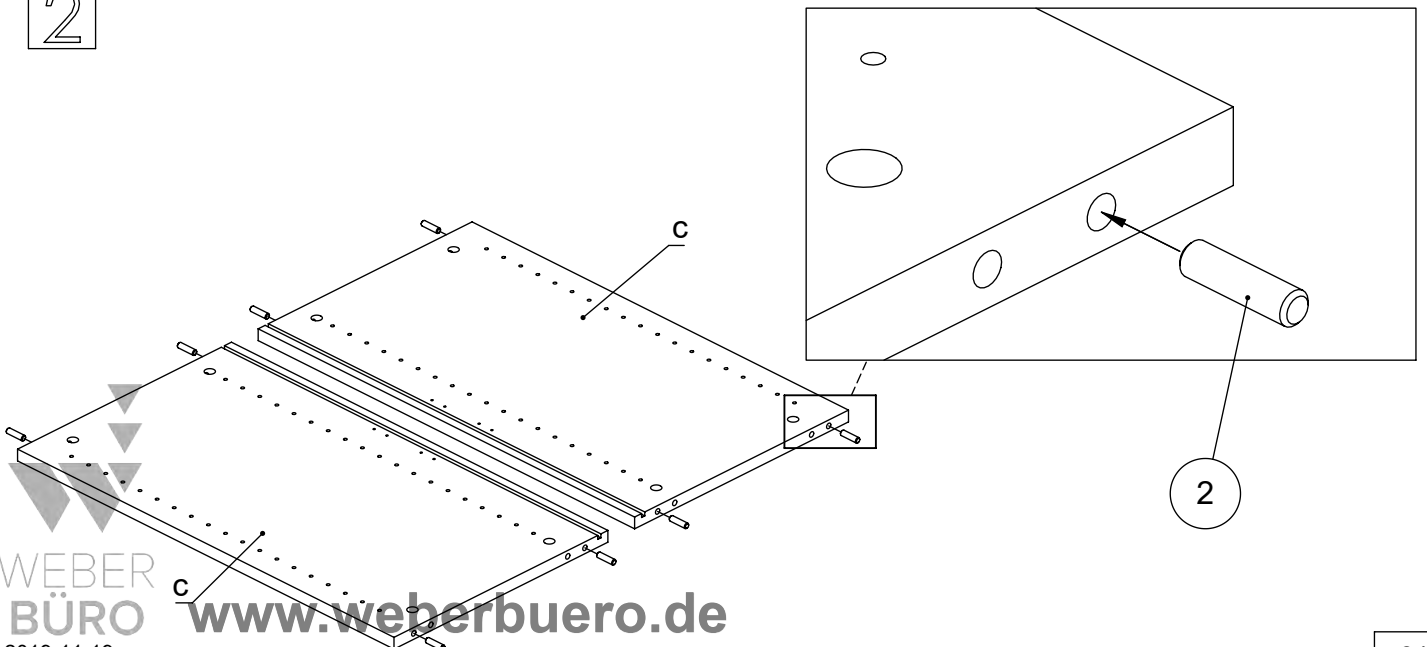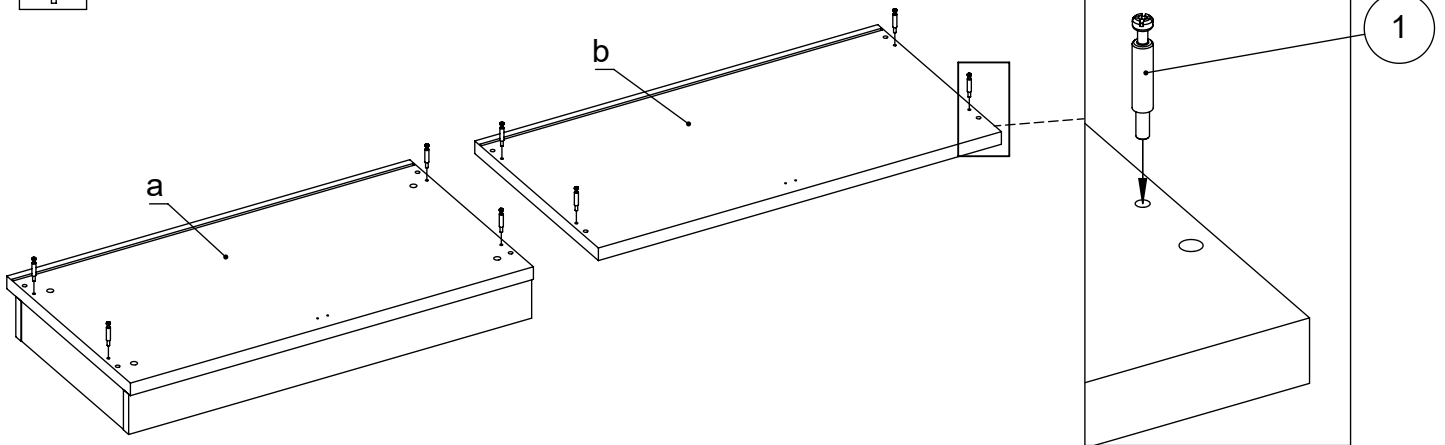



3

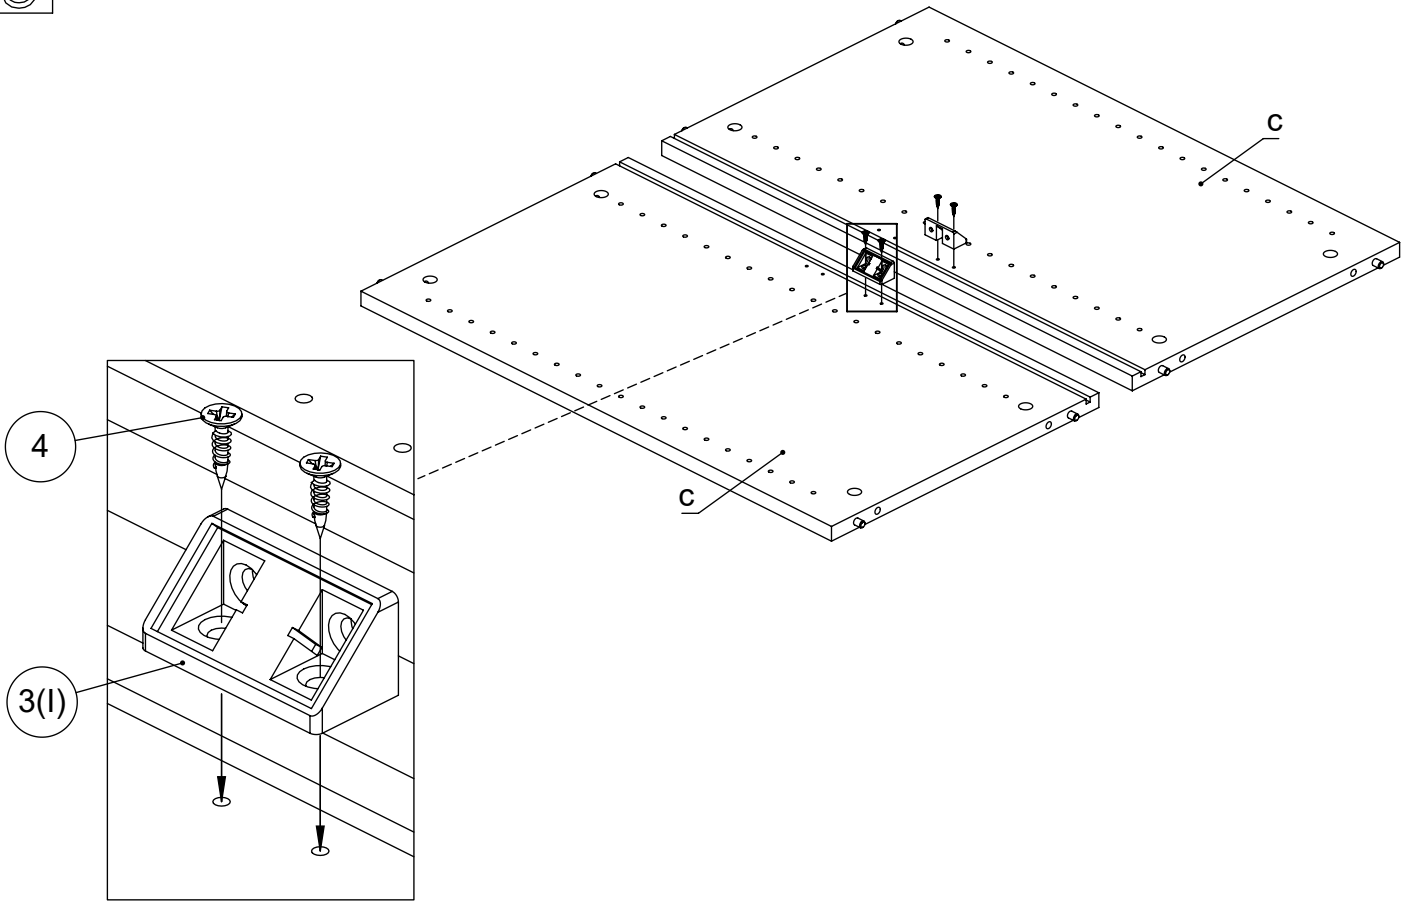


4

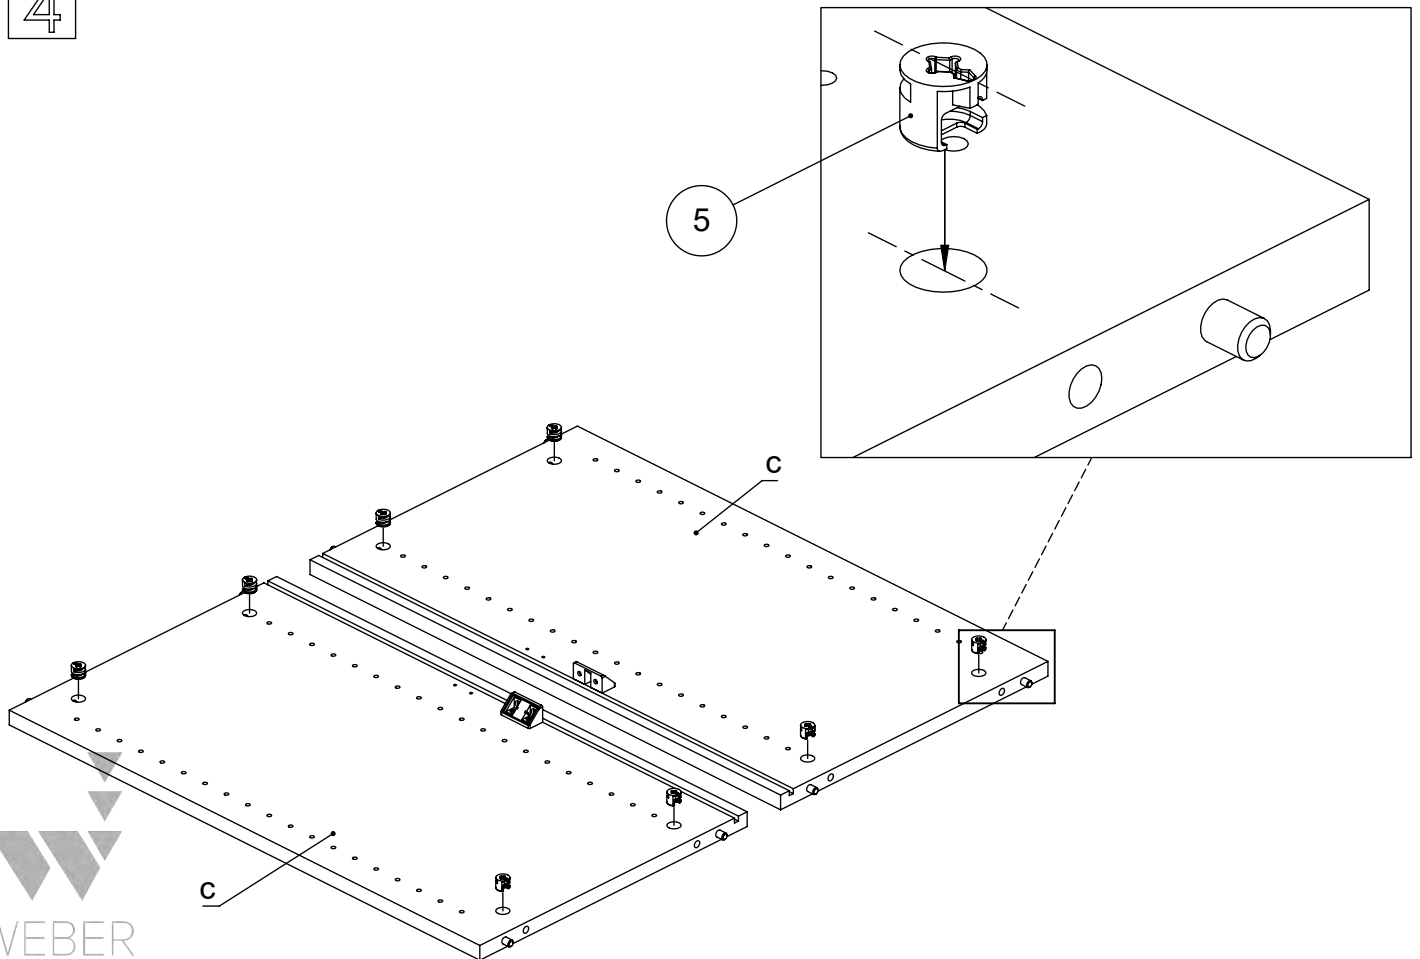


5

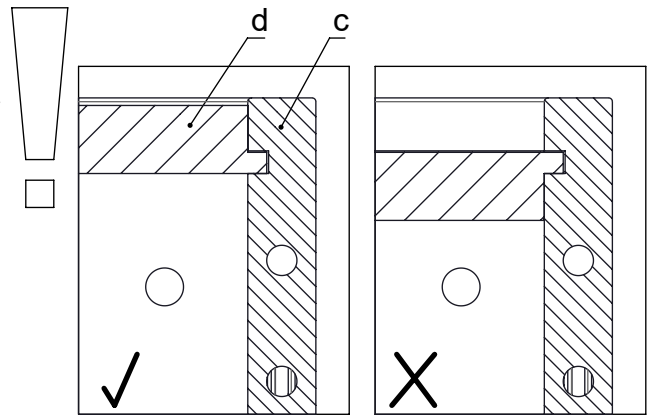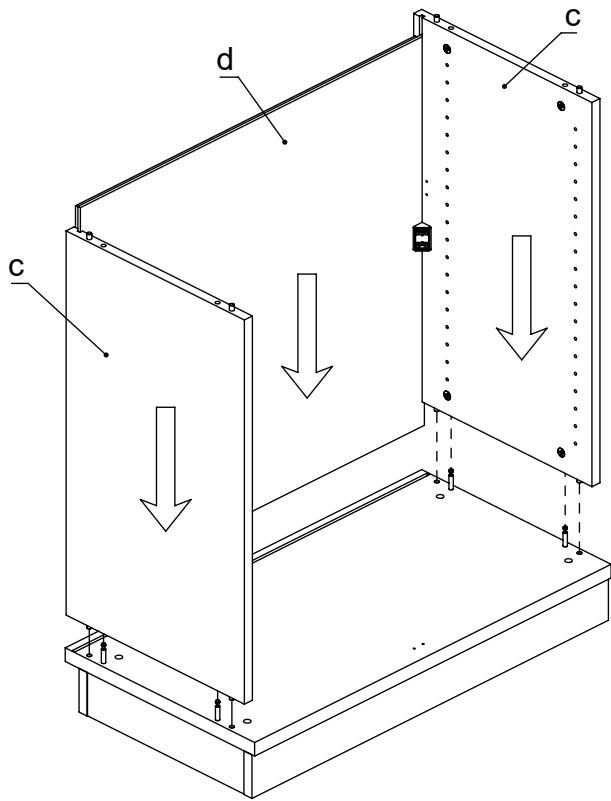


6

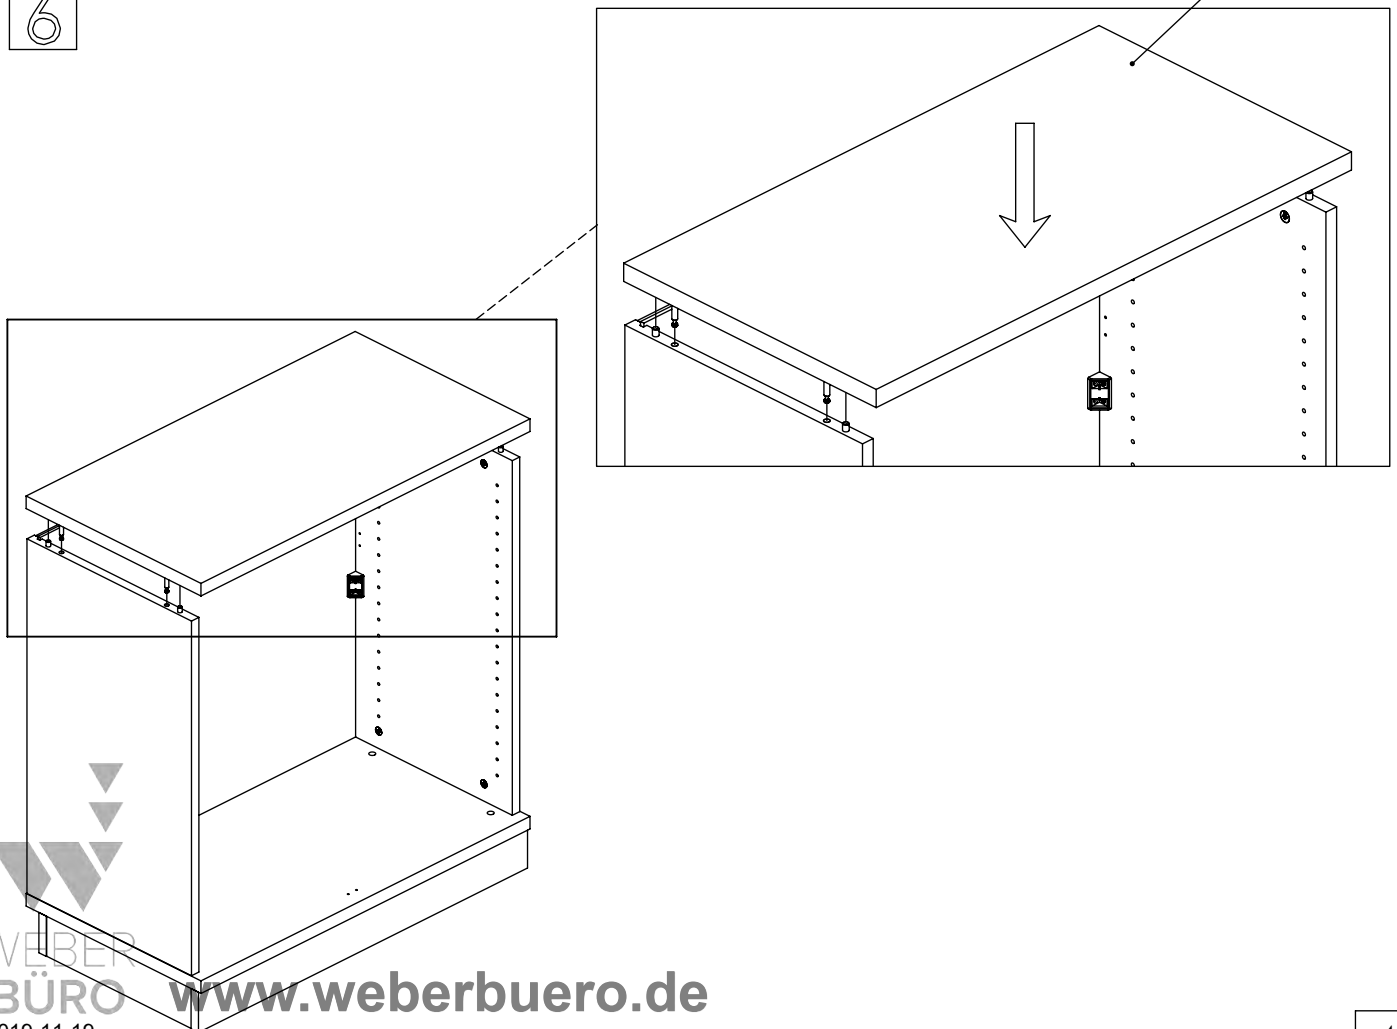


7

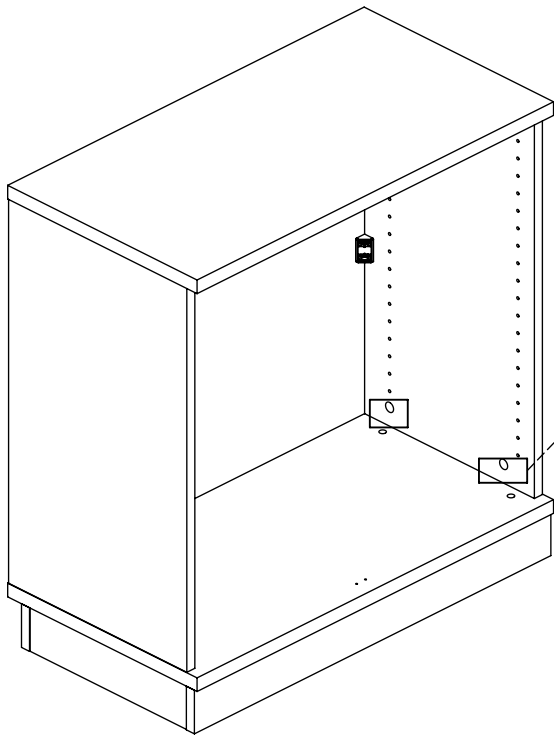


1)

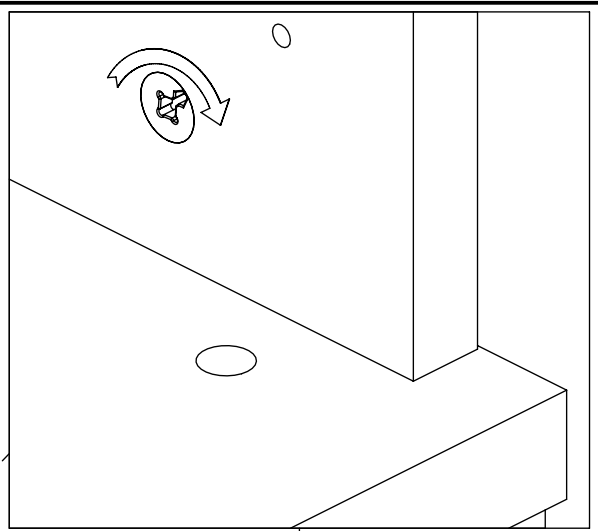


2)

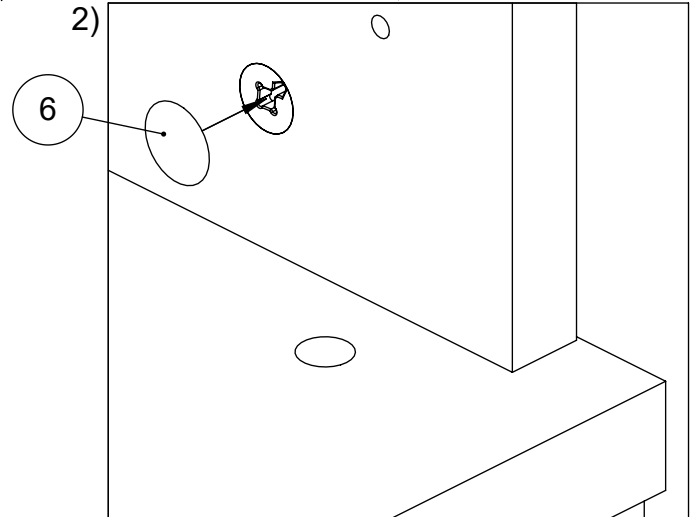


8

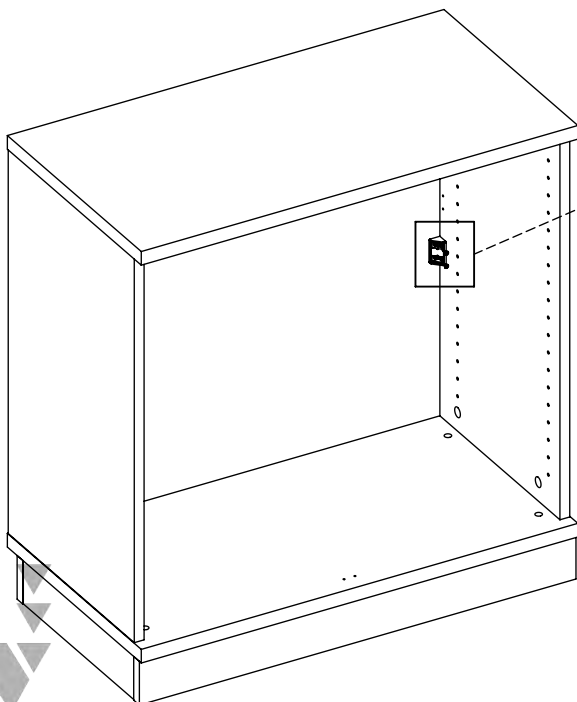



1)

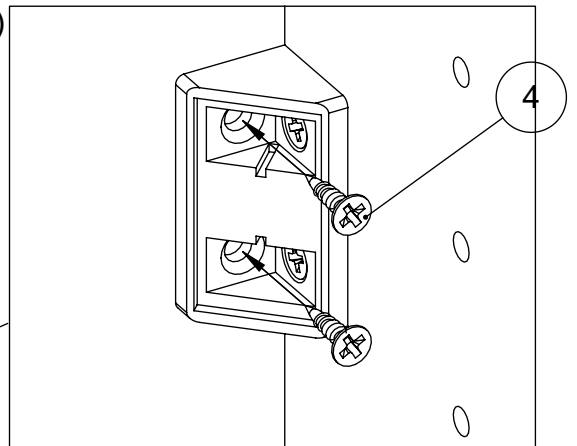



2)

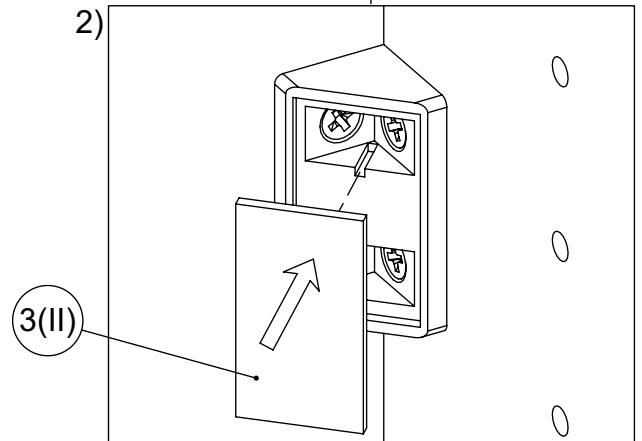



9 a)

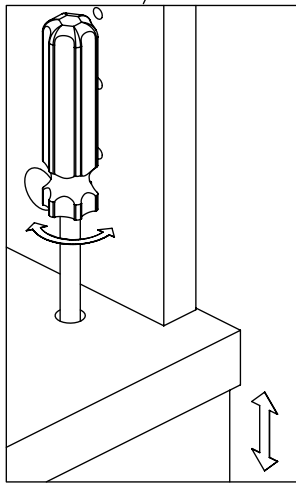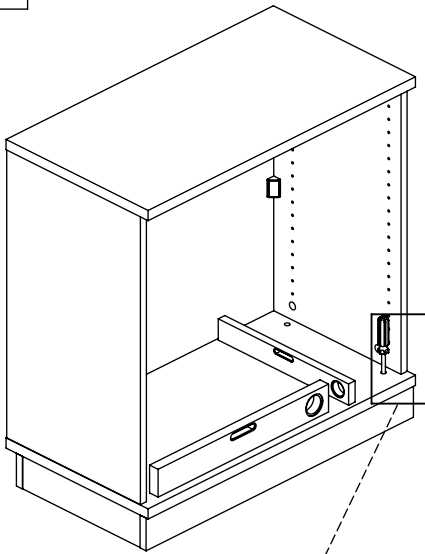



b)

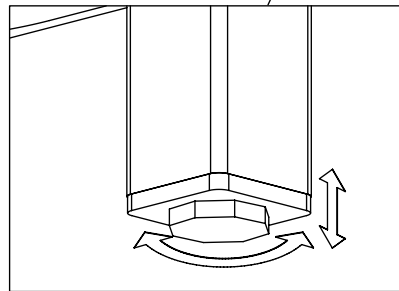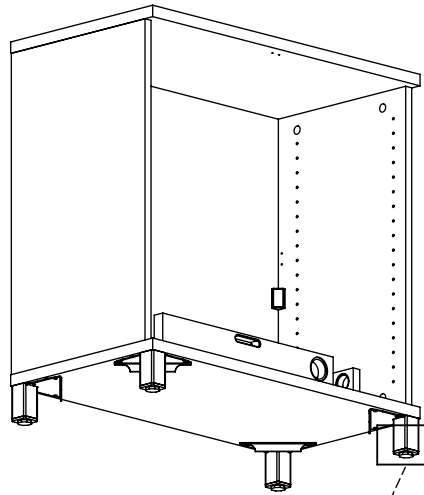


c)

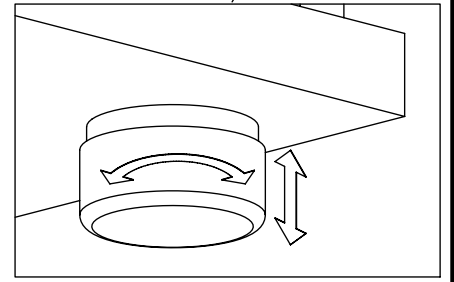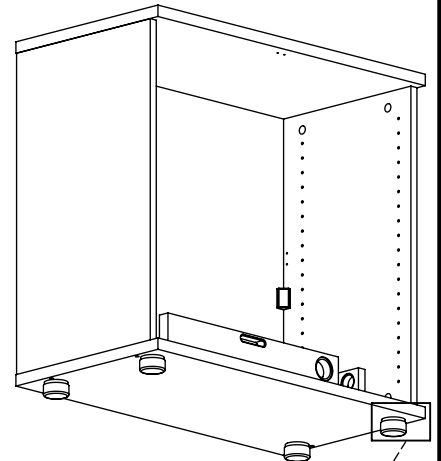

10

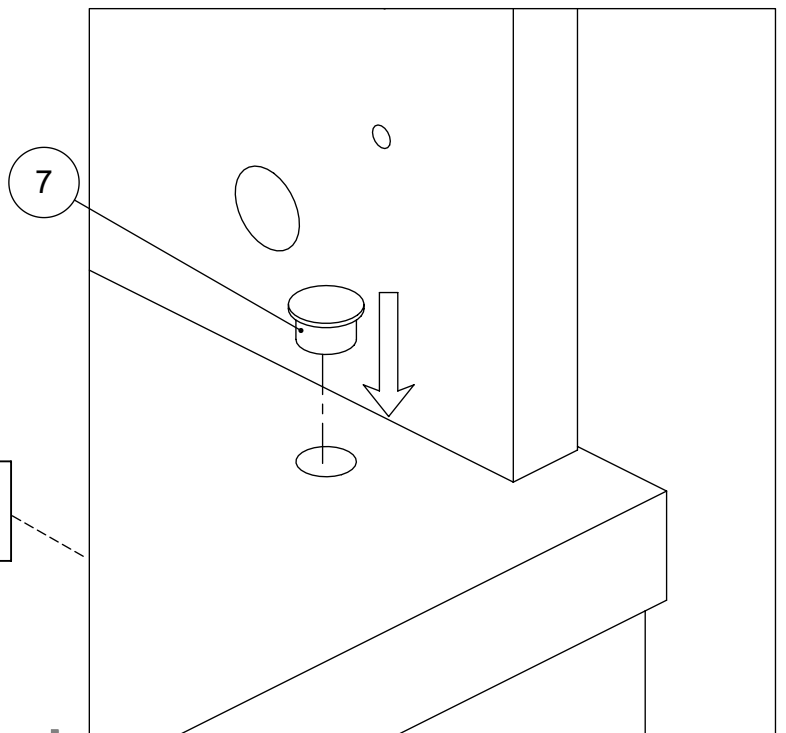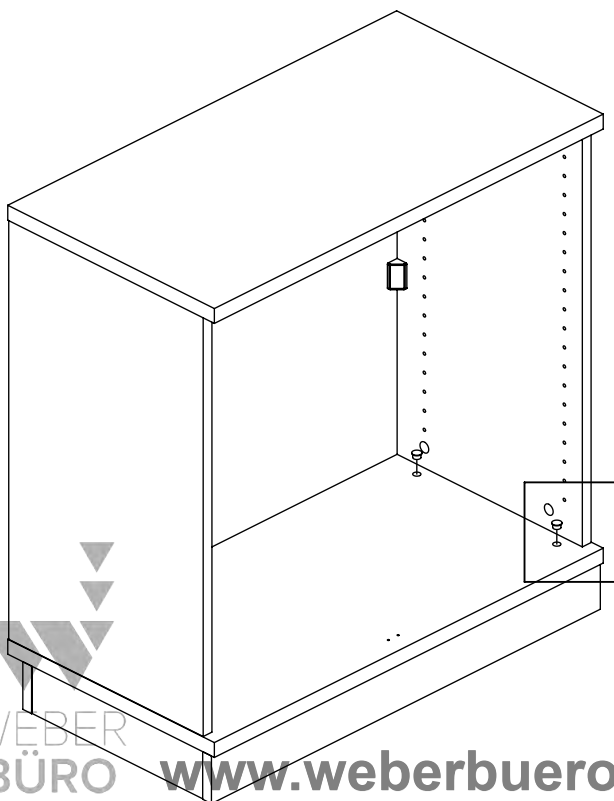




Surinkimo schema:
 Assembling scheme:
 Схема сборки:



①	x4	x12	x16	x8
	G1C002			
	G1C005			
	G1C008	G1C009	G1C015	G1C014
	G1C037	G1C006	G1C011	G1C013
	G1C038	G1C001		G1C039

1.

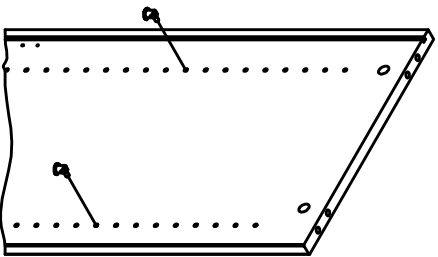

M60EX009

2.

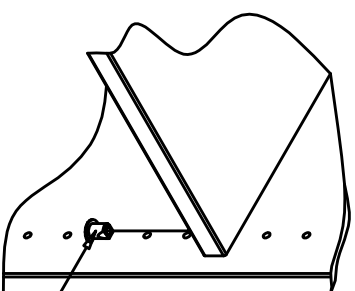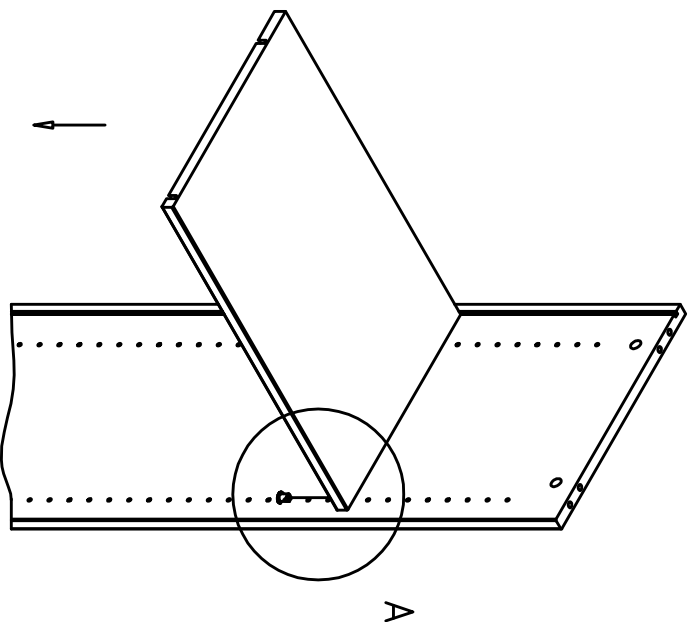

A (2:1)

①

06.09.11

WEBER
BÜRO

www.weberbuero.de