

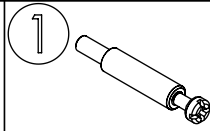



M60EX001

EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage


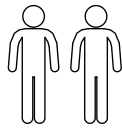


5/11x34
M42B0022 x8

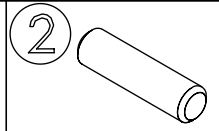


∅8x30
M42H0001 x8


a - x1 d - x1
 b - x1 e - x1
 c - x1

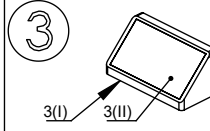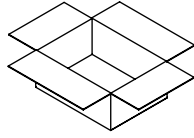


M45A9016 x2

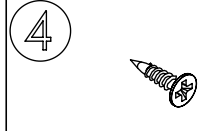



3.5x15
M42A0012 x8

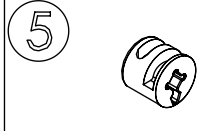







15/18
M42B0001 x8




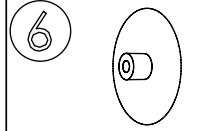


∅4/18
M45A30* x8

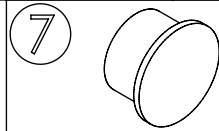



M45A20* x4

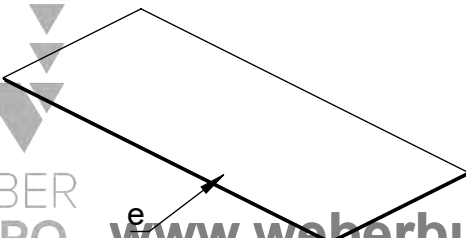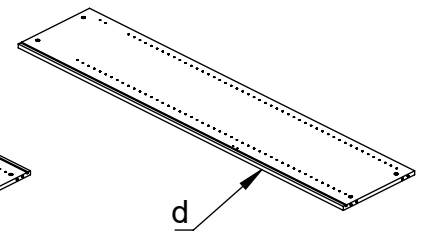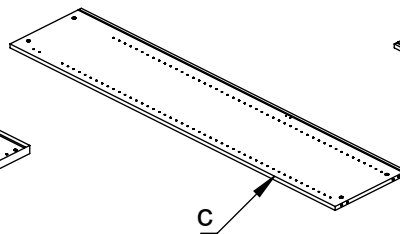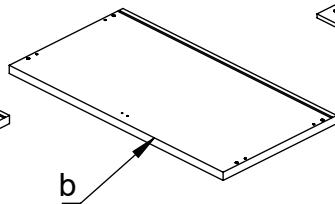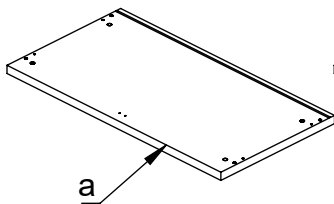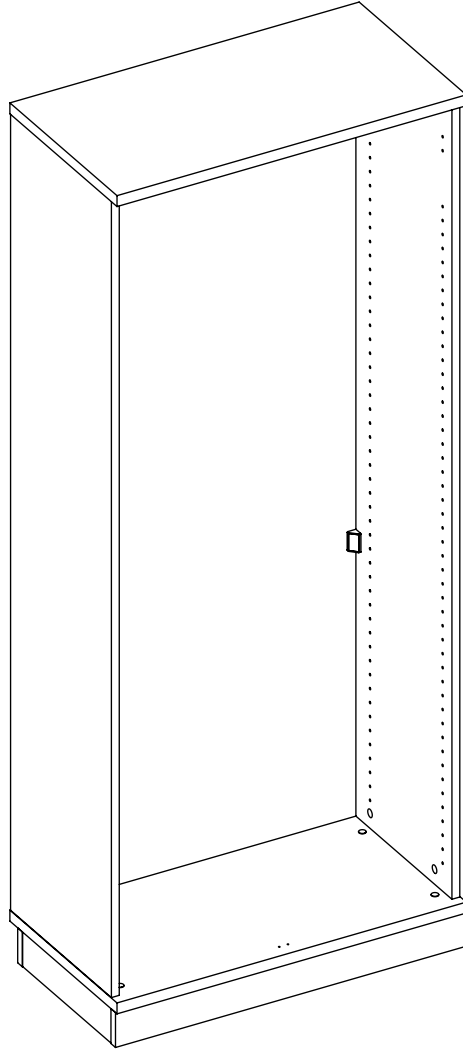


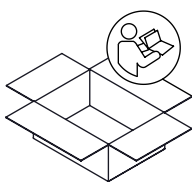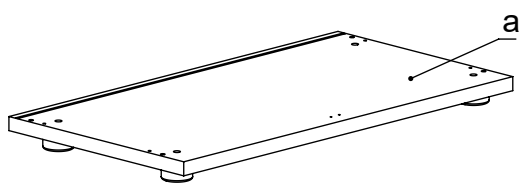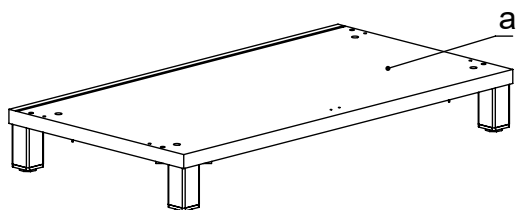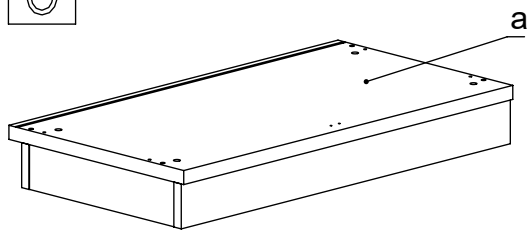


EN	The assembly scheme of base is included in the selected base package
DE	Die Aufbauanleitung zur Befestigung der Möbelbeine ist im entsprechenden Paket
FR	La fiche de montage de la base est incluse dans le colis de la base choisie

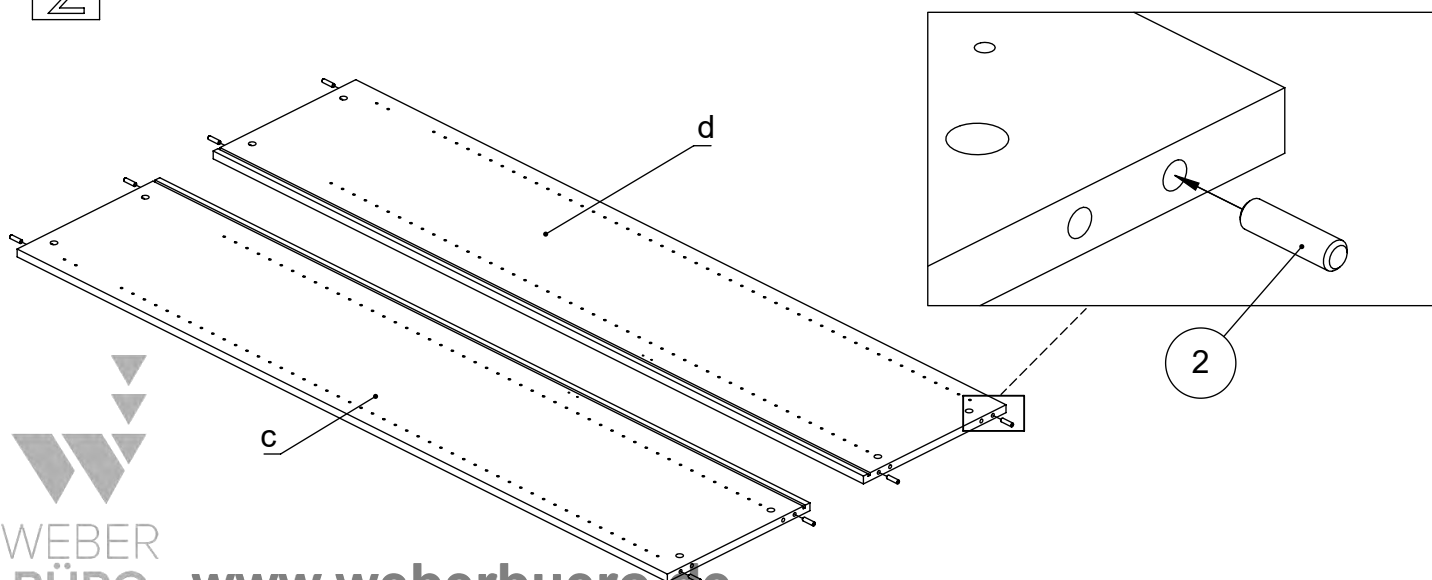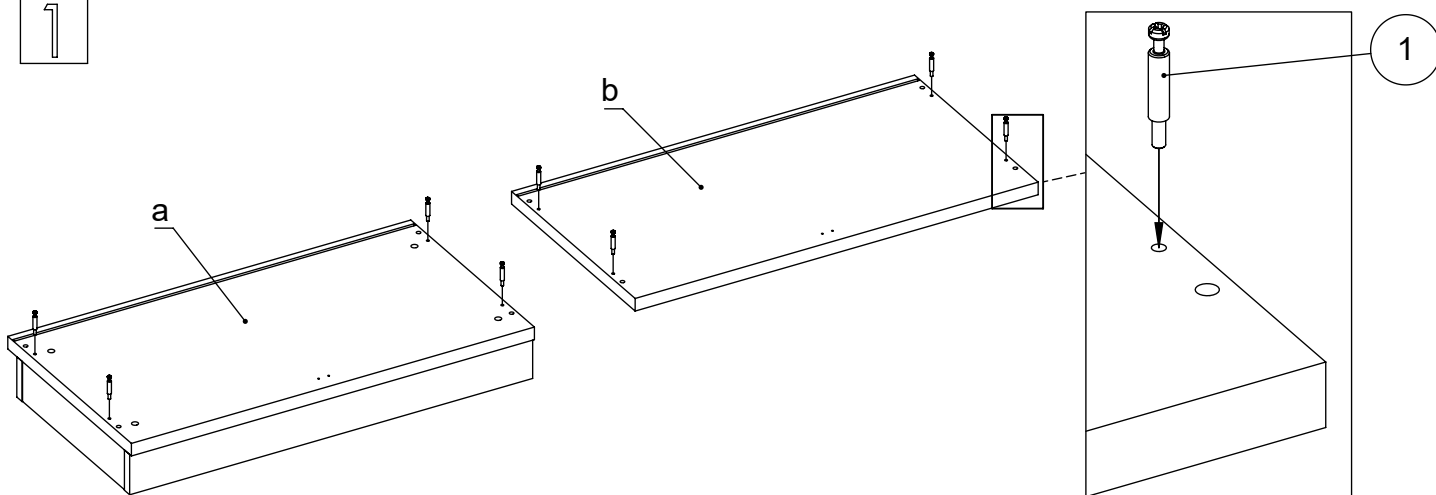




3

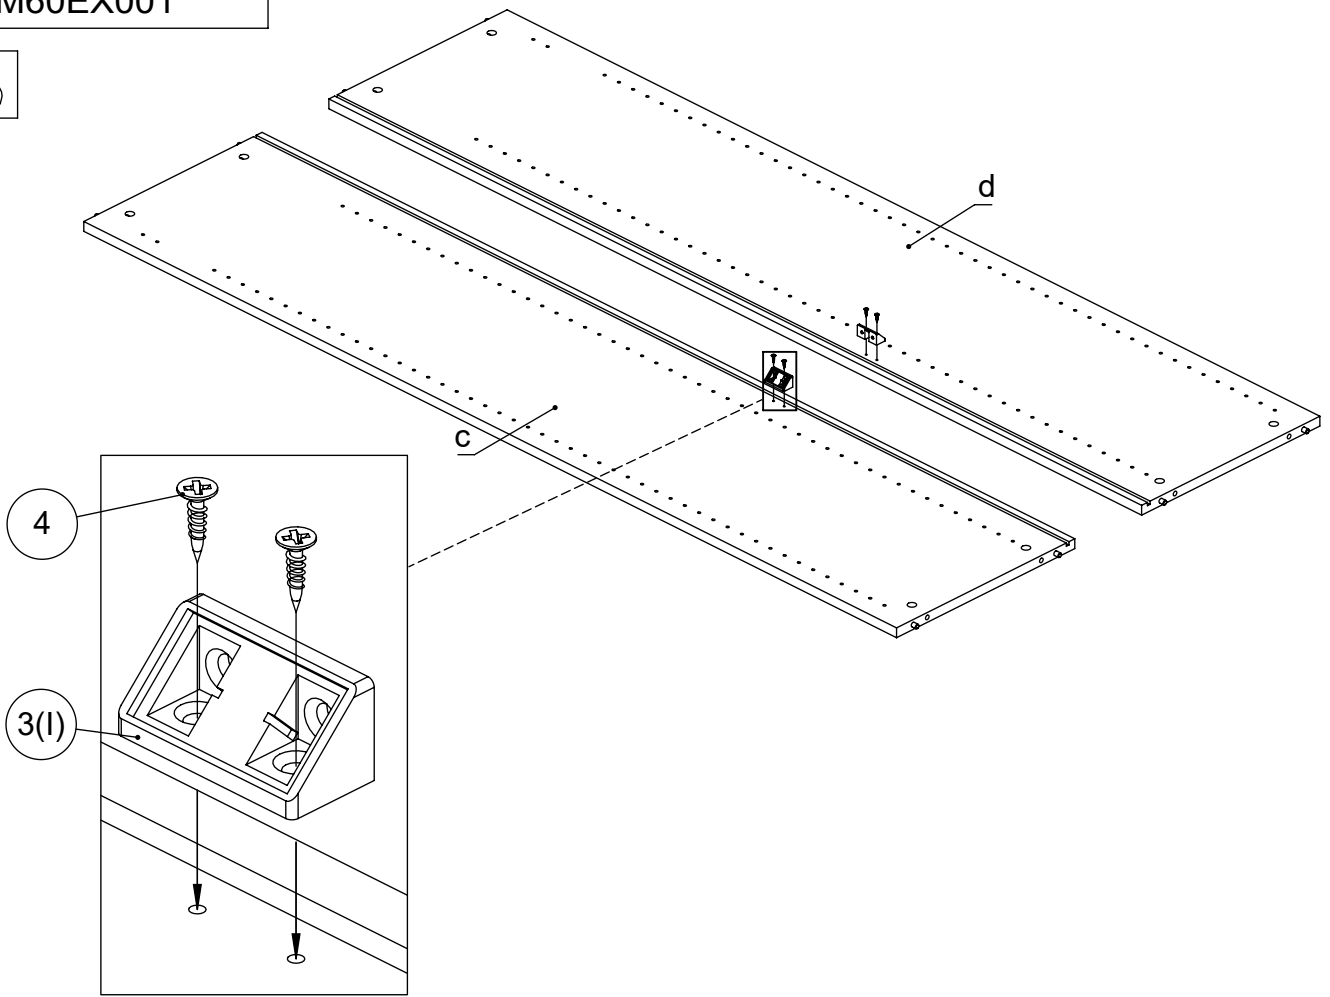



4

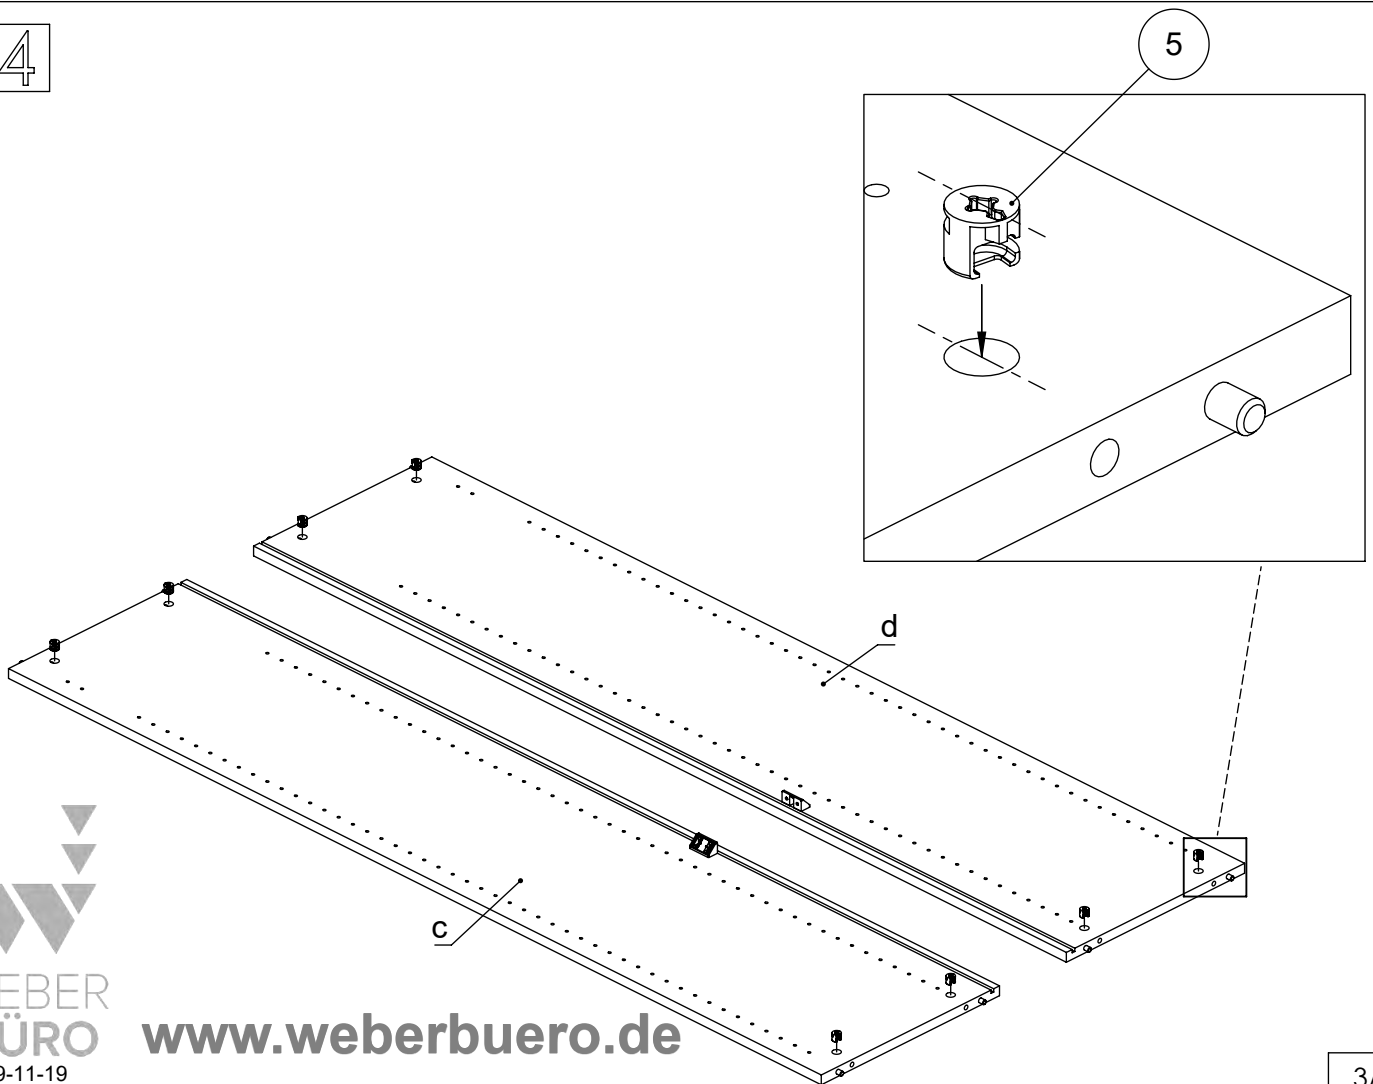




5

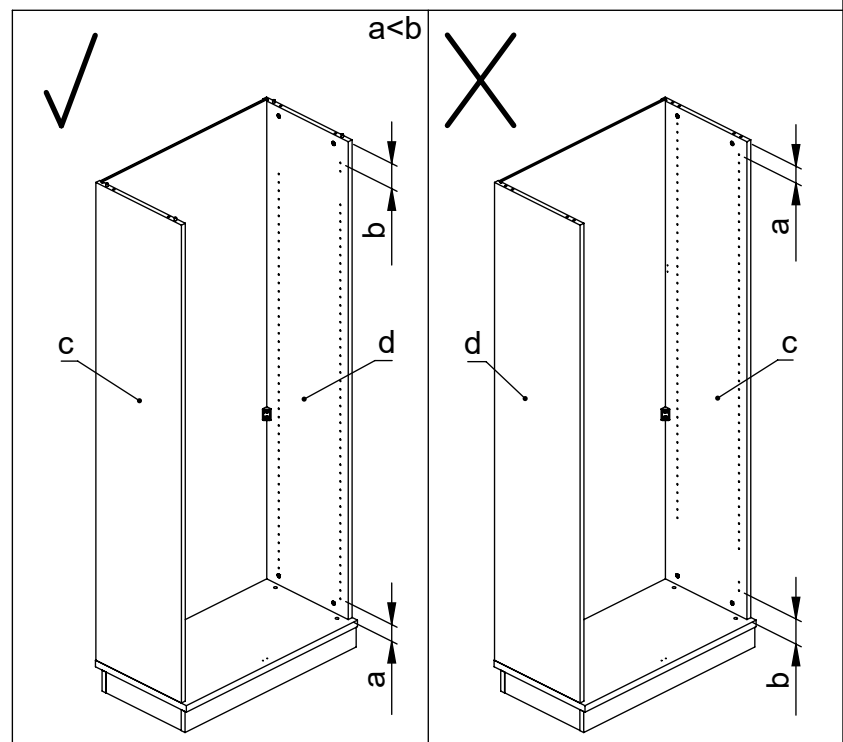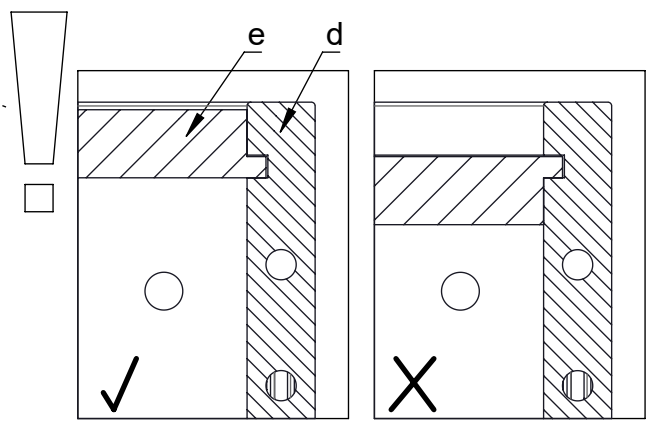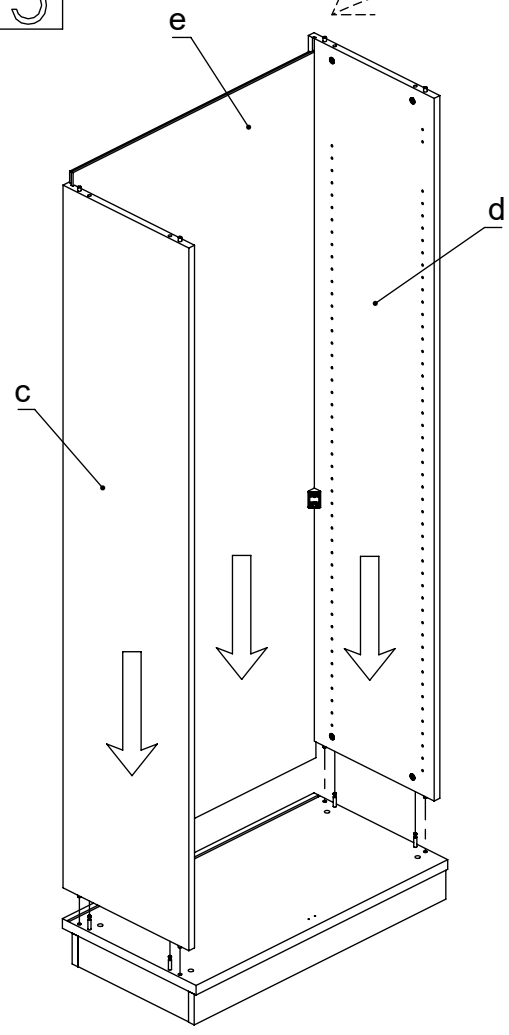




6

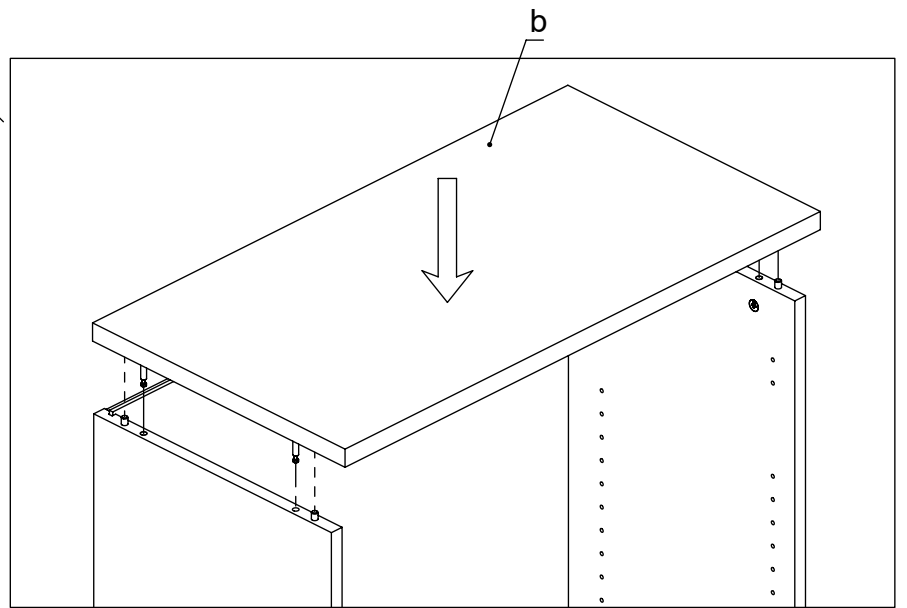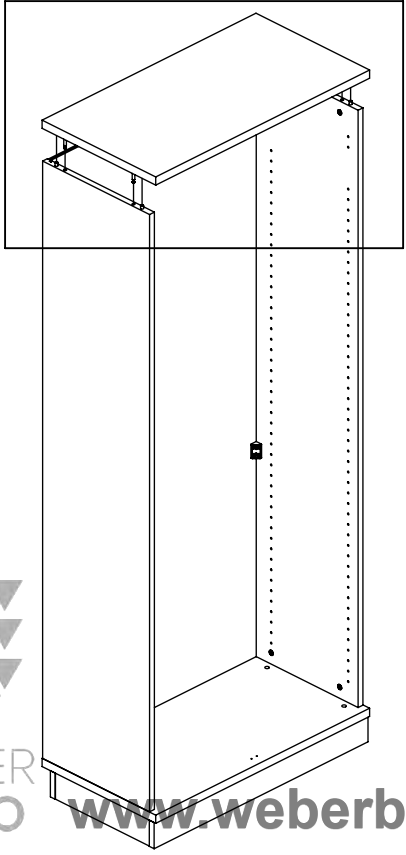


7

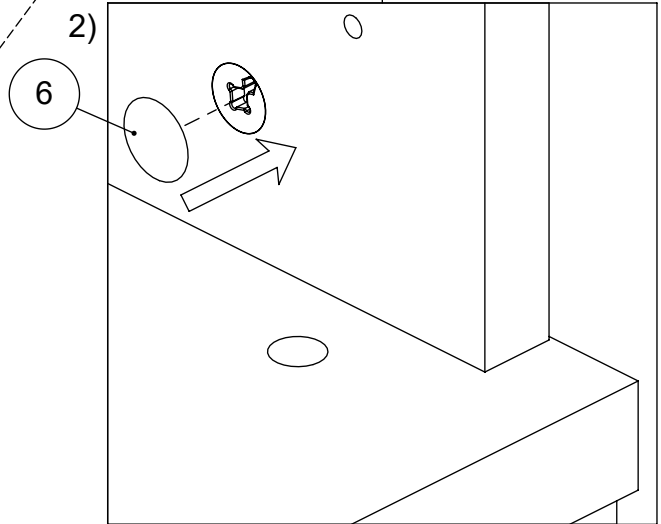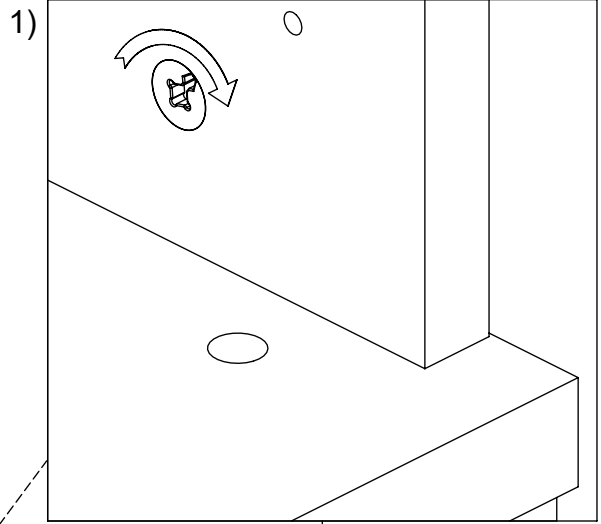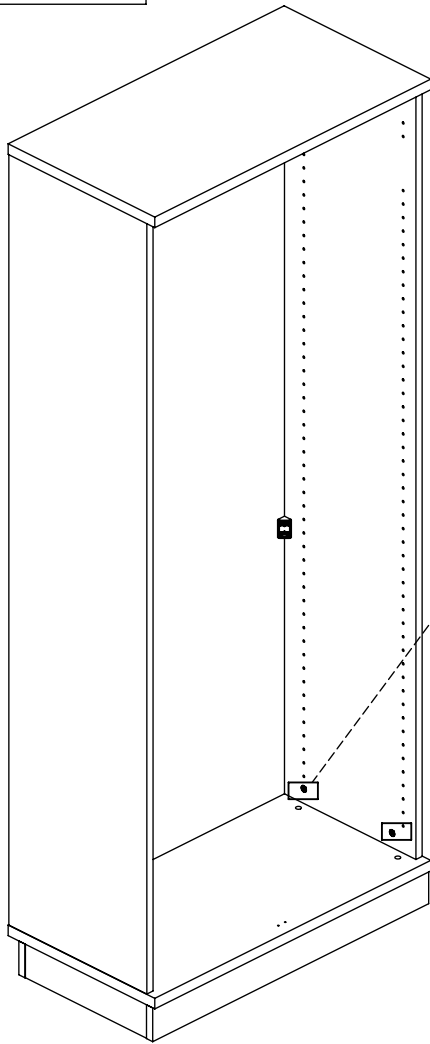


8

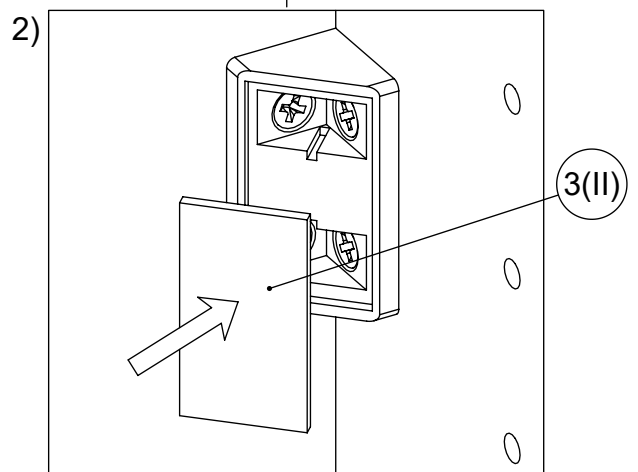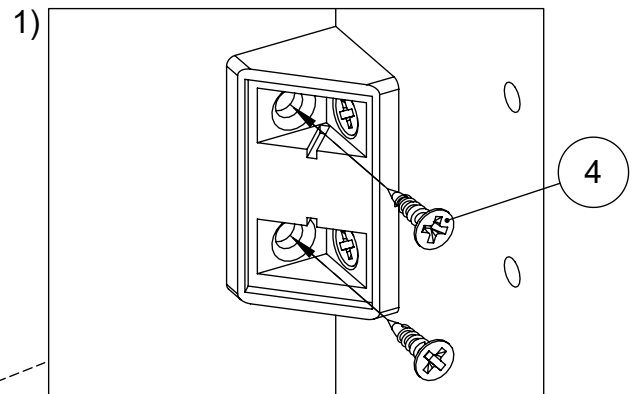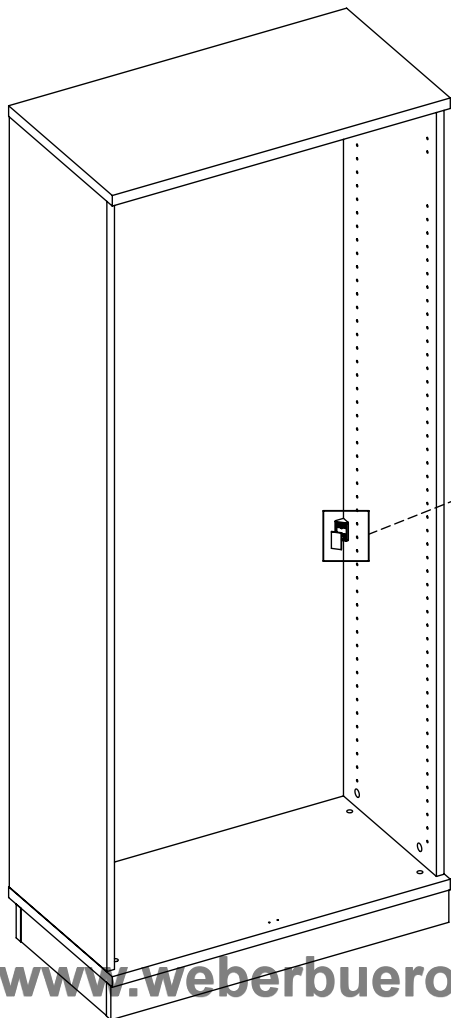


9 a)

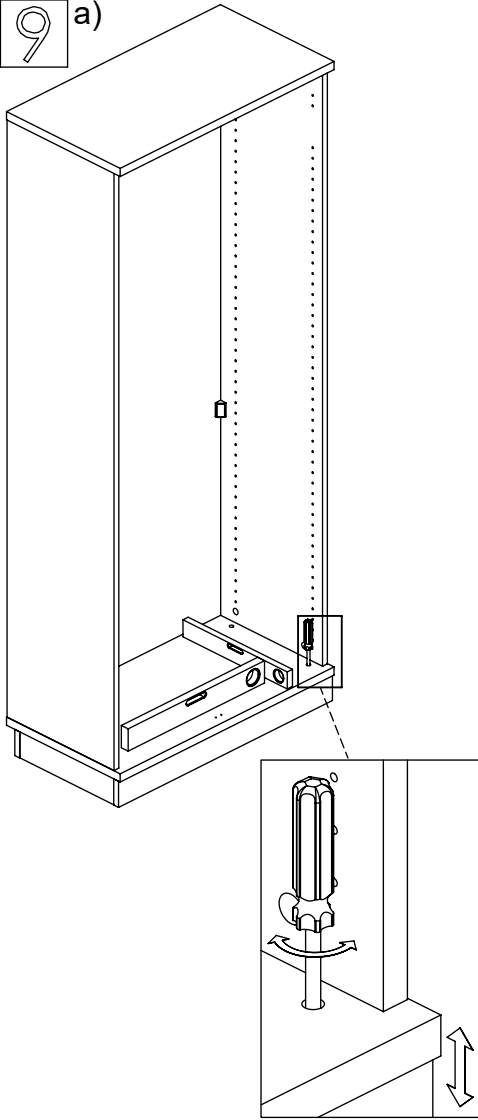



b)

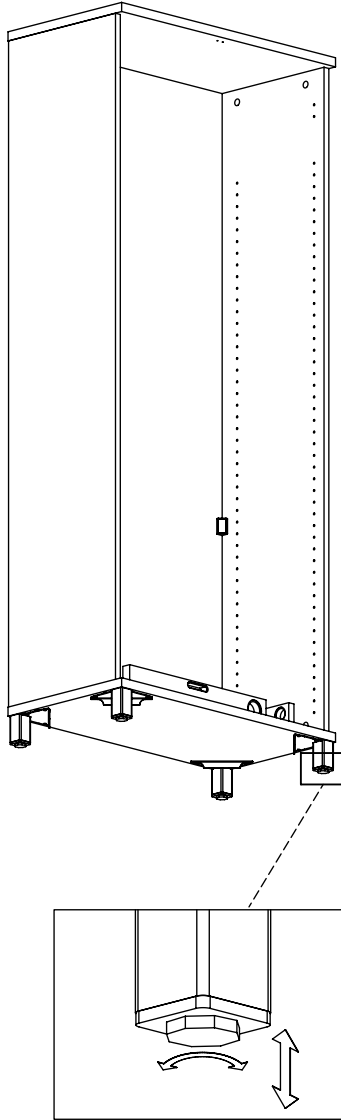


c)

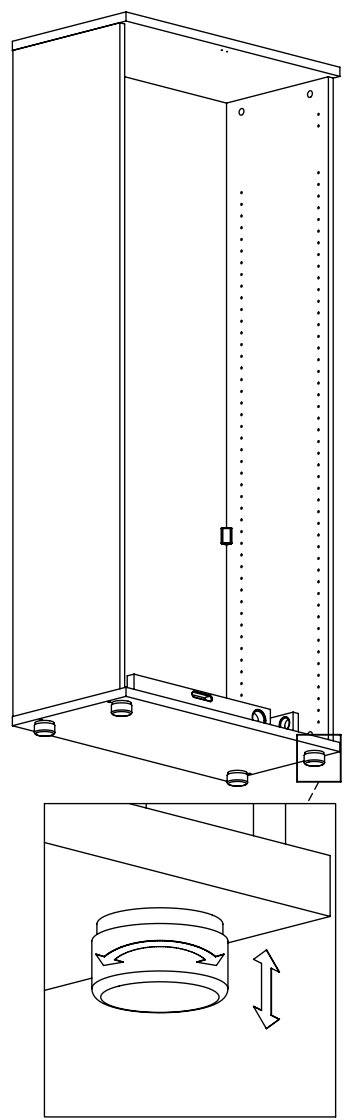

10

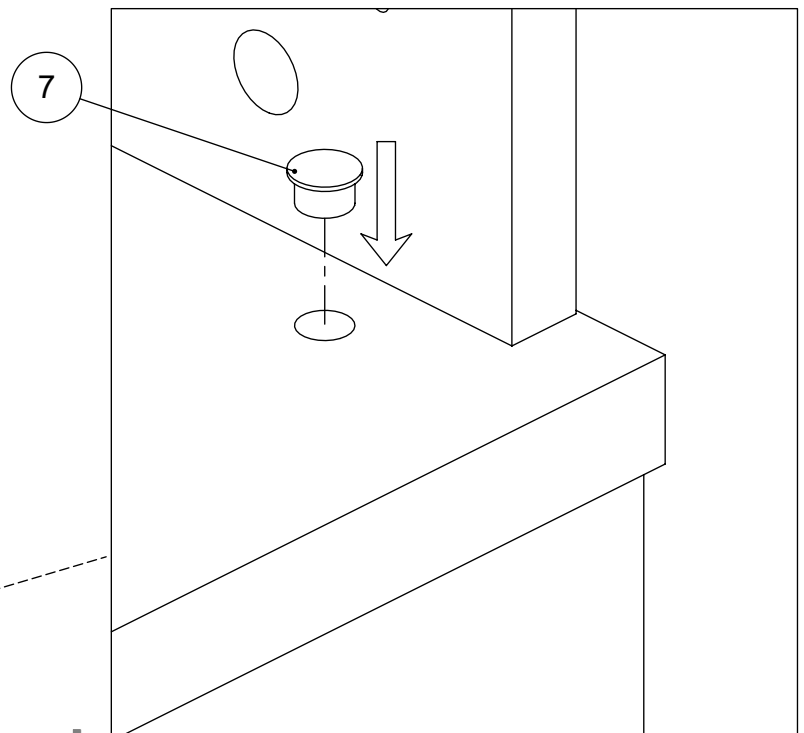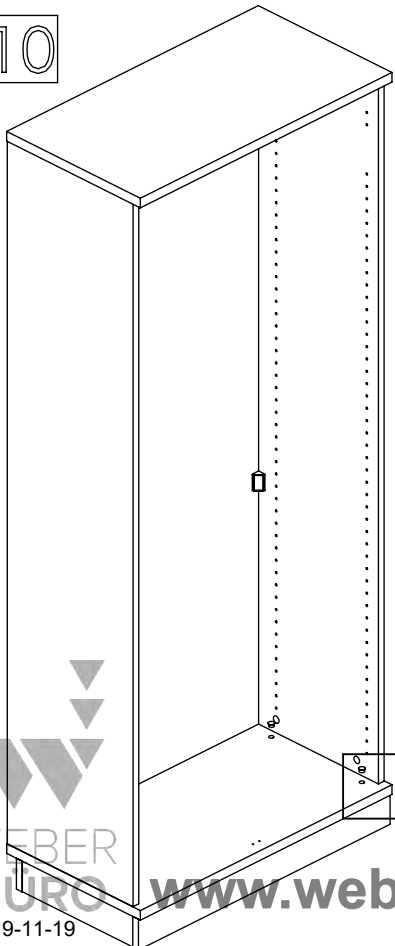




Surinkimo schema:
 Assembling scheme:
 Схема сборки:



①	x4	x12	x16	x8
	G1C002			
	G1C005			
	G1C008	G1C009	G1C015	G1C014
	G1C037	G1C006	G1C011	G1C013
	G1C038	G1C001		G1C039

1.

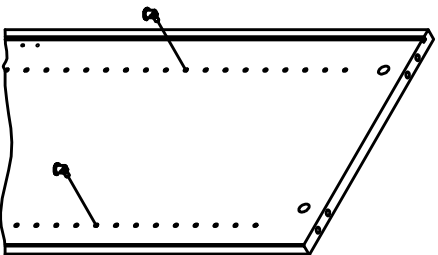

M60EX009

2.

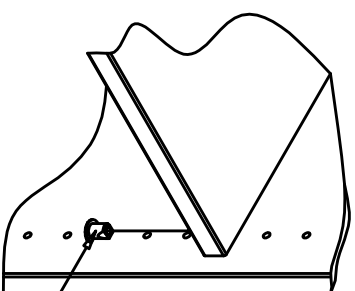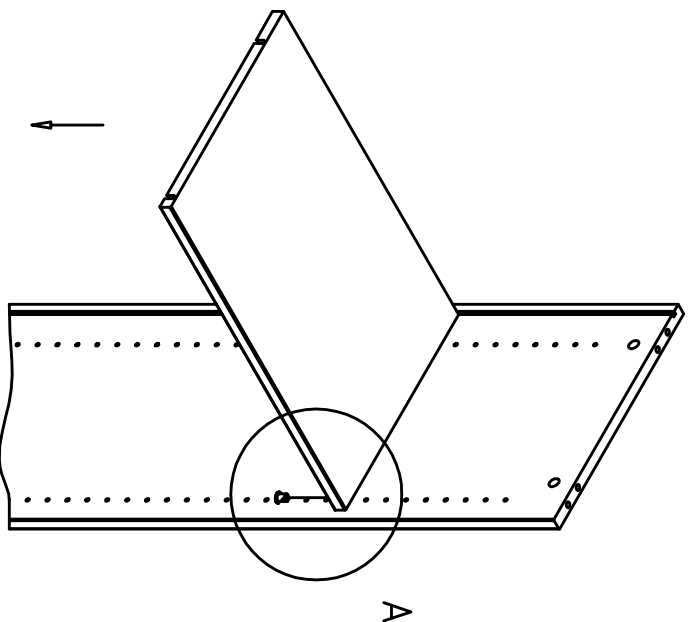

A (2:1)

①



06.09.11

WEBER
 BÜRO





www.weberbuero.de

M60EX014



EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage

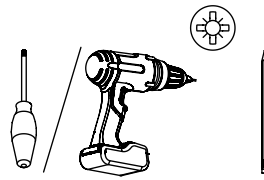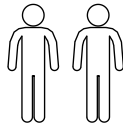



1		M48A0189	x8	2		M48A0031	x8
4		3.5x17 M42A0017	x16	3		M48A0133	x8
5		M4x22 M42C0009	x4	6		M45F4001	x2
7		M45F9009	x2	8		3.0x15 P M42A0004	x4
9		M45F9009	x2	10		3.0x15 K M42A0003	x4

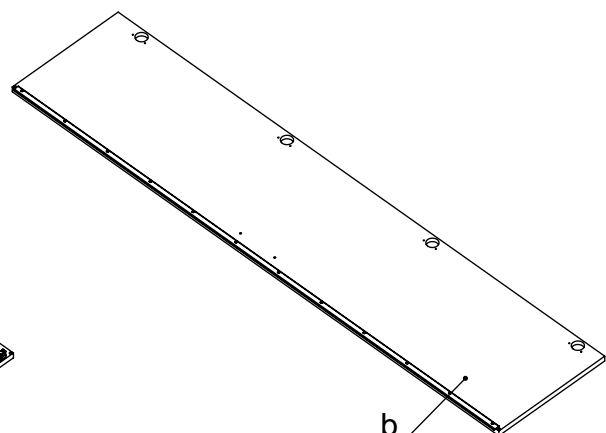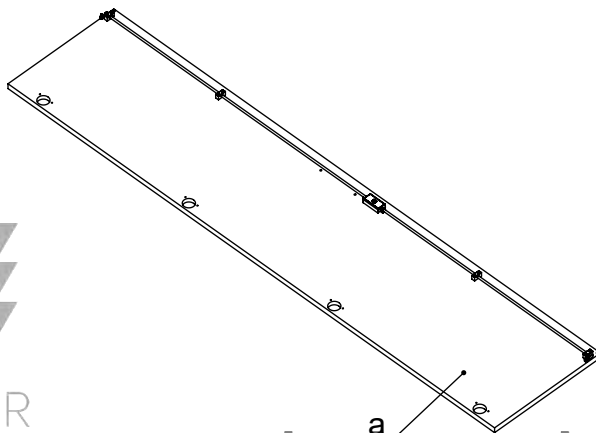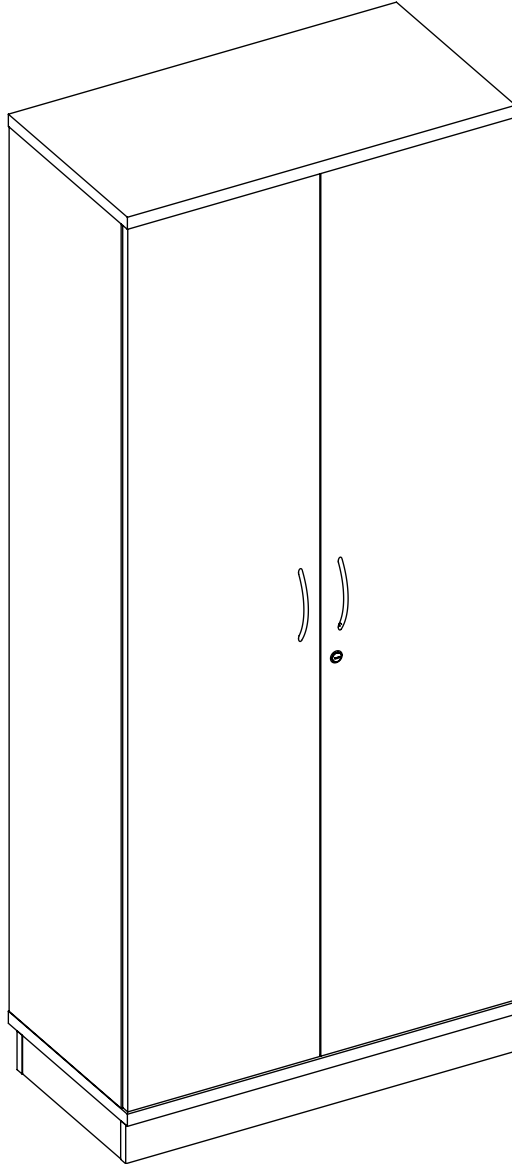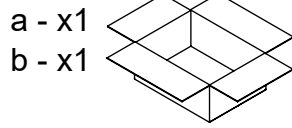


1

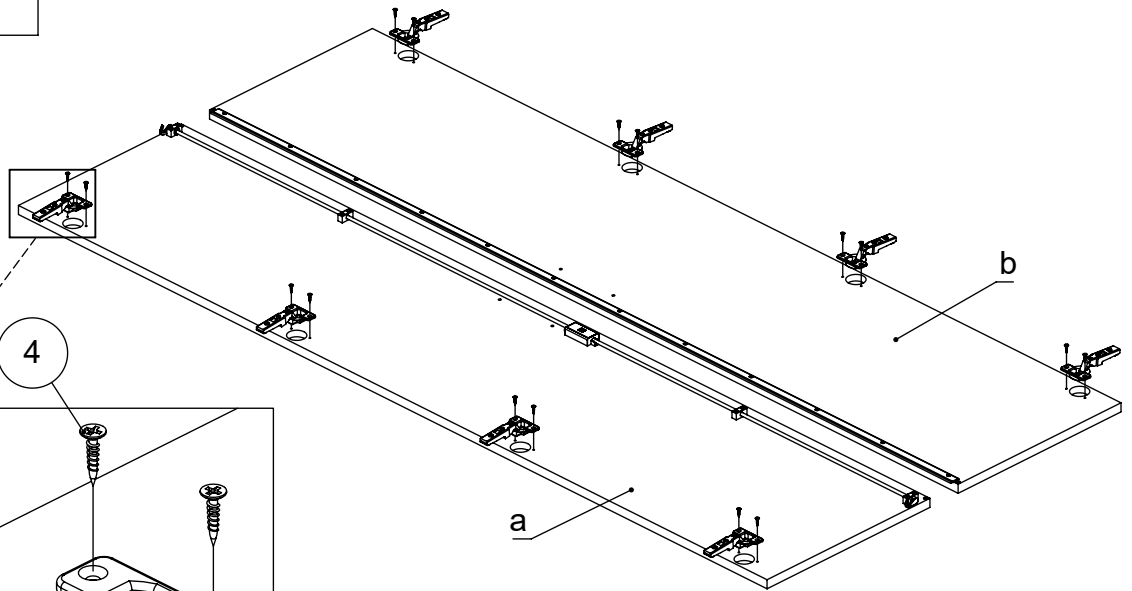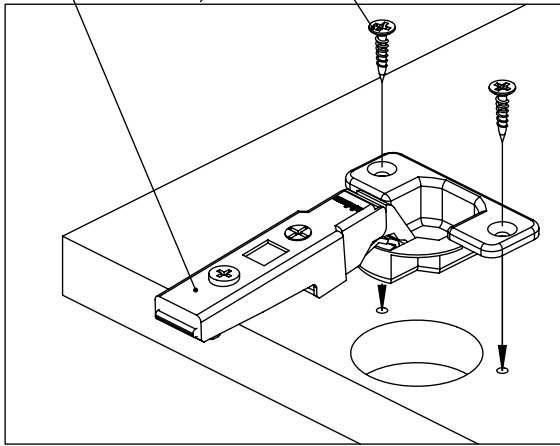


2

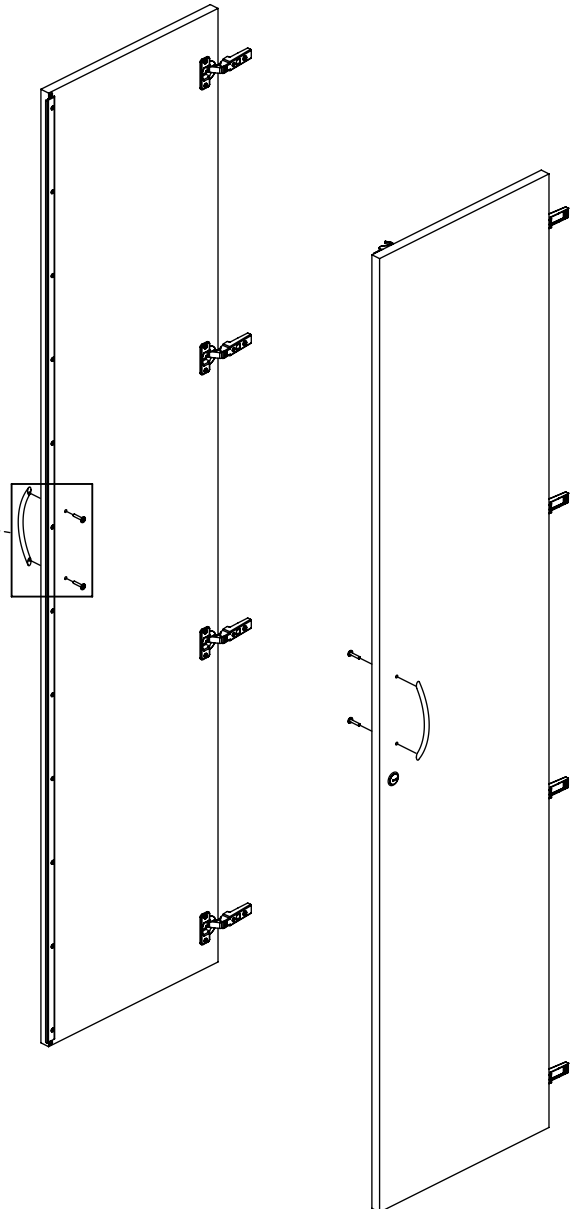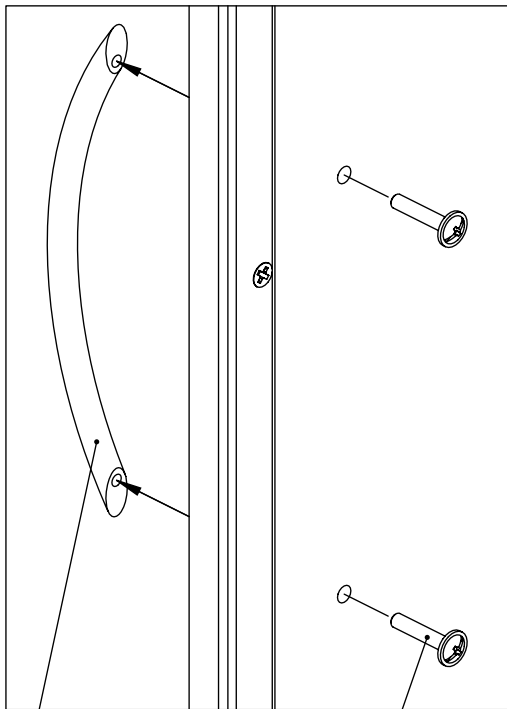

3


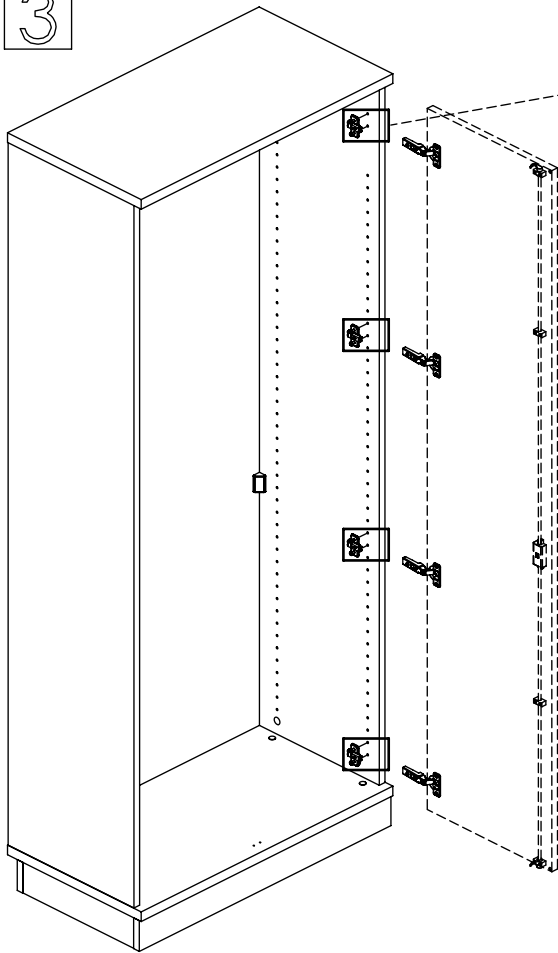


1)

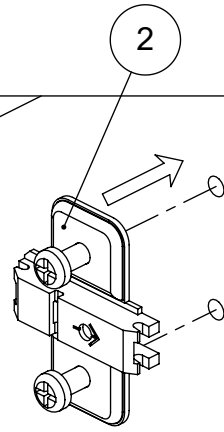


2


2)

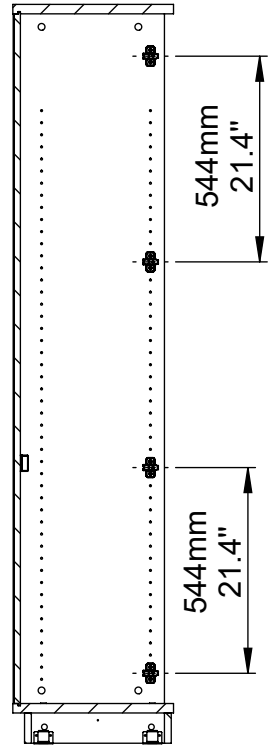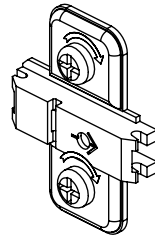


4

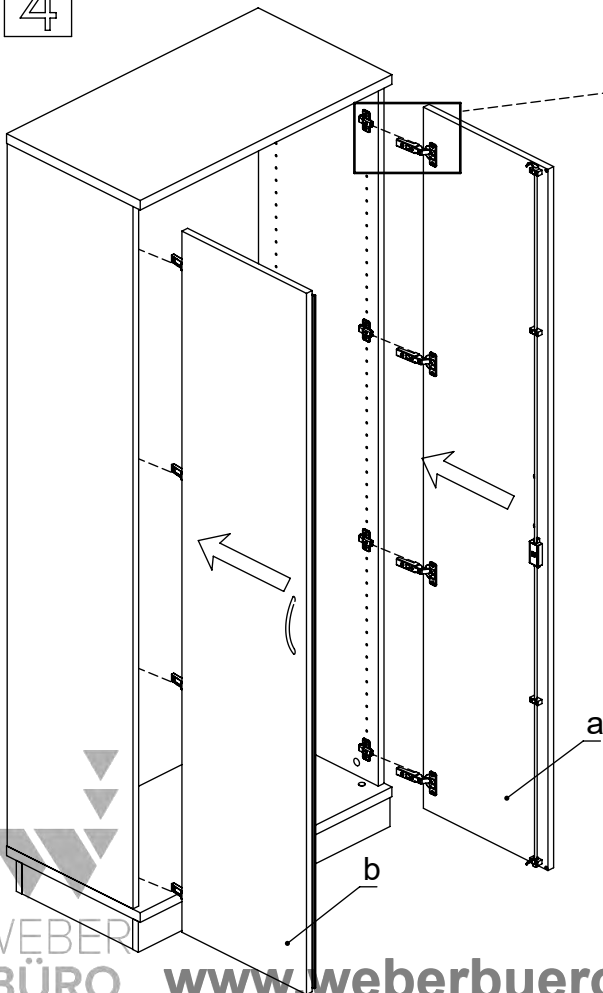


1)

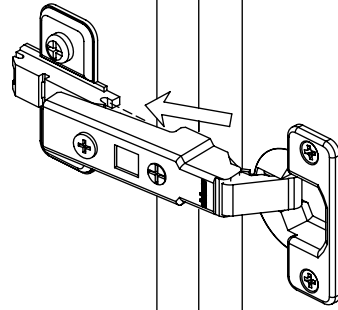


2)

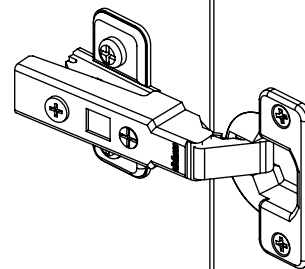


3)

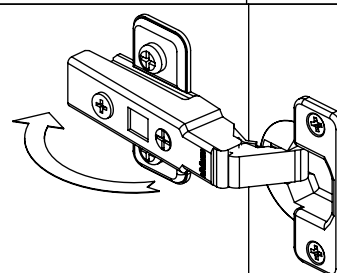


5

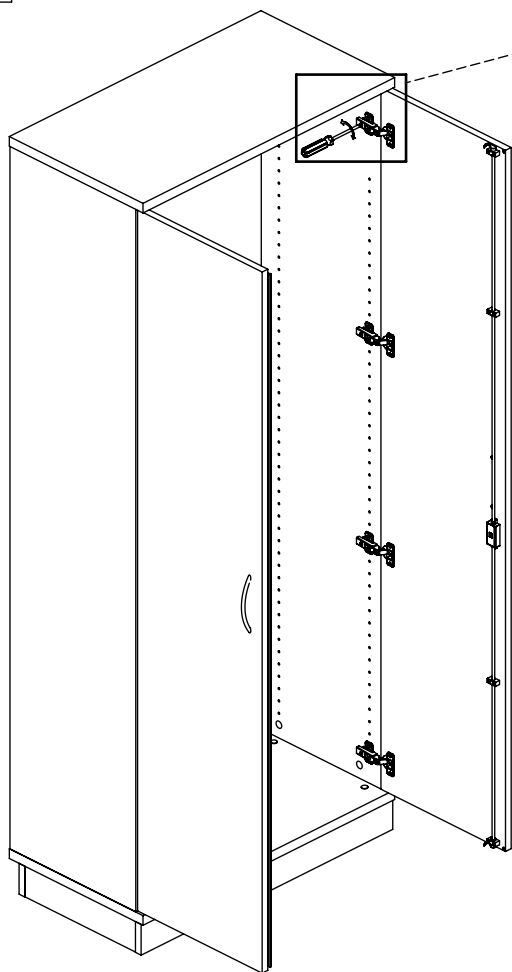

1)

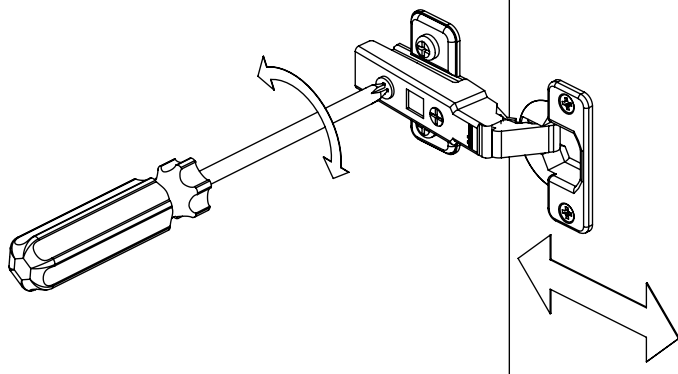


2)

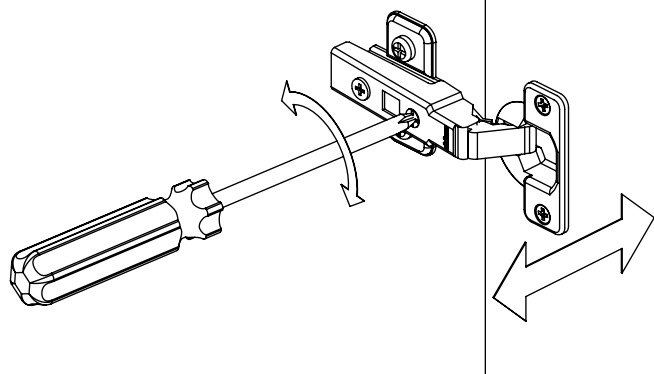


3)

3

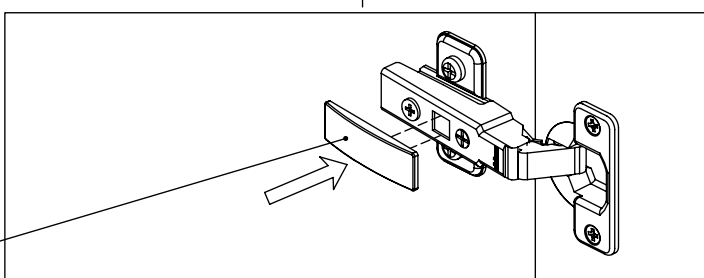


6

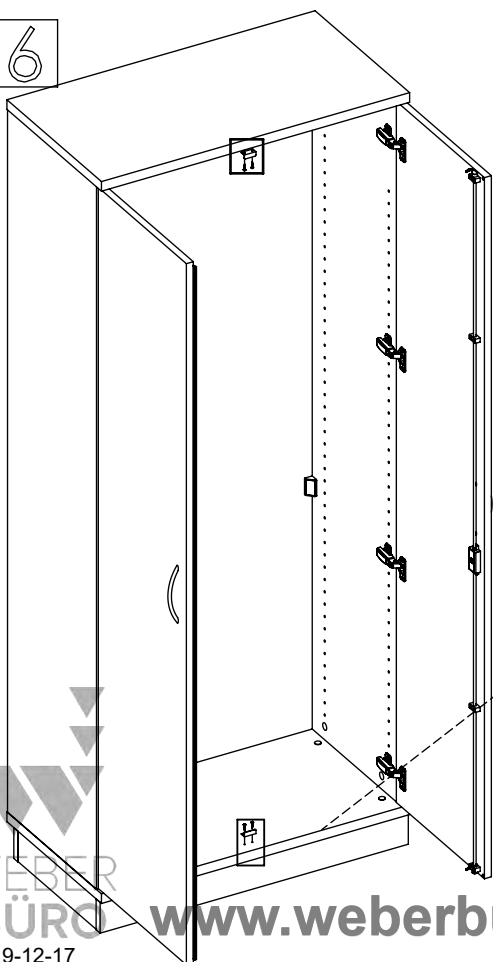


8



7

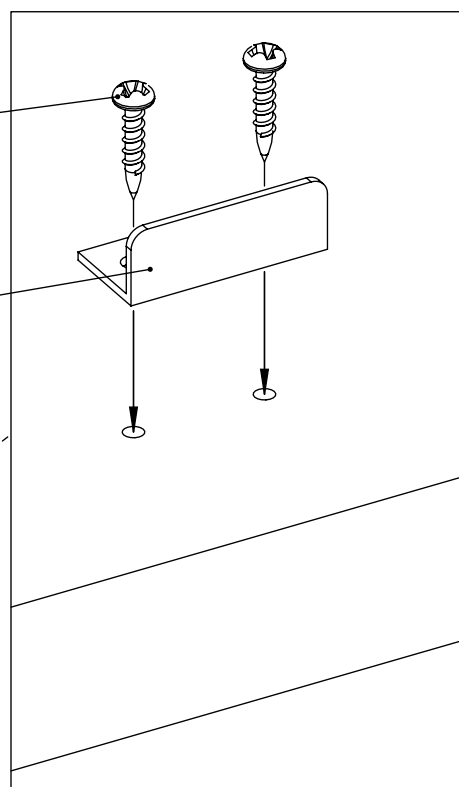



7

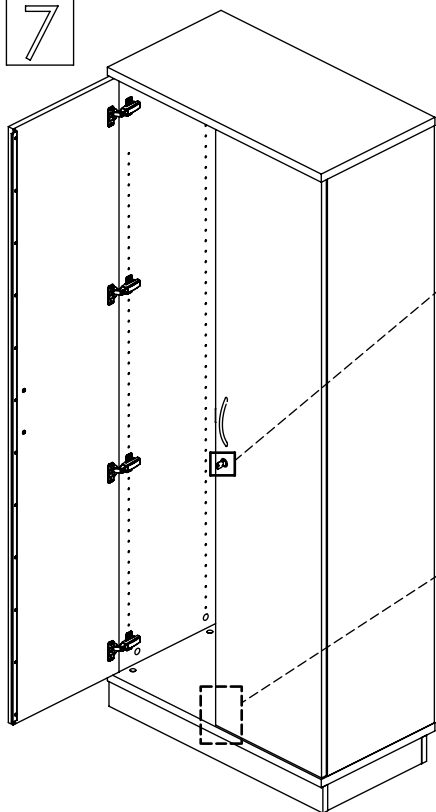


1)

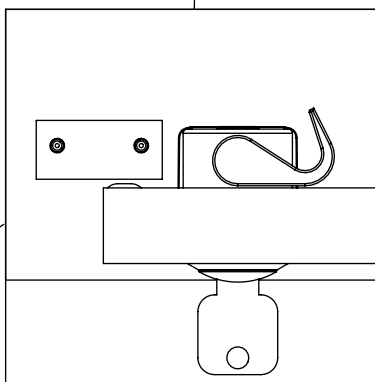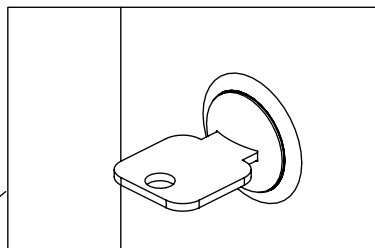

2)

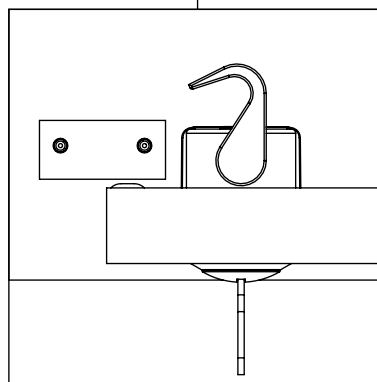
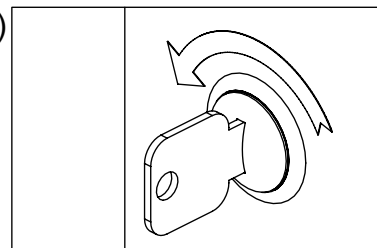


8

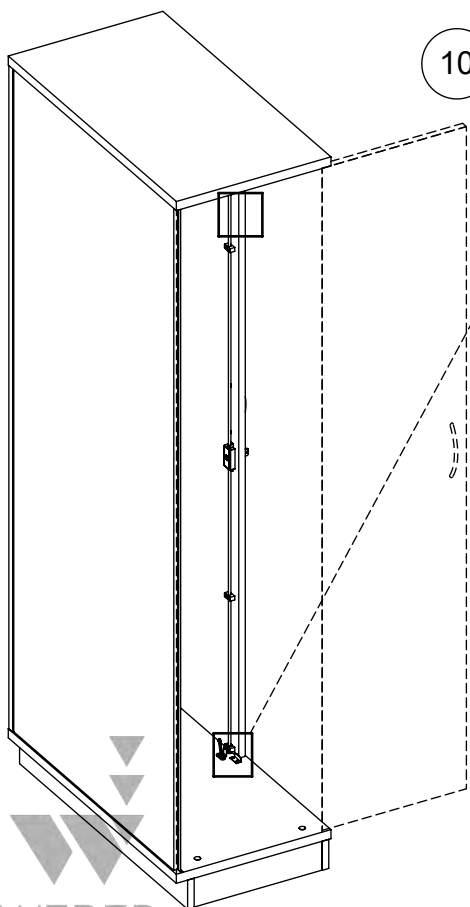


1)

10

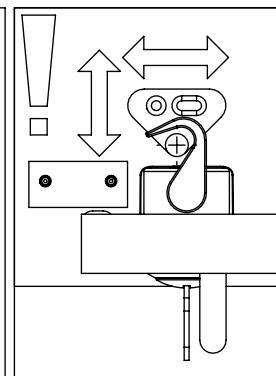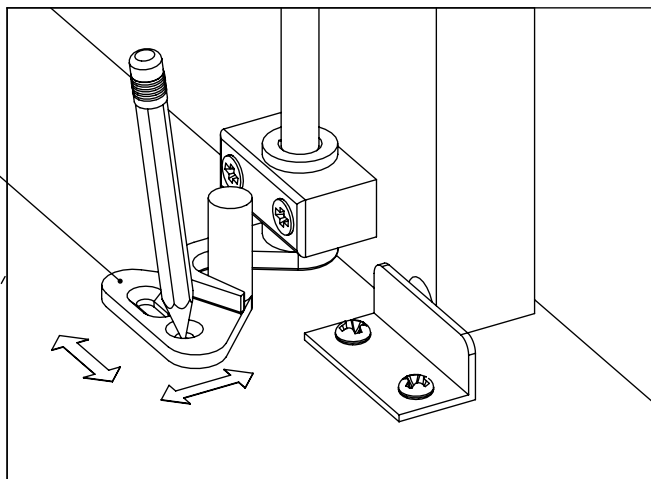




2)

10

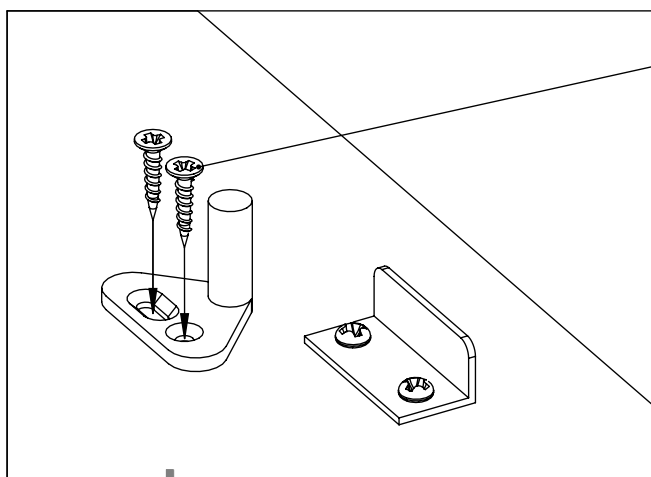


M60EX001

EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage

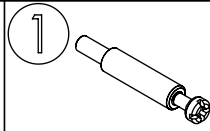
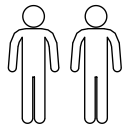


5/11x34
M42B0022 x8

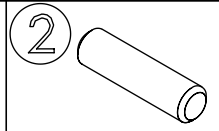


∅8x30
M42H0001 x8


a - x1 d - x1
 b - x1 e - x1
 c - x1

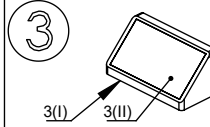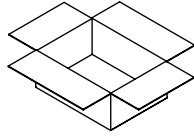


M45A9016 x2

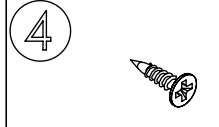



3.5x15
M42A0012 x8

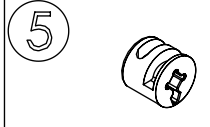







15/18
M42B0001 x8




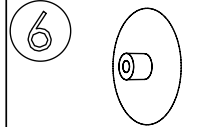


∅4/18
M45A30* x8

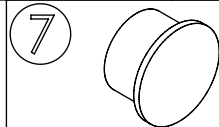



M45A20* x4

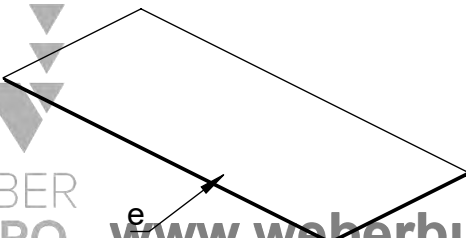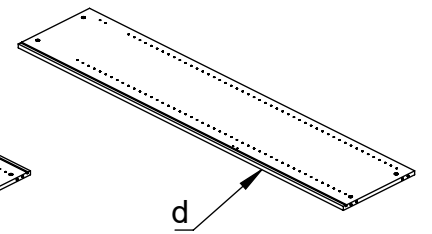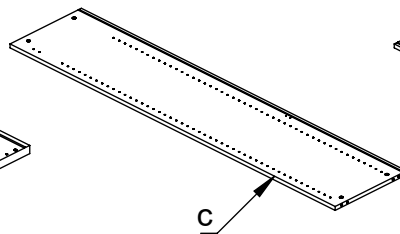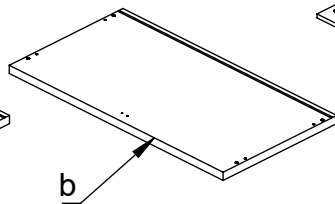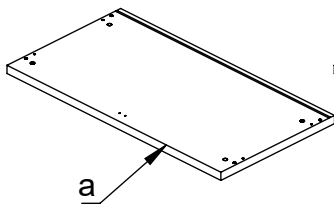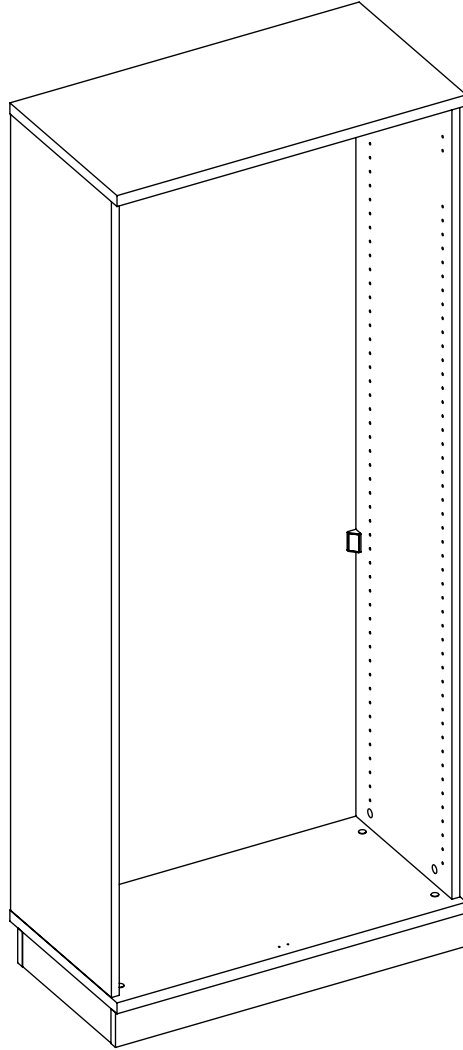


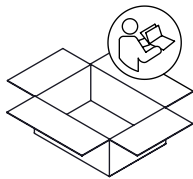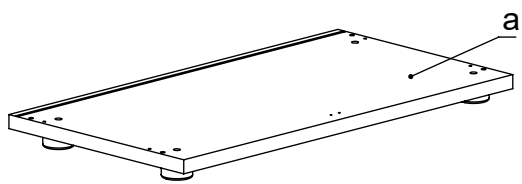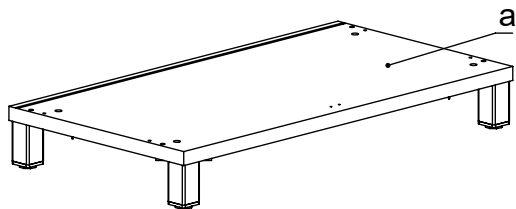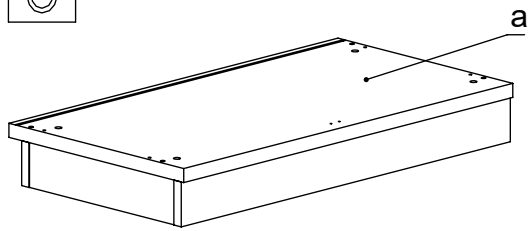


EN	The assembly scheme of base is included in the selected base package
DE	Die Aufbauanleitung zur Befestigung der Möbelbeine ist im entsprechenden Paket
FR	La fiche de montage de la base est incluse dans le colis de la base choisie

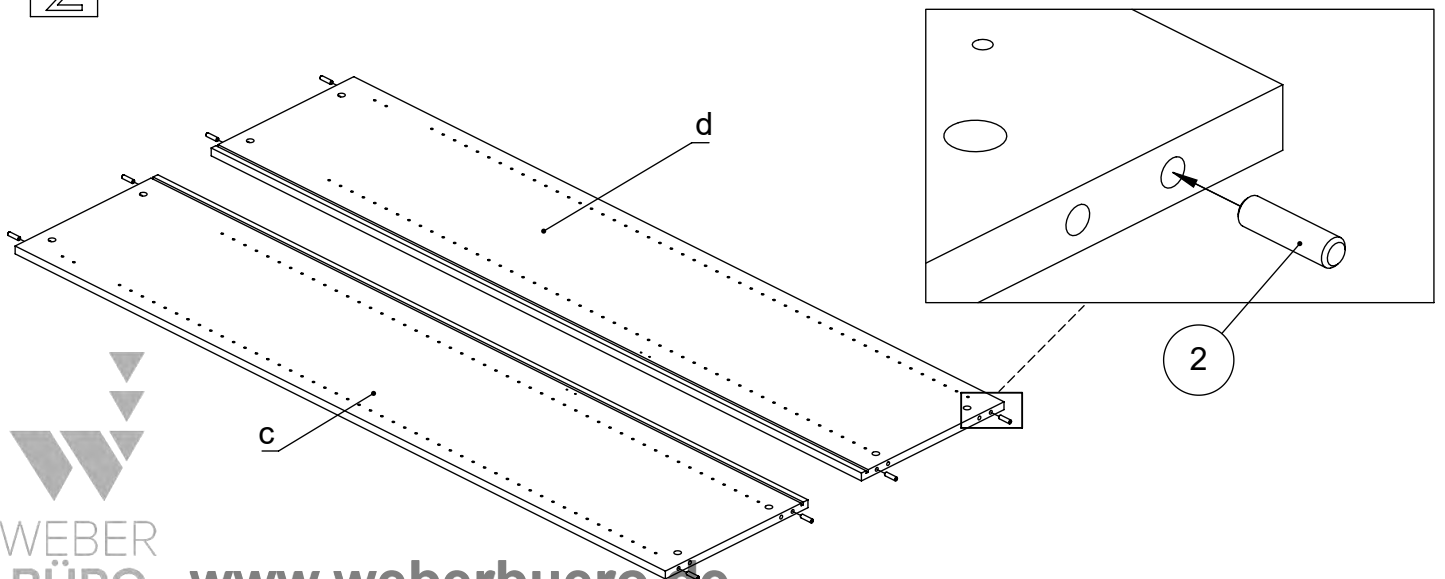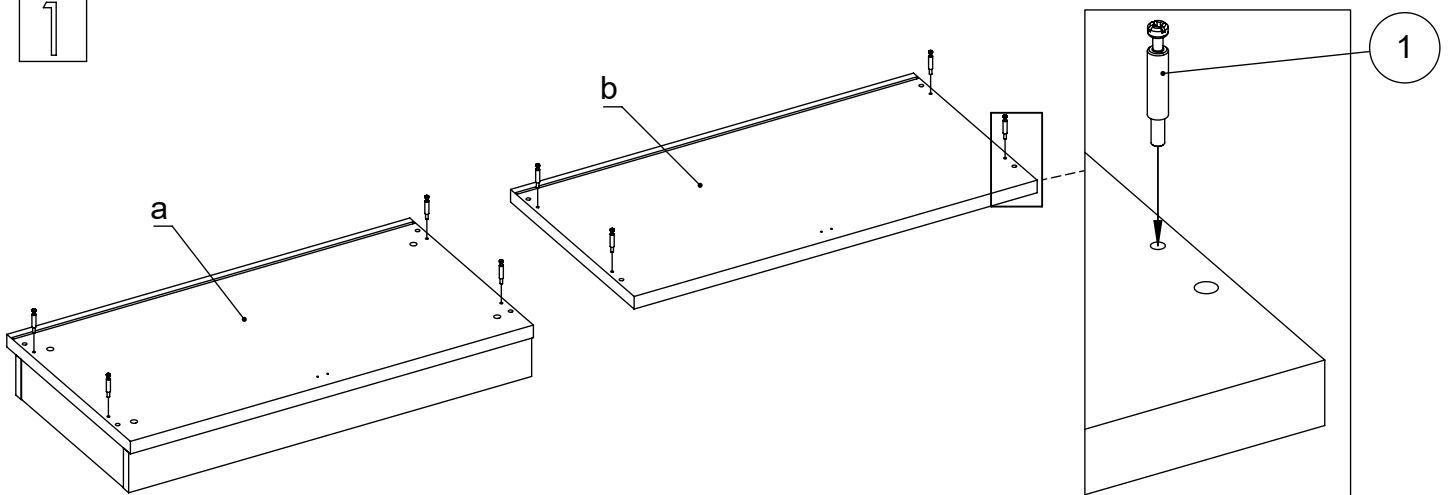




3

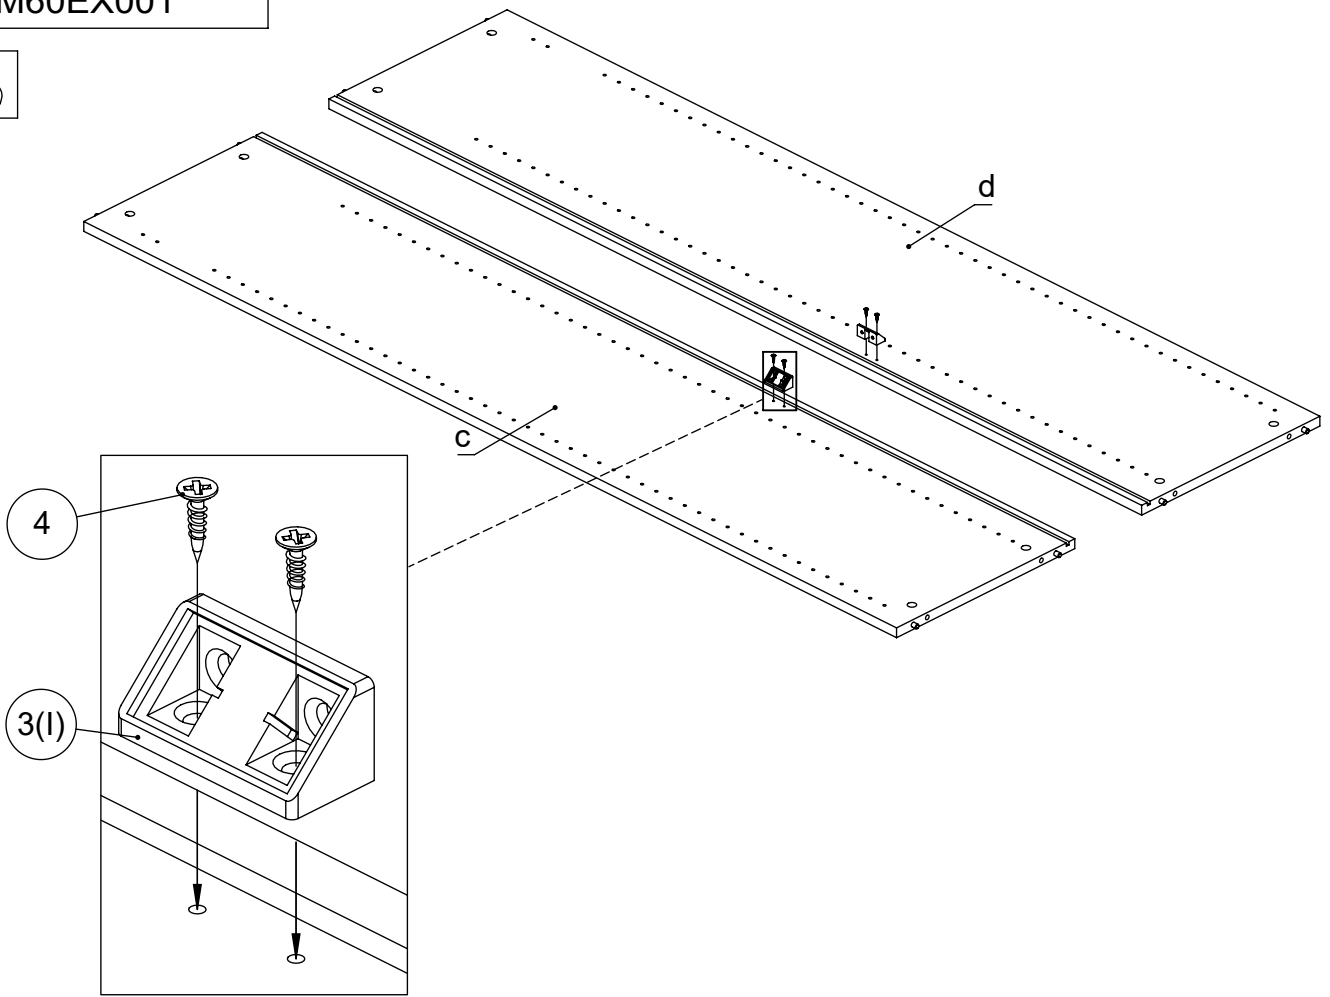



4

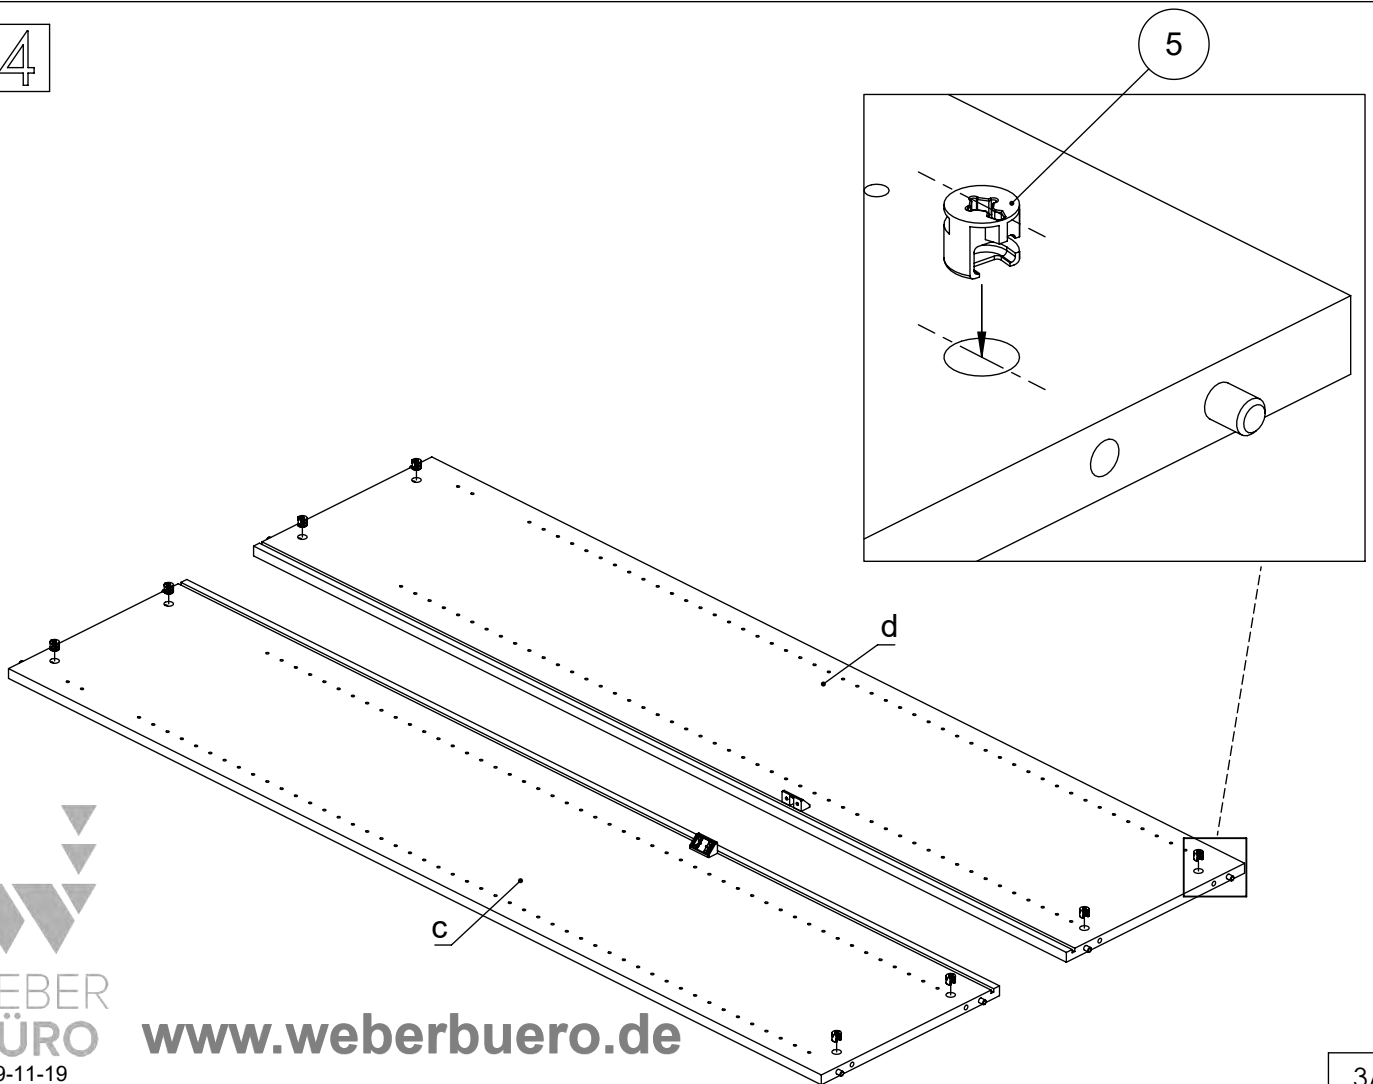


5

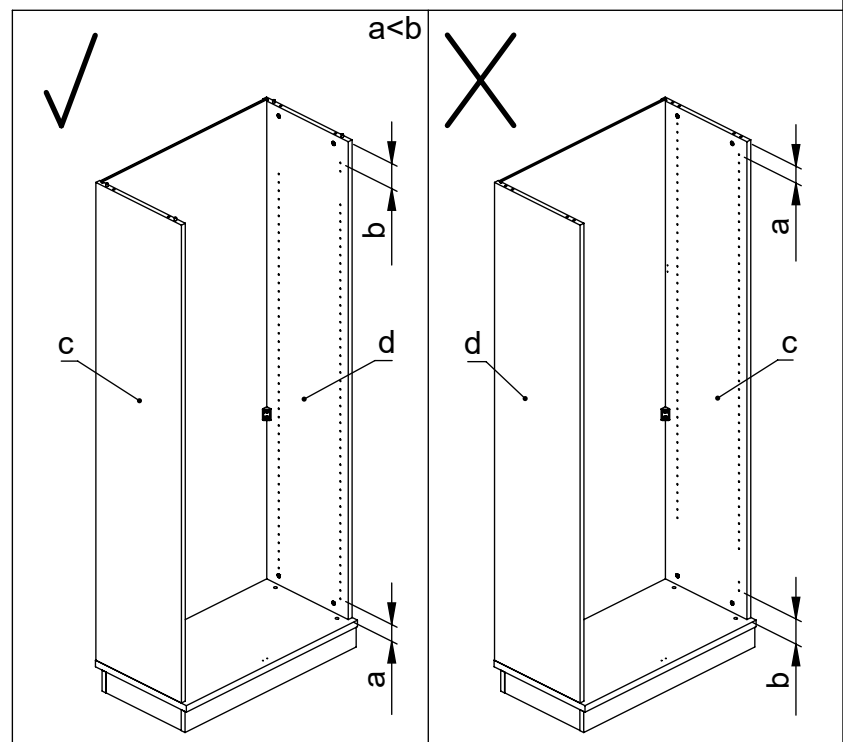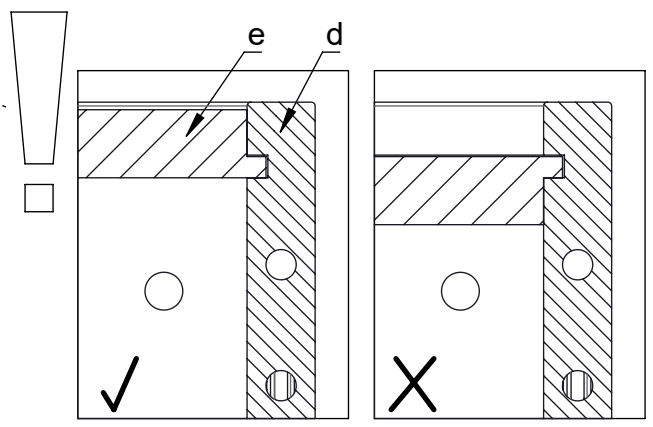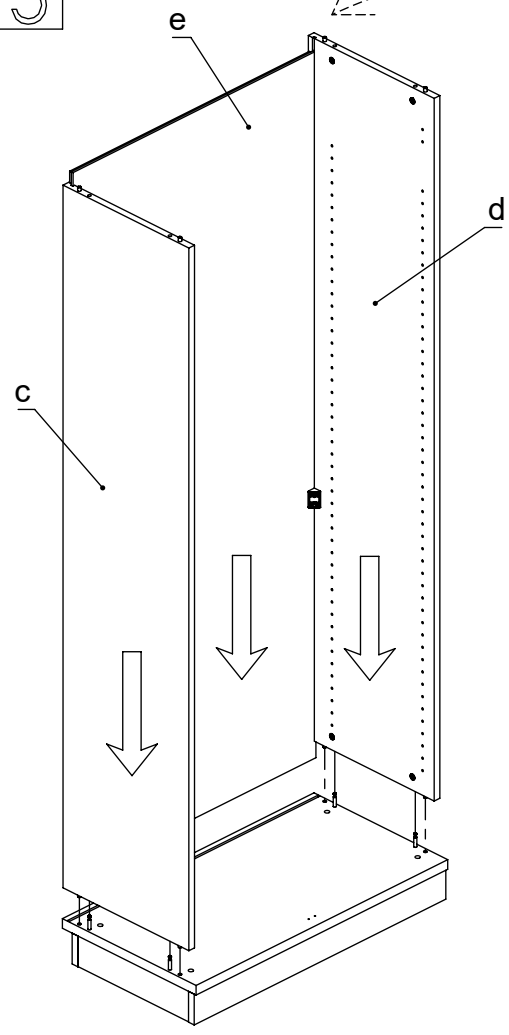


6

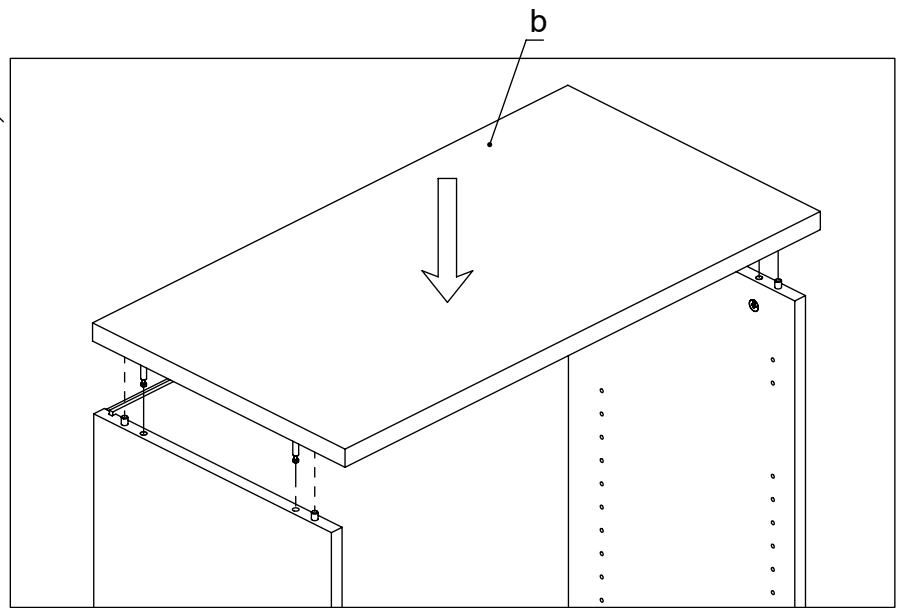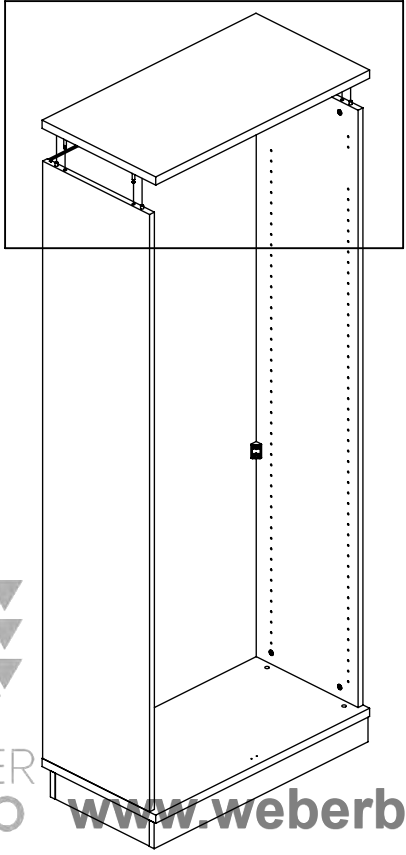


7

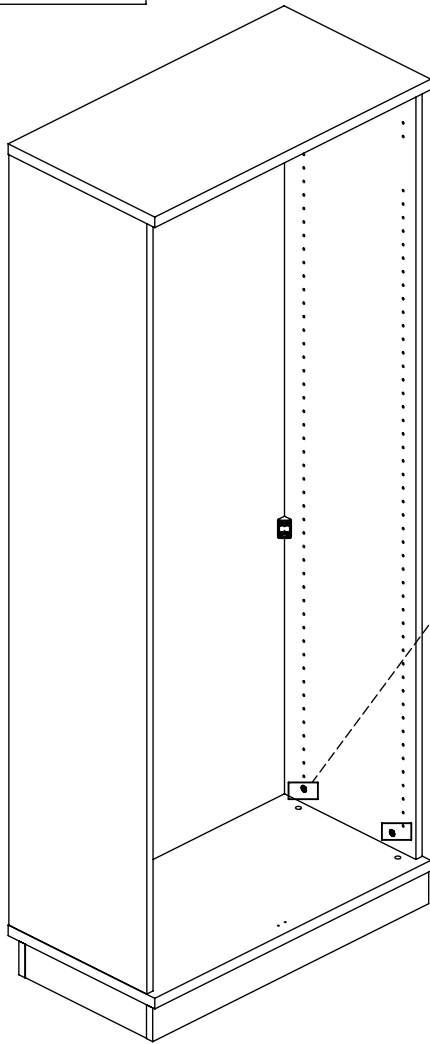


1)

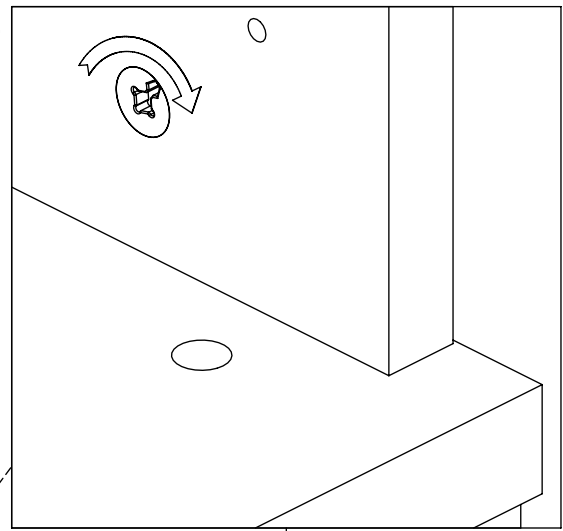


2)

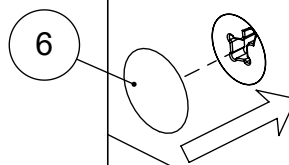


8

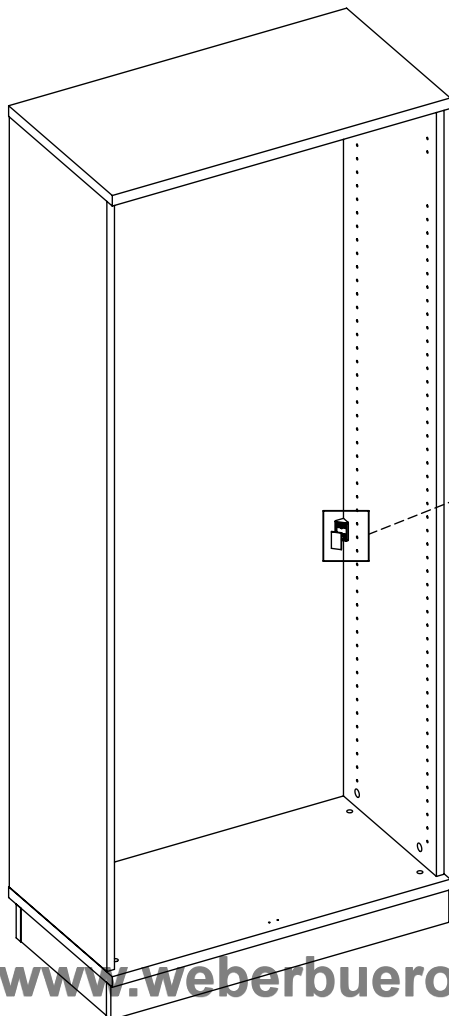


1)

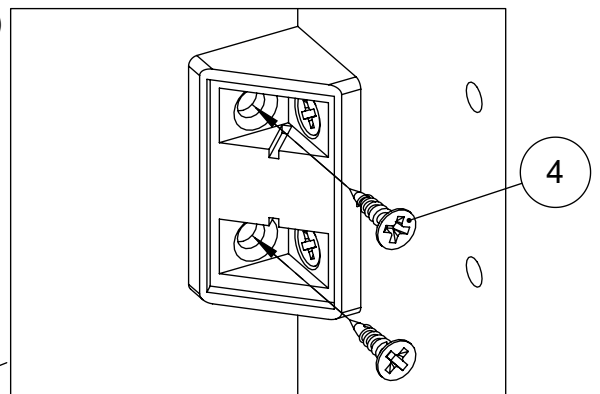


2)

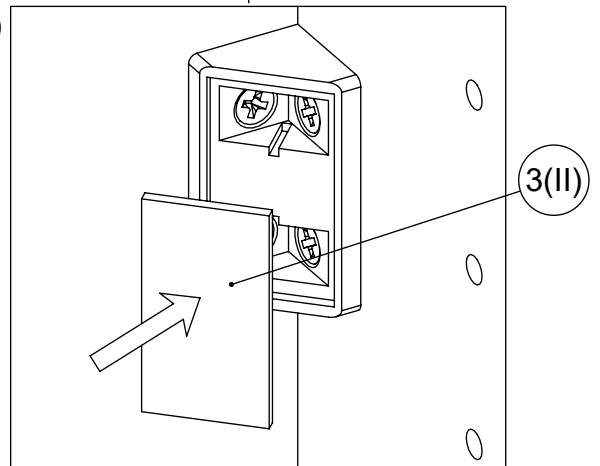


9 a)

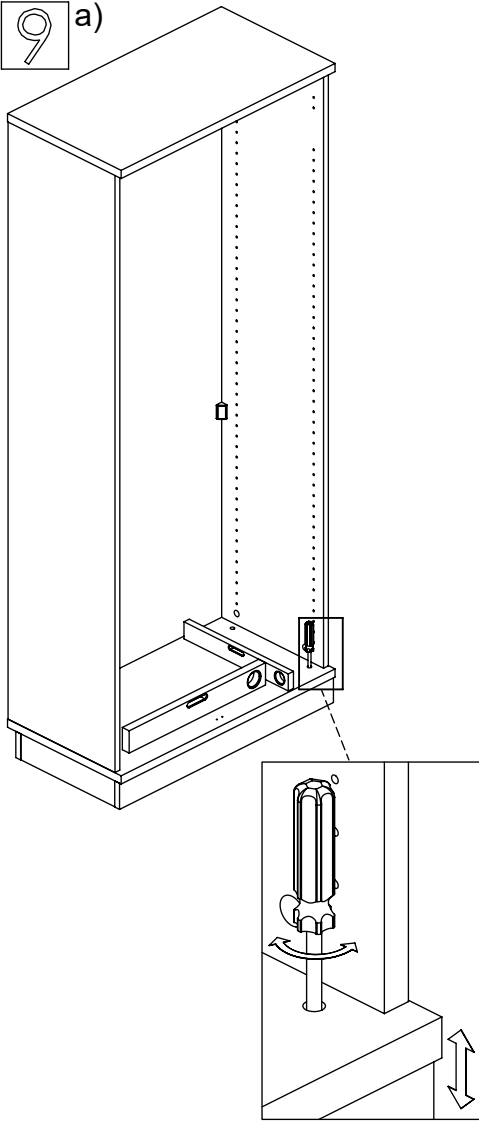


b)

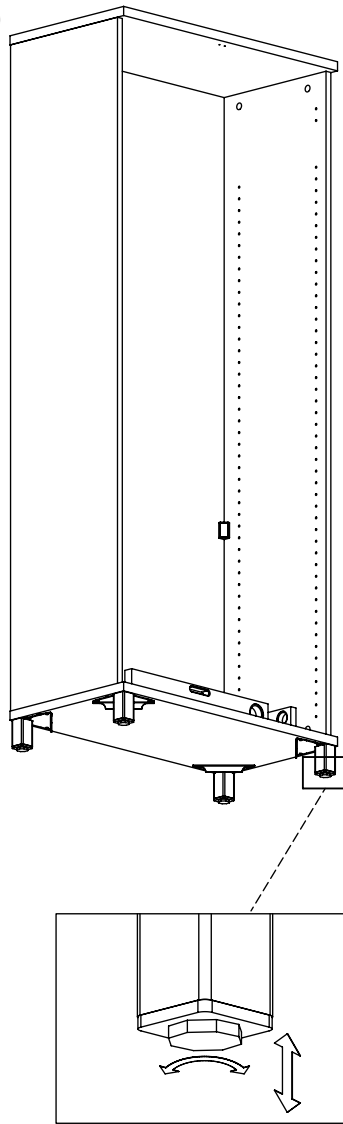


c)

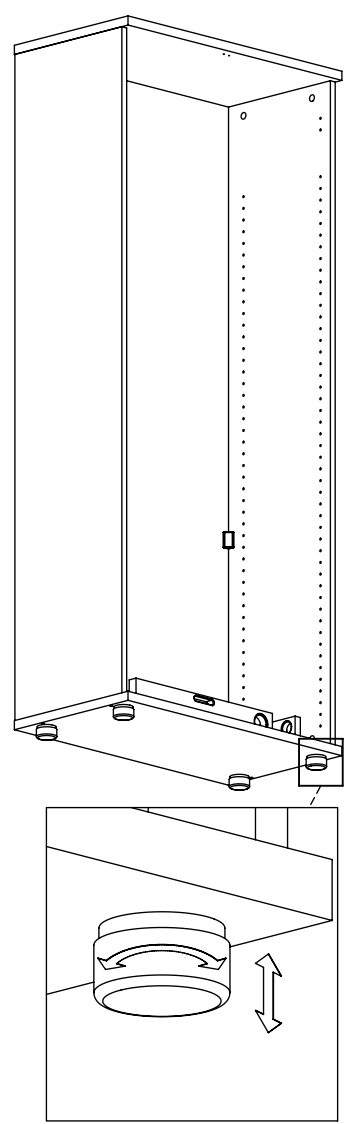


10

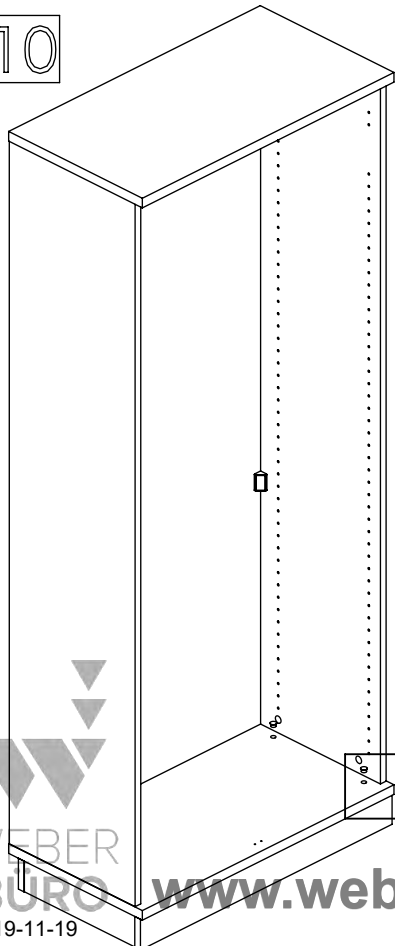

7

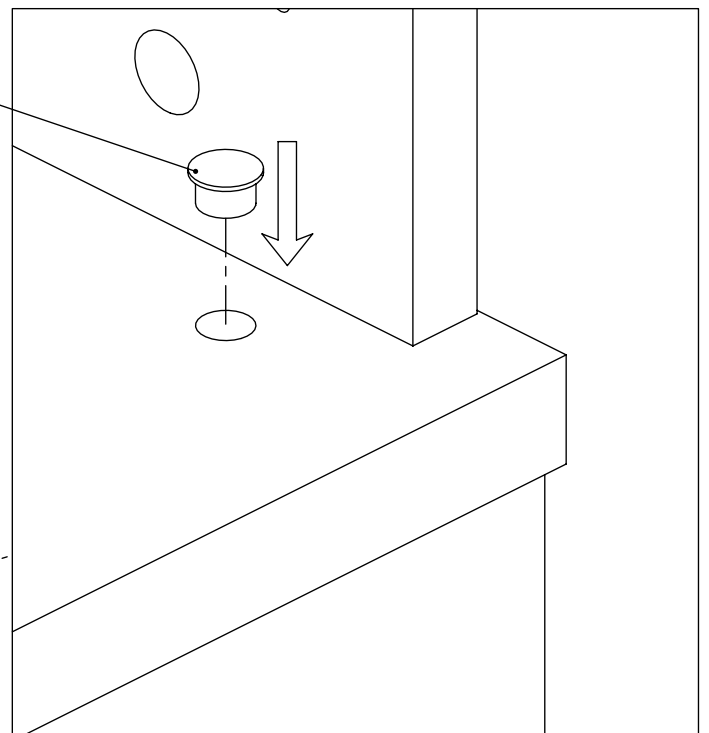






Surinkimo schema:
 Assembling scheme:
 Схема сборки:

	G1C002			
	G1C005			
	G1C008	G1C009	G1C015	G1C014
	G1C037	G1C006	G1C011	G1C013
	G1C038	G1C001		G1C039
①	x4	x12	x16	x8

1.

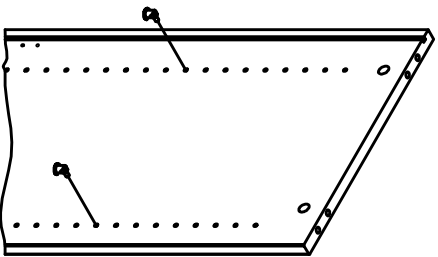

2.

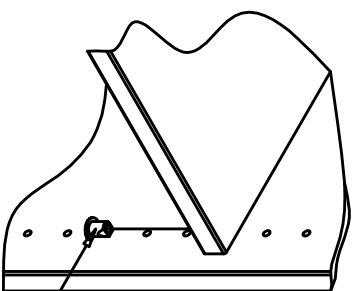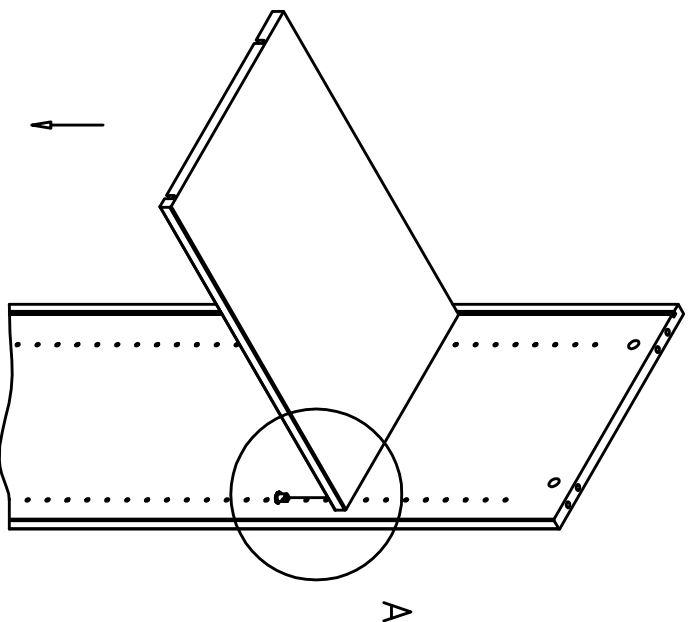

A (2:1)

M60EX009



06.09.11

WEBER
BÜRO

www.weberbuero.de

M60EX013


EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage

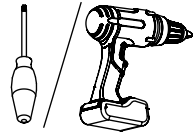

1



2




M42B0006

*

M42B0008

*

A

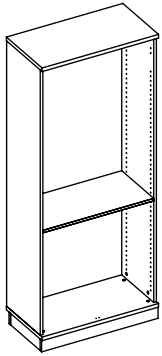


a - x1




1 - x4

2 - x4

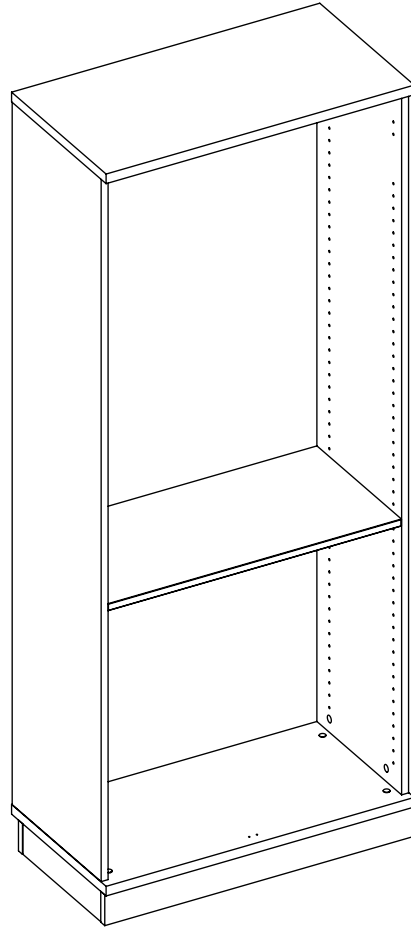

B

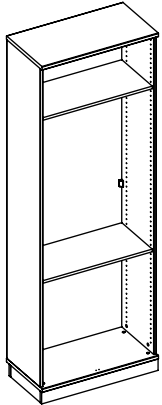


a - x2




1 - x8




2 - x8

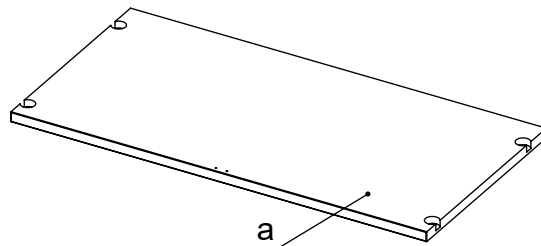

1

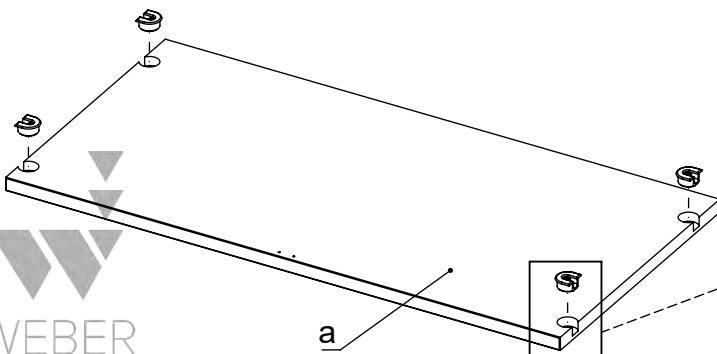


1

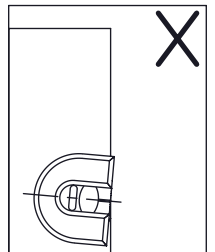
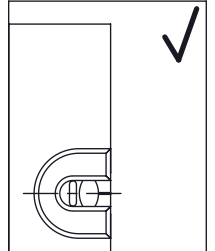
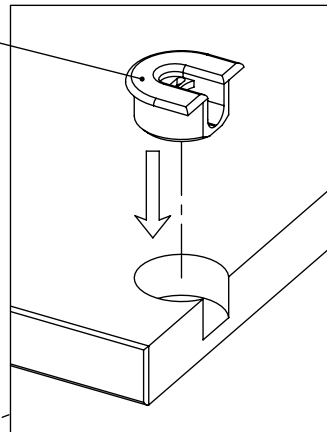


2A





B

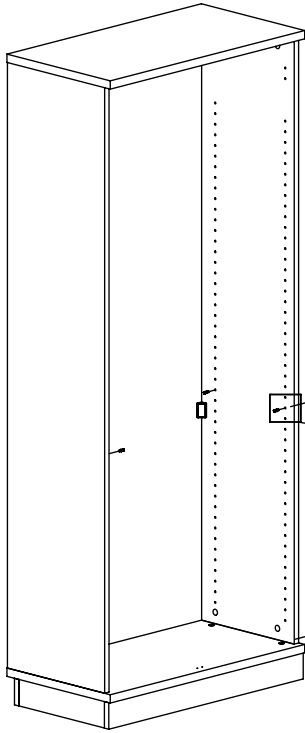

2

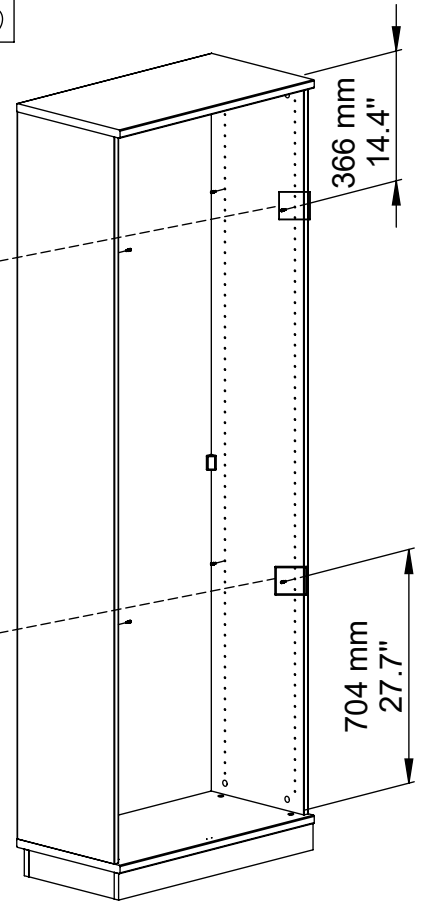
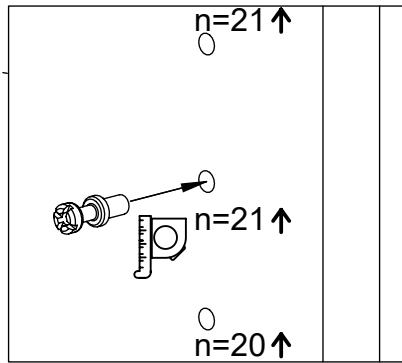
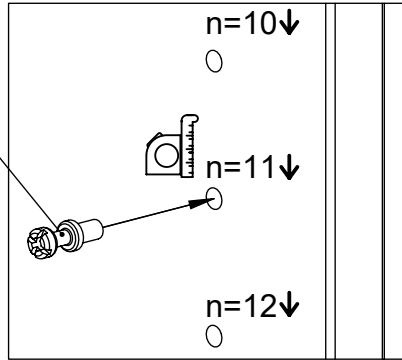


3

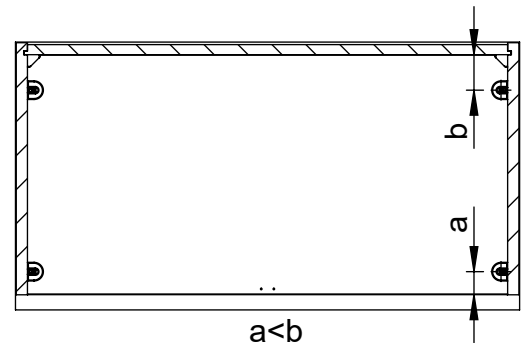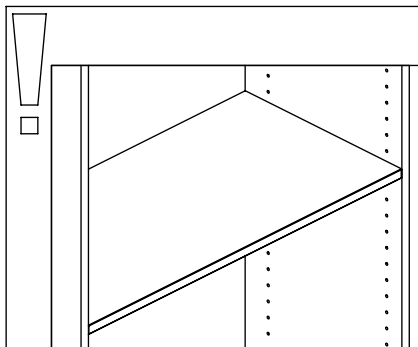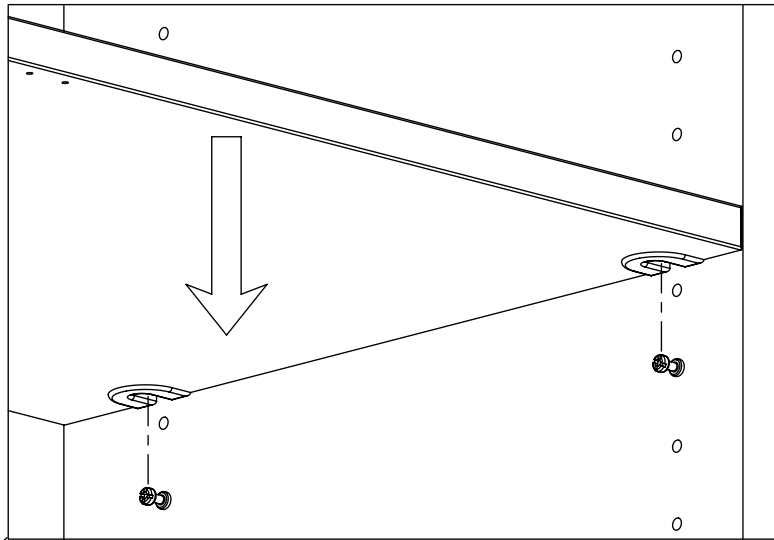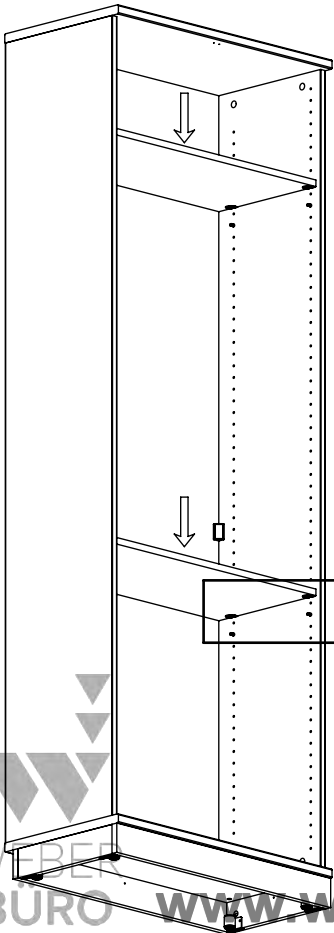


M60EX019

EN Assembling scheme
 DE Aufbauanleitung
 FR Schéma d'assemblage

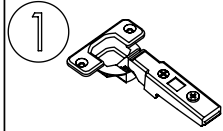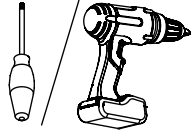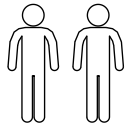

M48A0189



x4

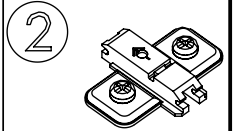

M48A0031


x4

a - x1
 b - x1

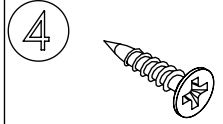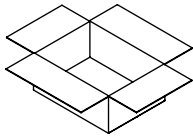


3.5x17
 M42A0017

x8

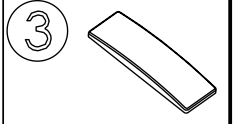


M48A0133

x4

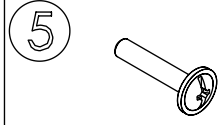


M4x22
 M42C0009

x4

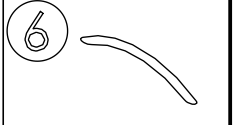


x2

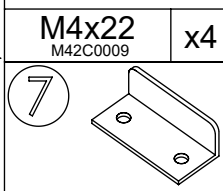


M45F4001

x2

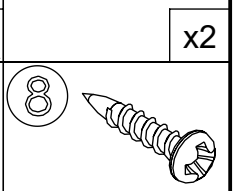


3.0x15 P
 M42A0004

x4

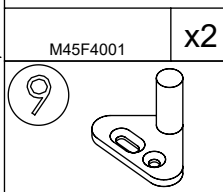





M45F9009

x2

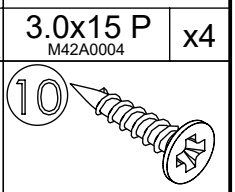


3.0x15 K
 M42A0003


x4

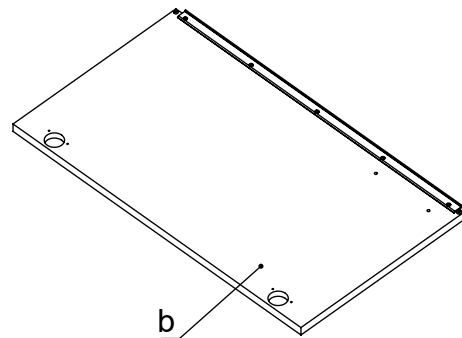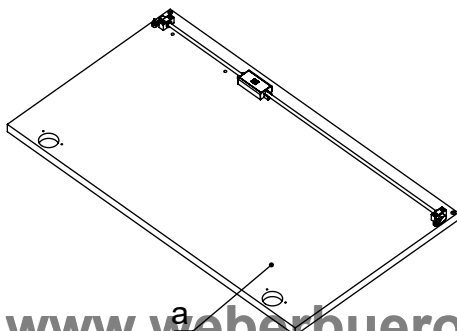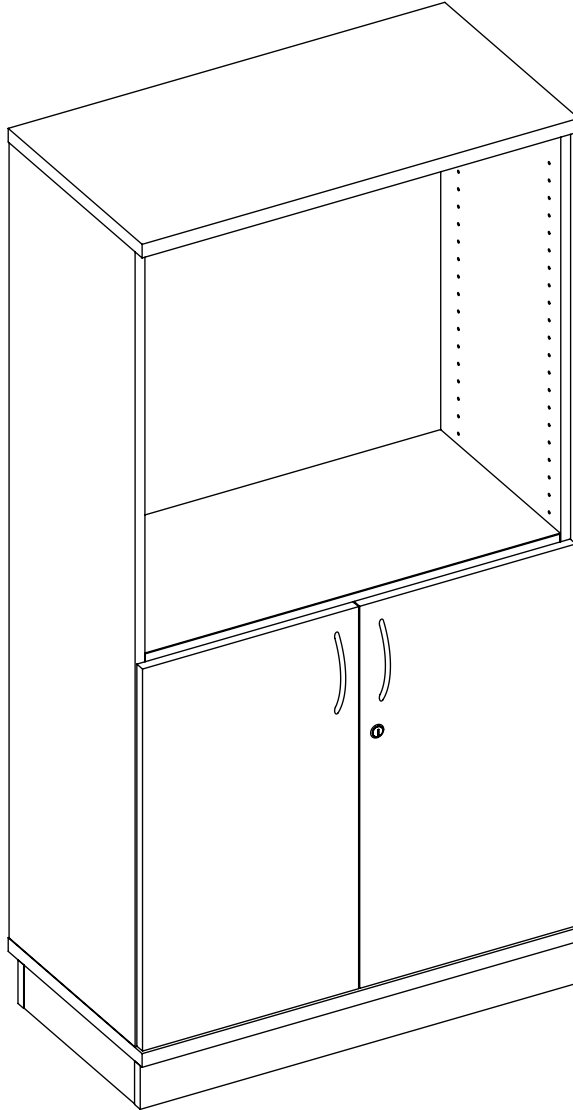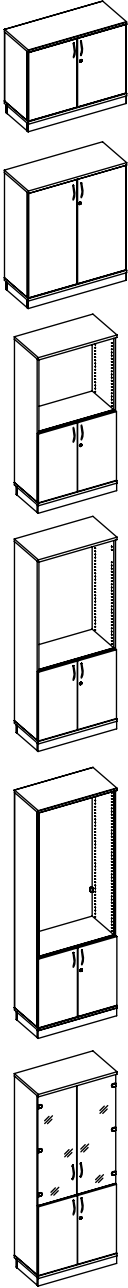




1

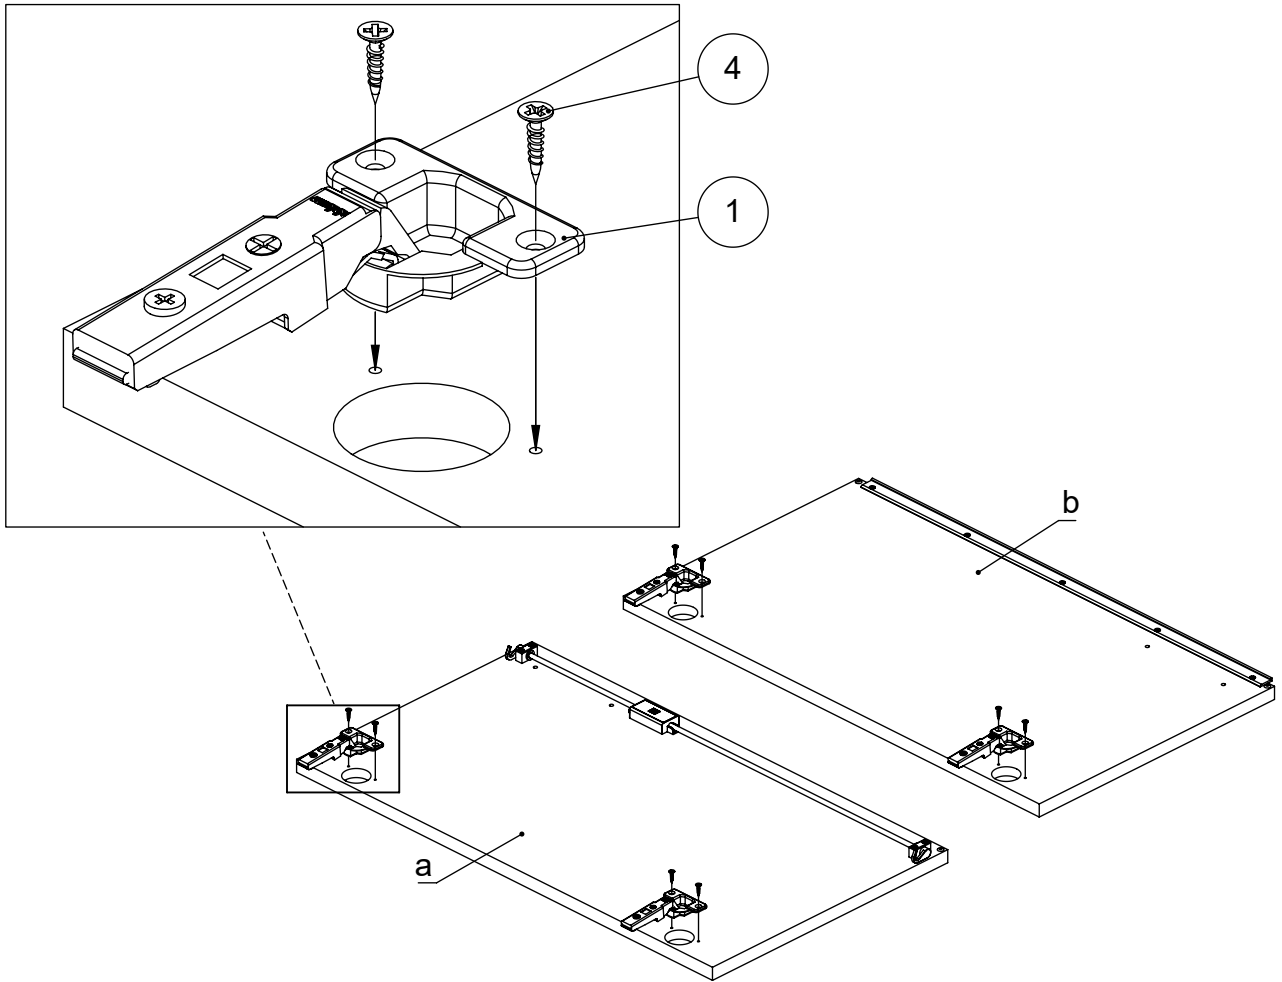





2

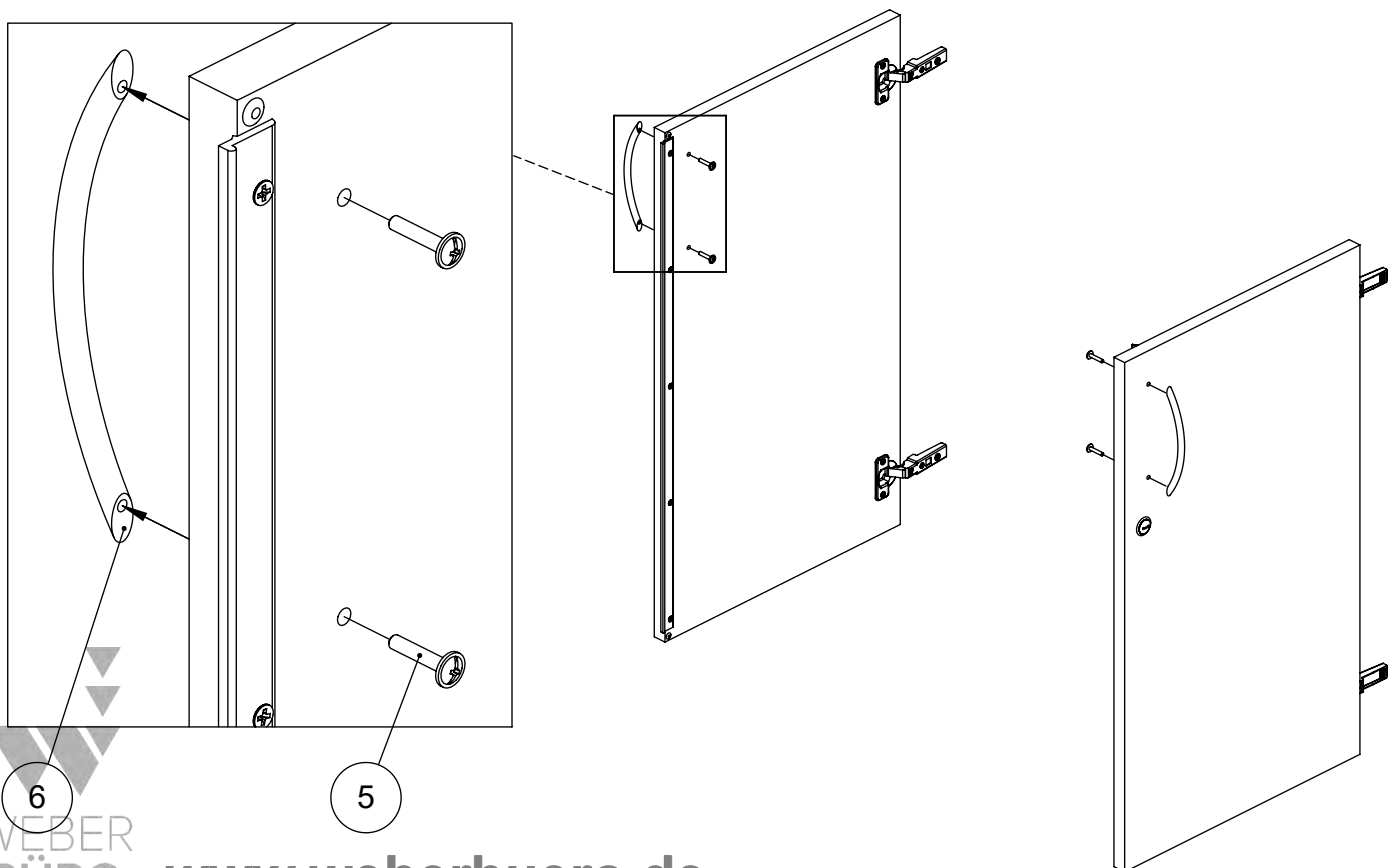





3

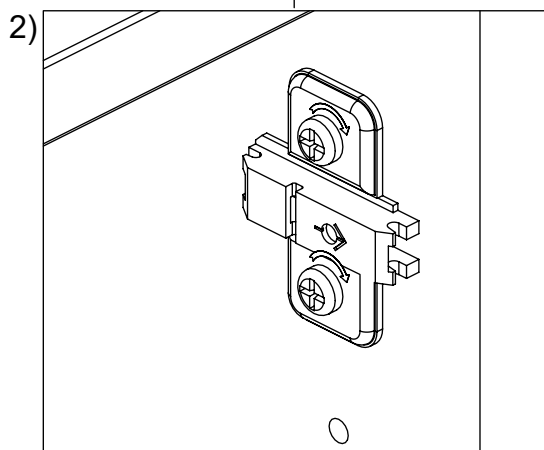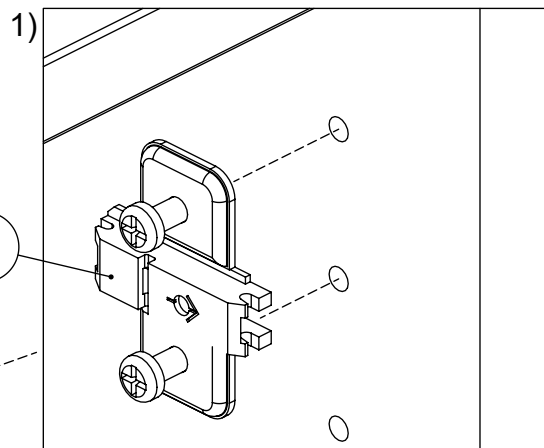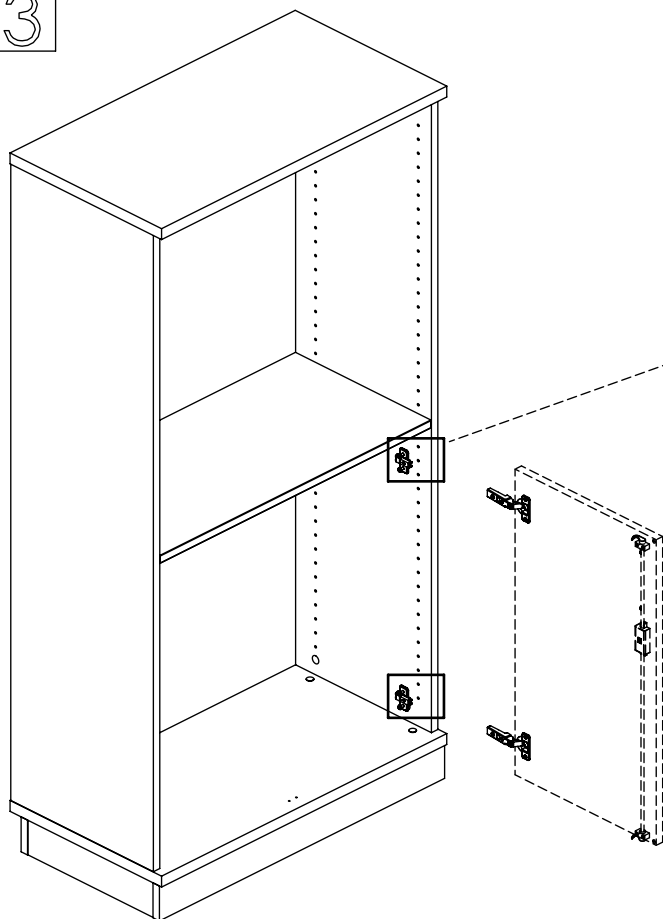



4

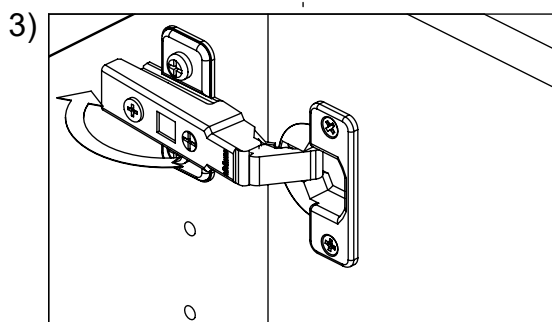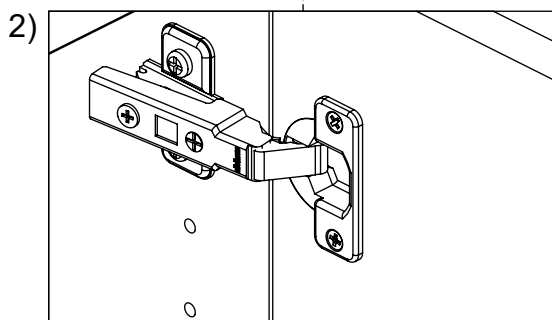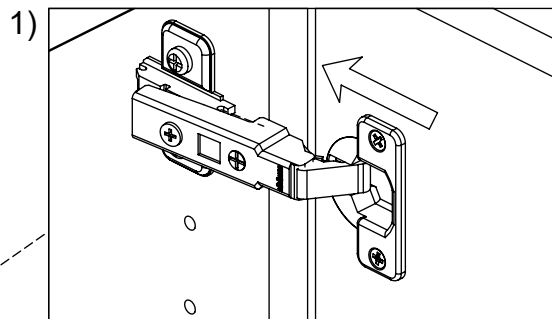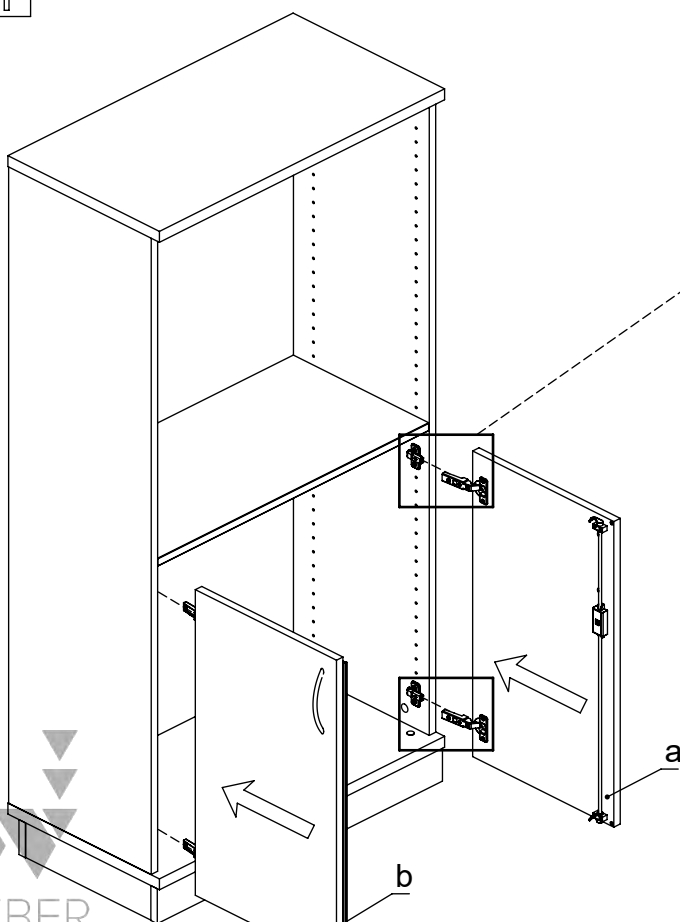


5

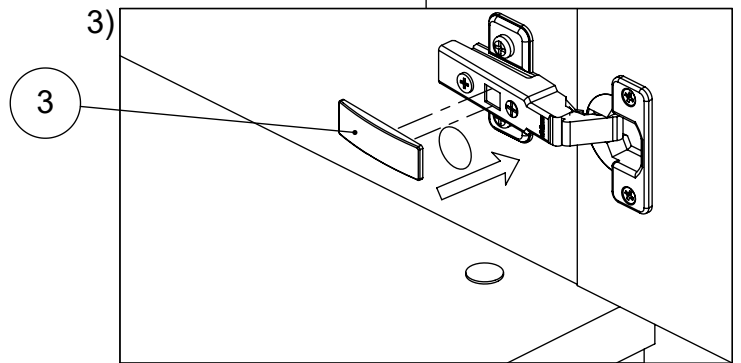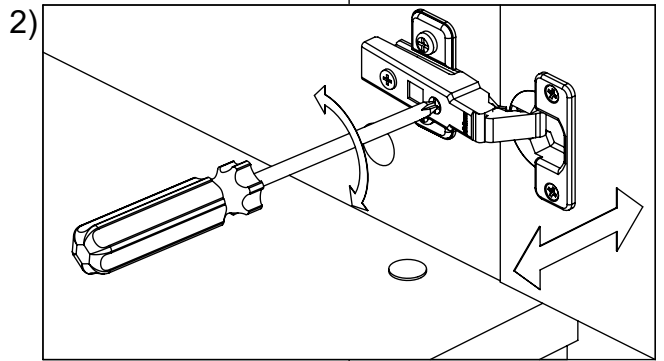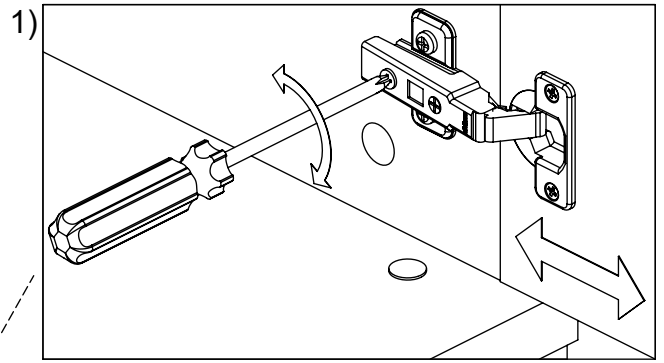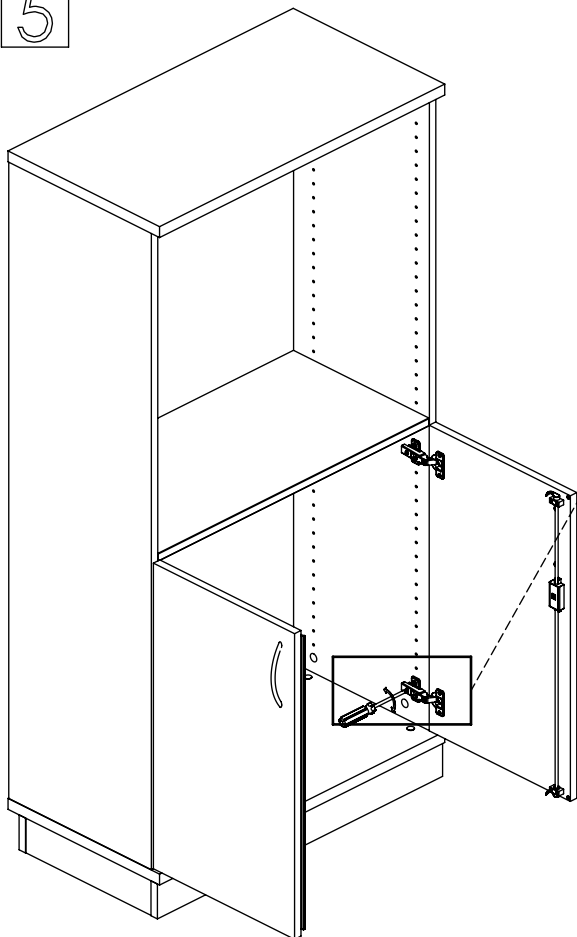


6

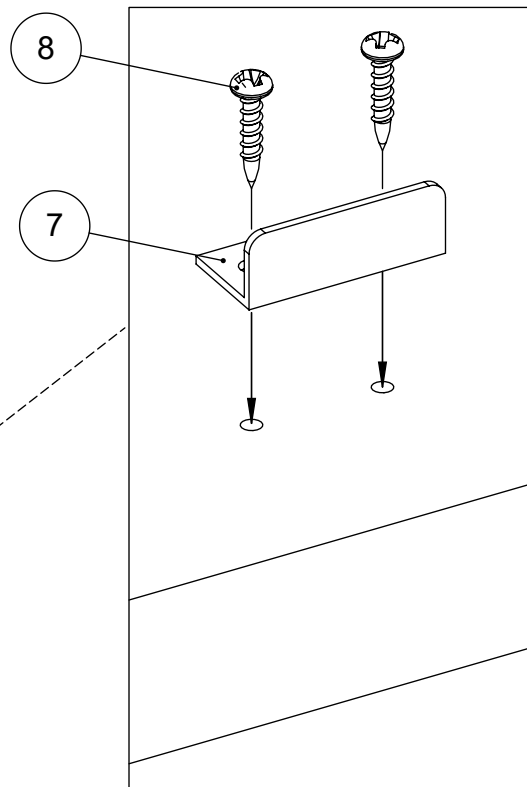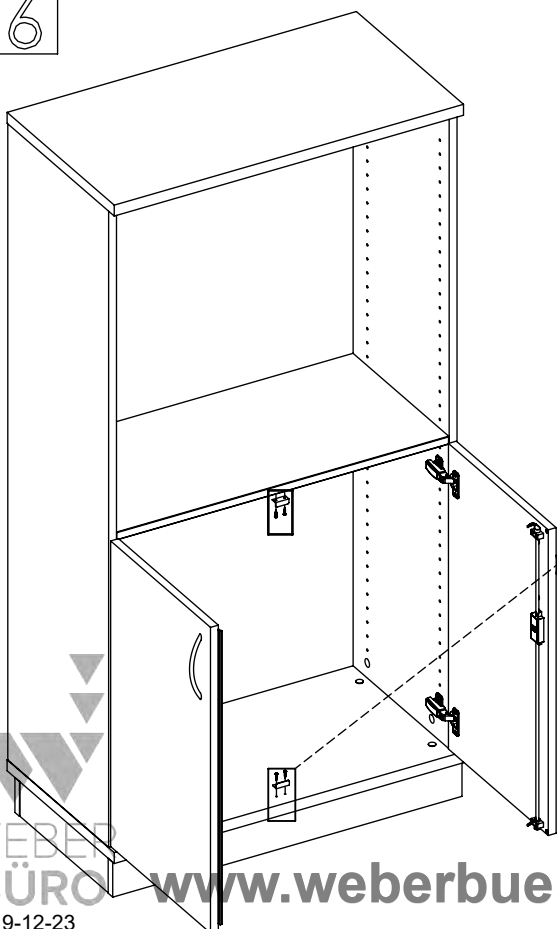




7

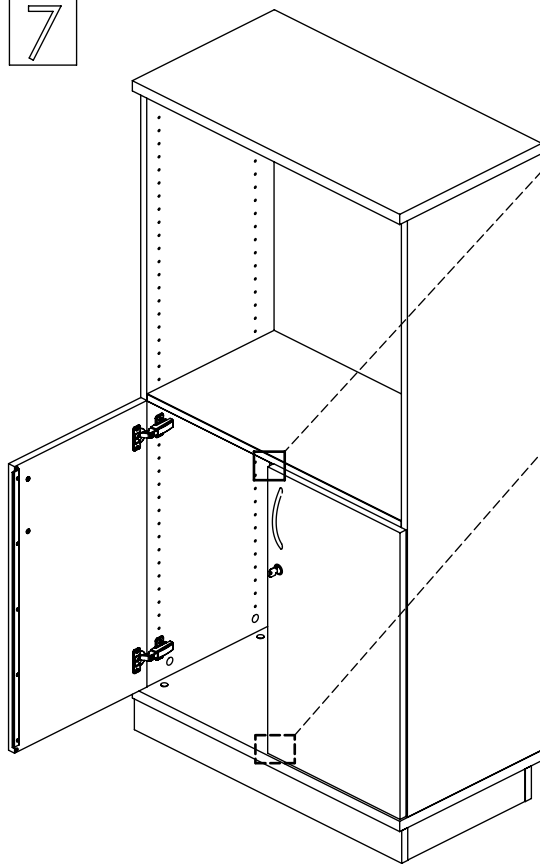


1)

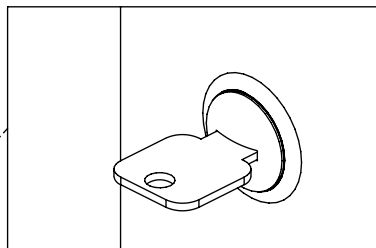

2)

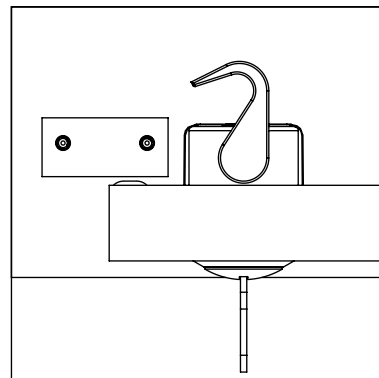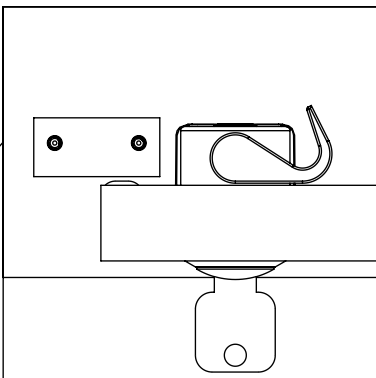
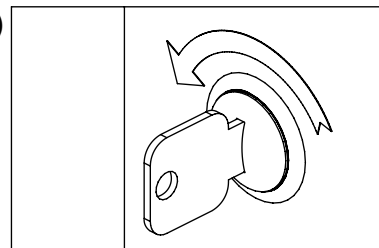


8

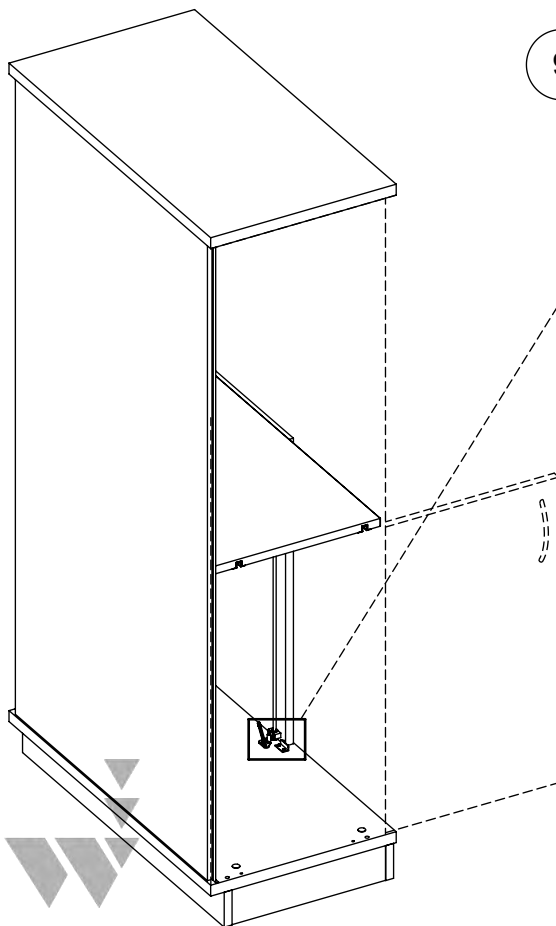

1)

9

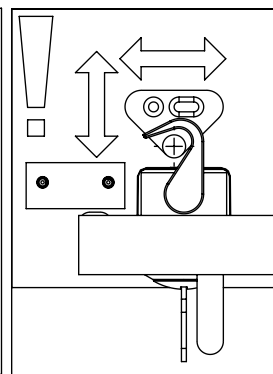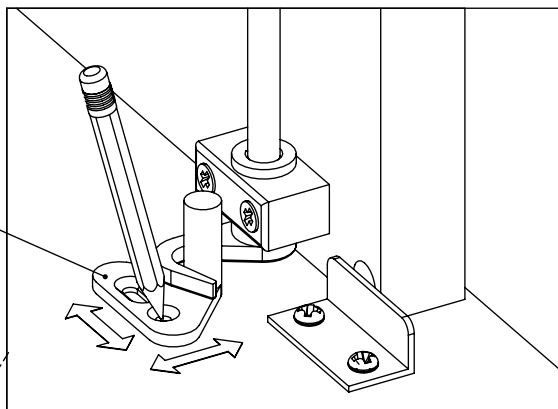

2)

10

