
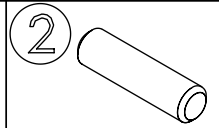
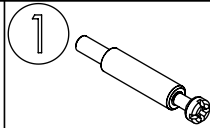



# M60EX006




EN Assembling scheme  
 DE Aufbauanleitung  
 FR Schéma d'assemblage

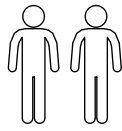

5/11x34  
M42B0022 x12



∅8x30  
M42H0001 x12

a - x1 [A]: e\* - x2  
 b - x1 [B]: f\* - x1  
 c - x2  
 d - x1

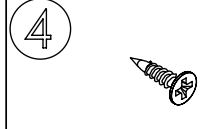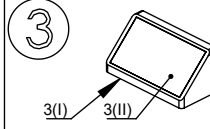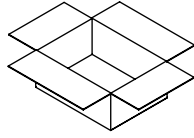


M45A90\* x3

3.5x15  
M42A0012 x12







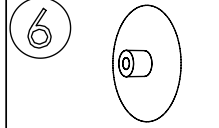
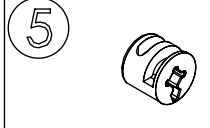










15/18  
M42B0001 x12

∅4/18  
M45A30\* x12

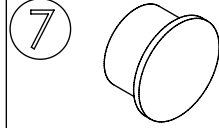


M45A20\* x5

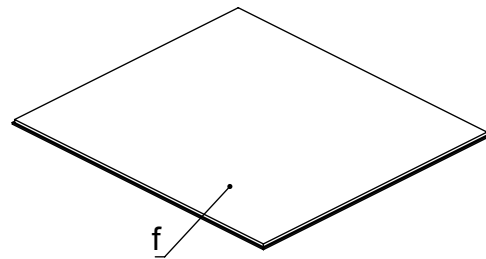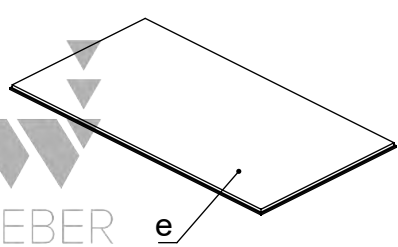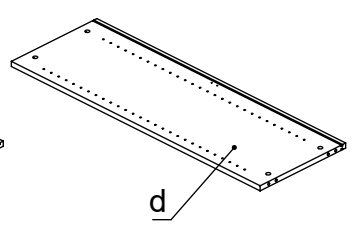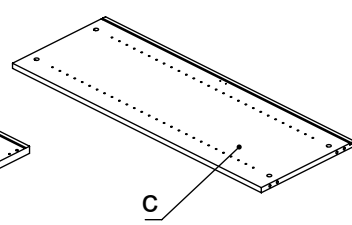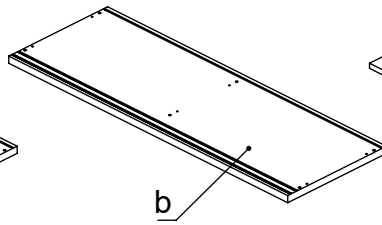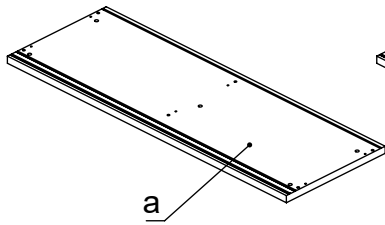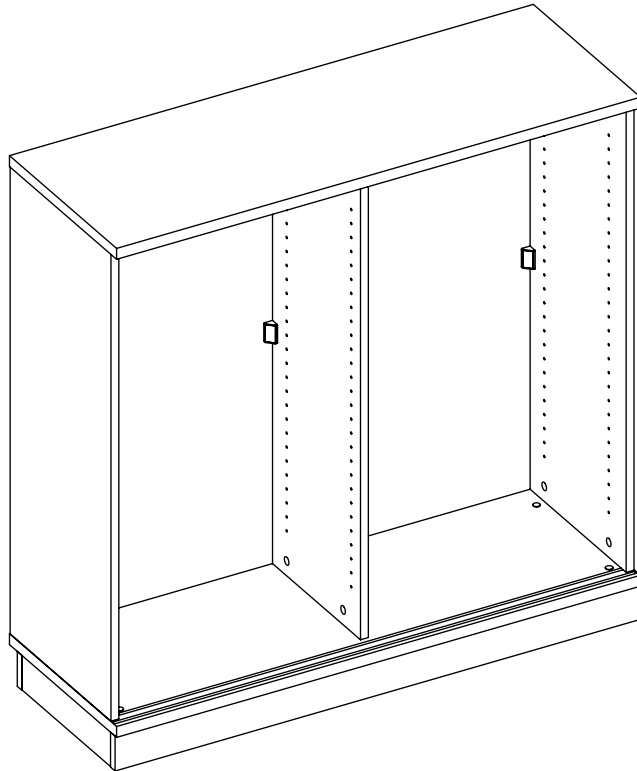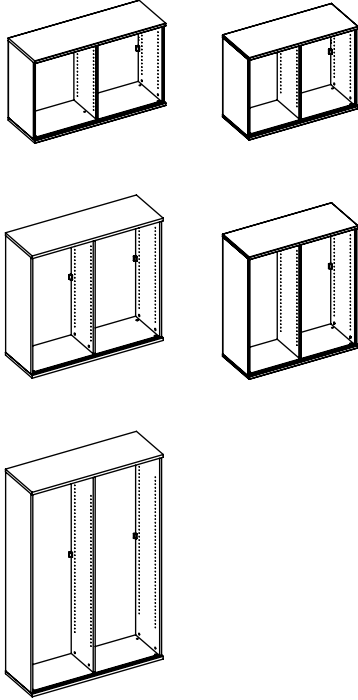

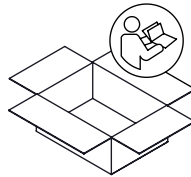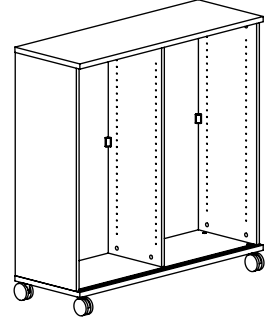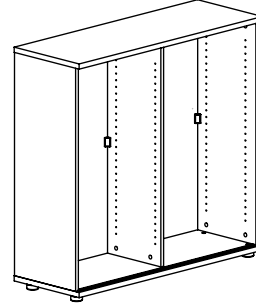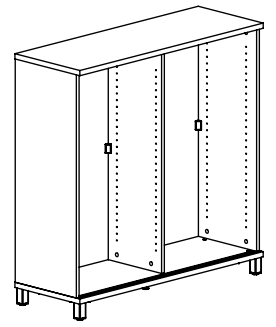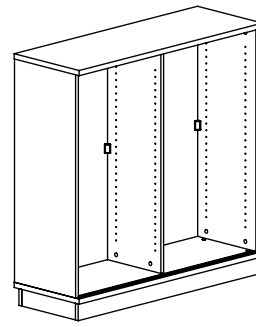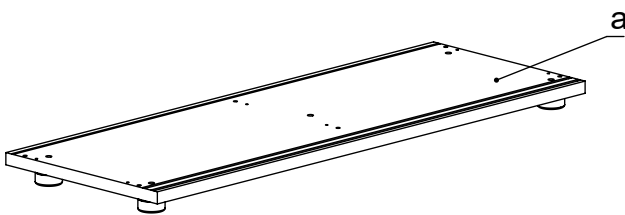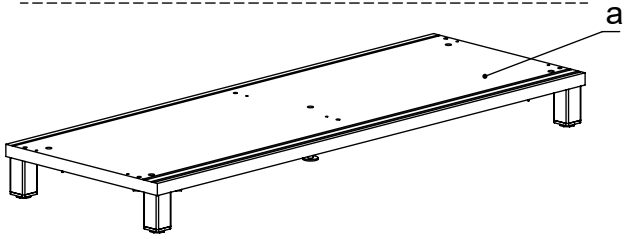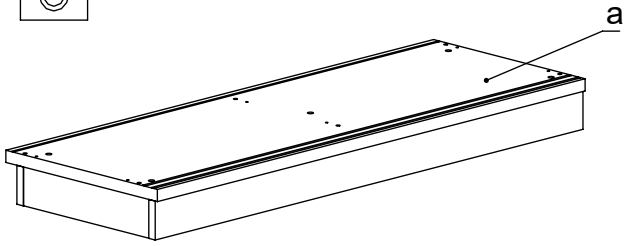


EN	The assembly scheme of base is included in the selected base package
DE	Die Aufbauanleitung zur Befestigung der Möbelbeine ist im entsprechenden Paket
FR	La fiche de montage de la base est incluse dans le colis de la base choisie



1

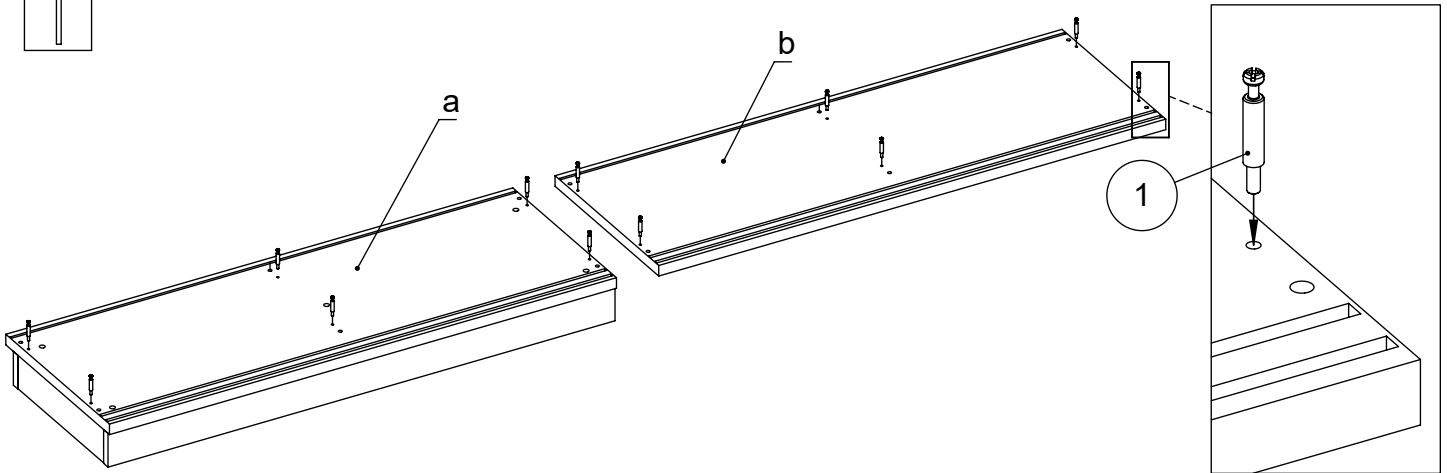



2

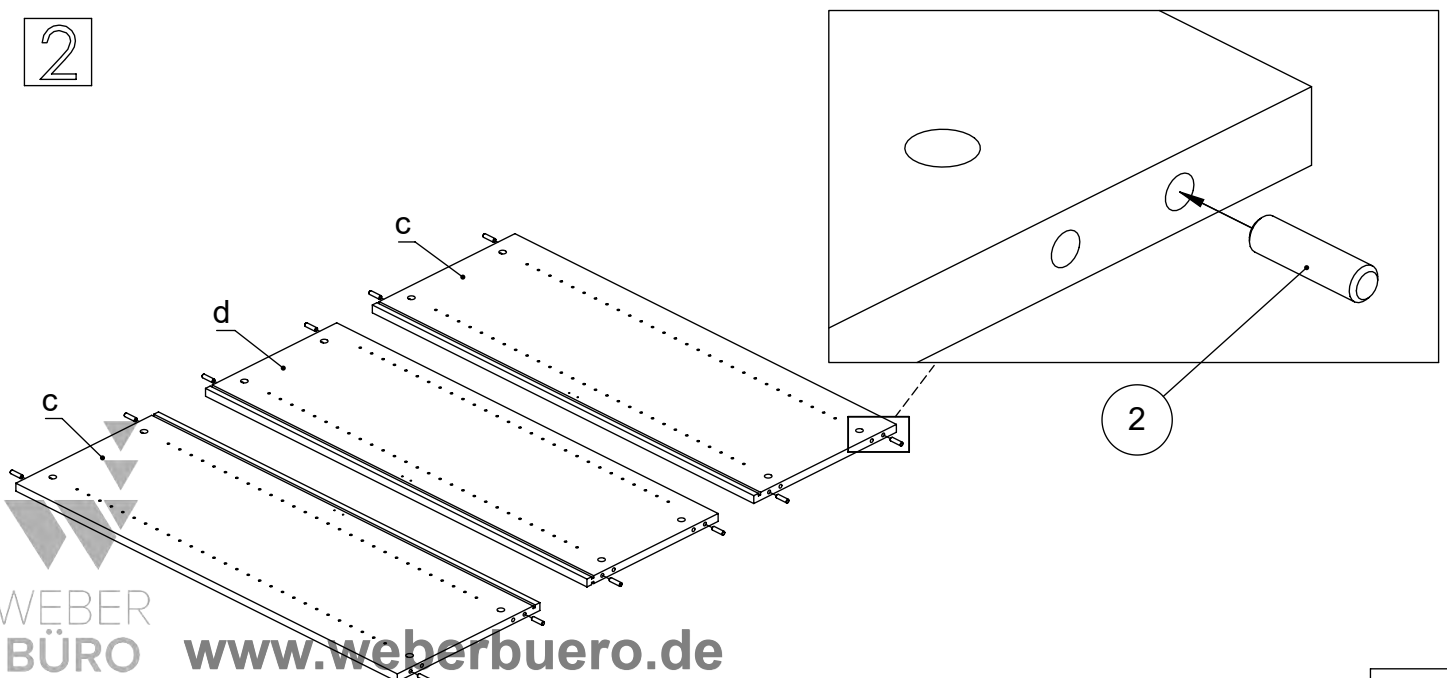


3

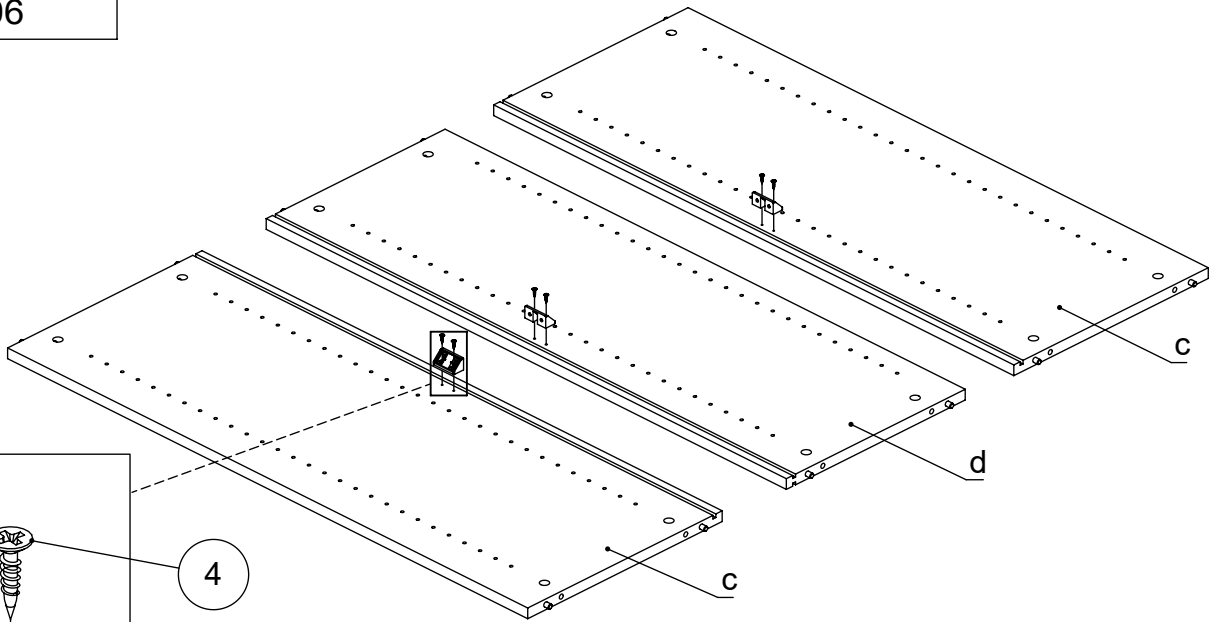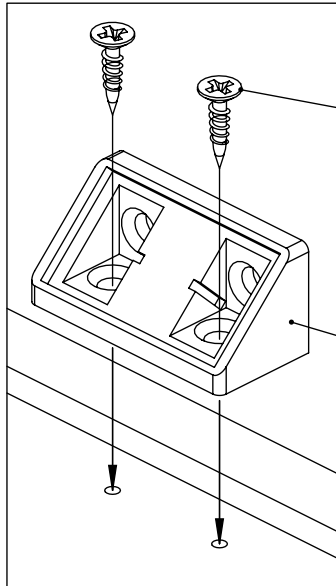


4

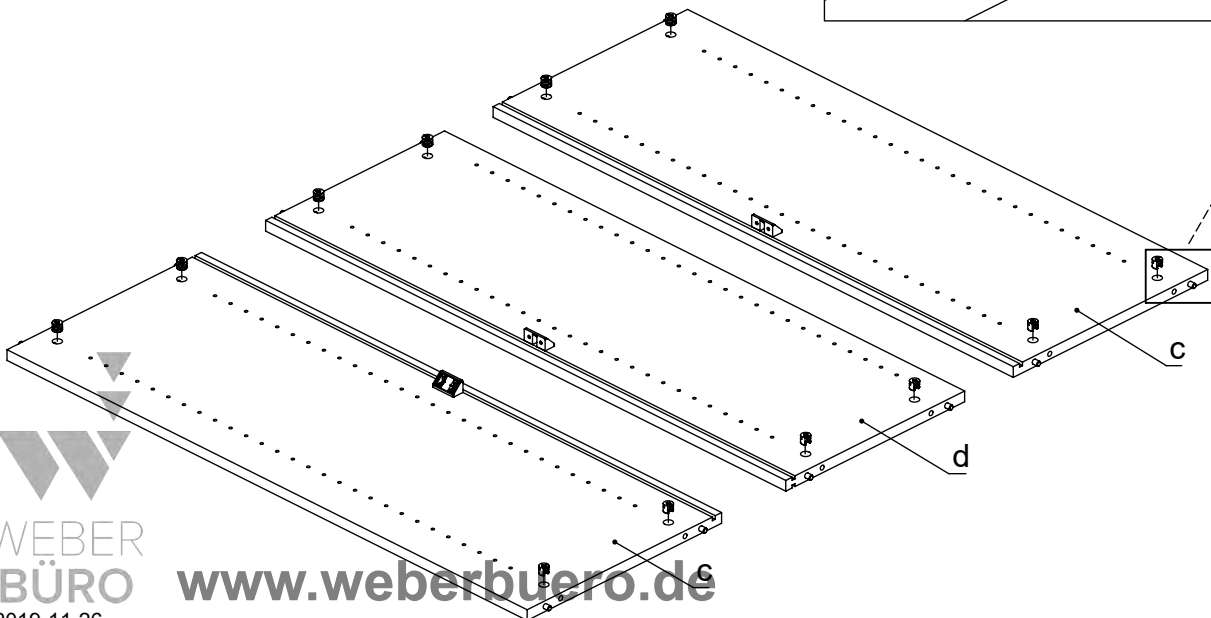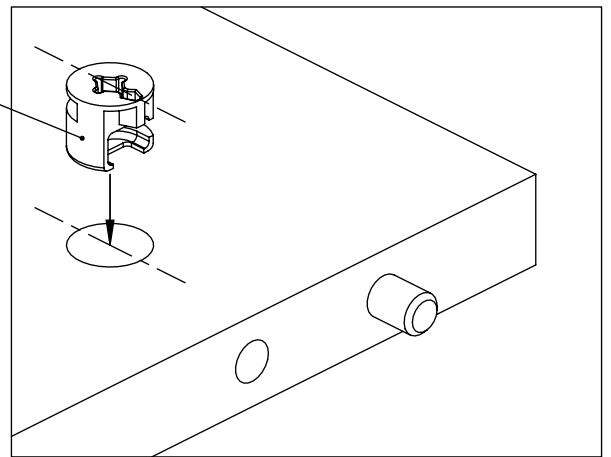


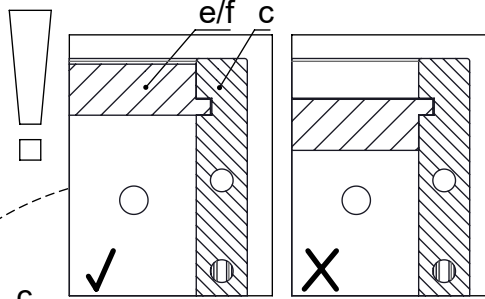



5 A

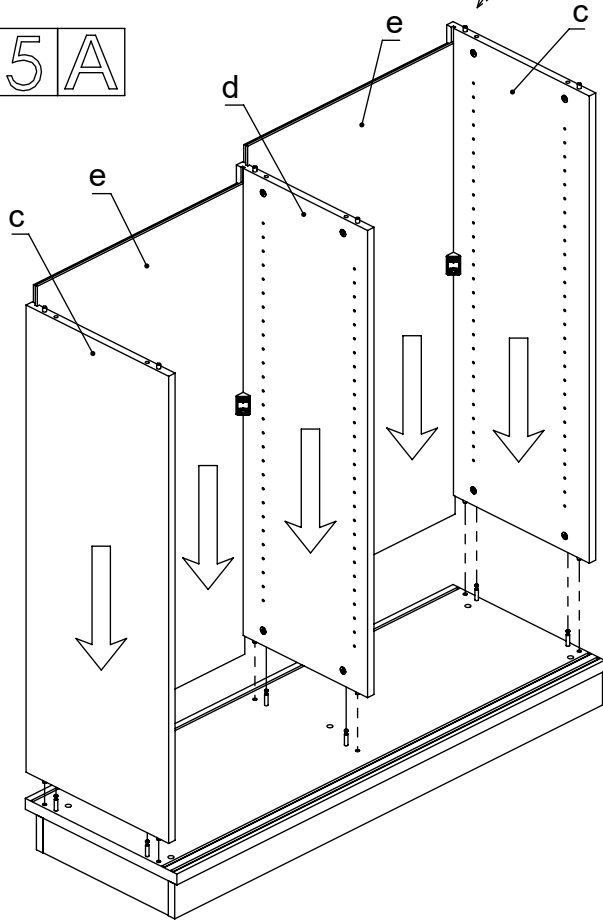




B

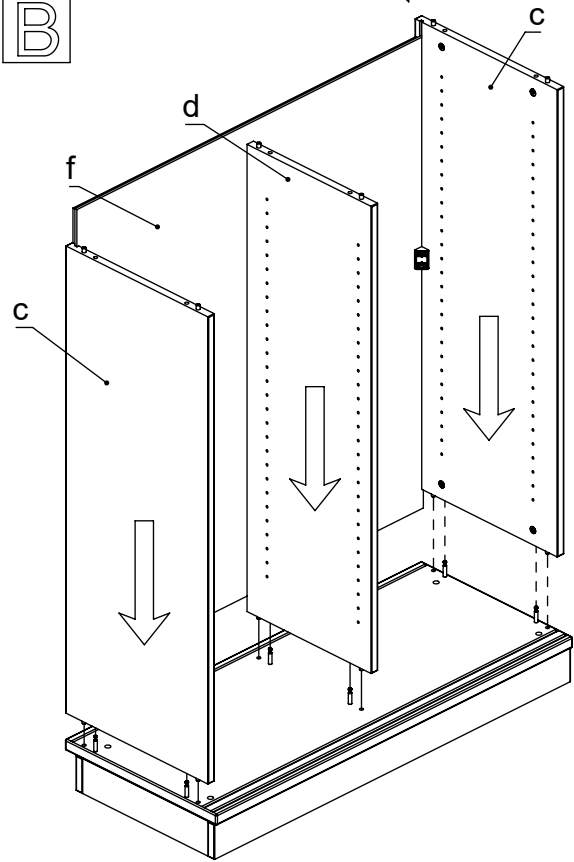




6

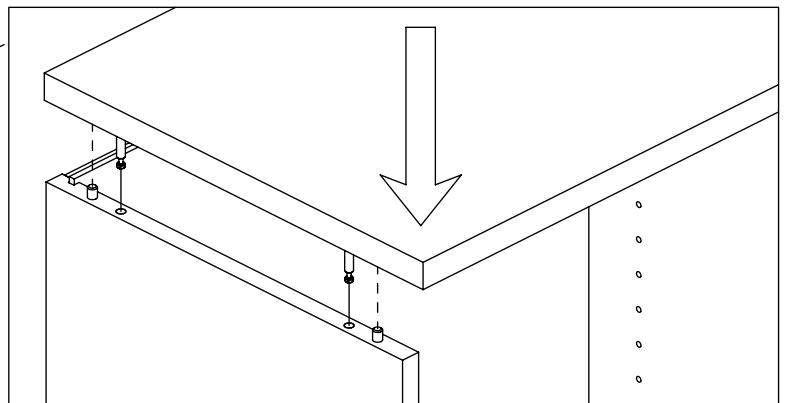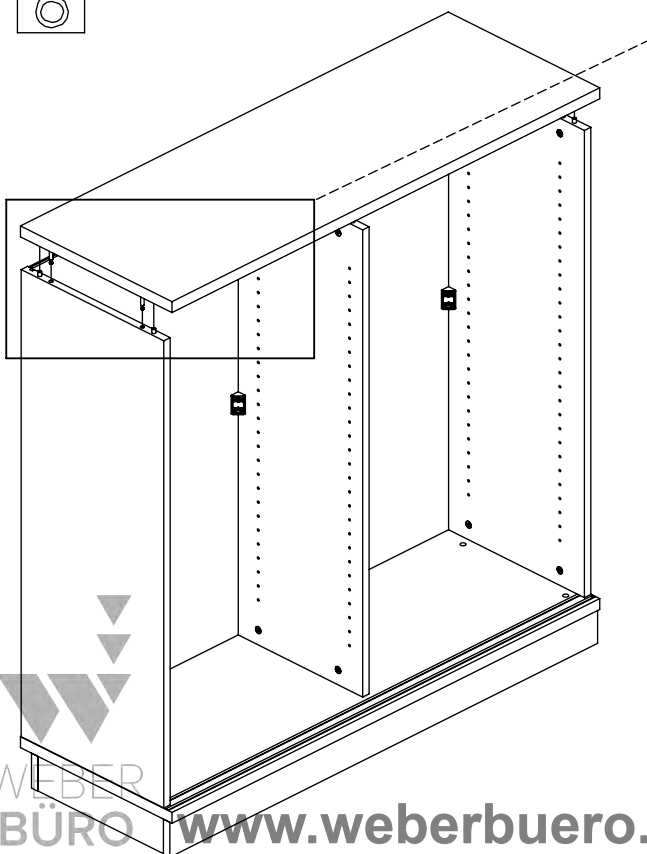



7

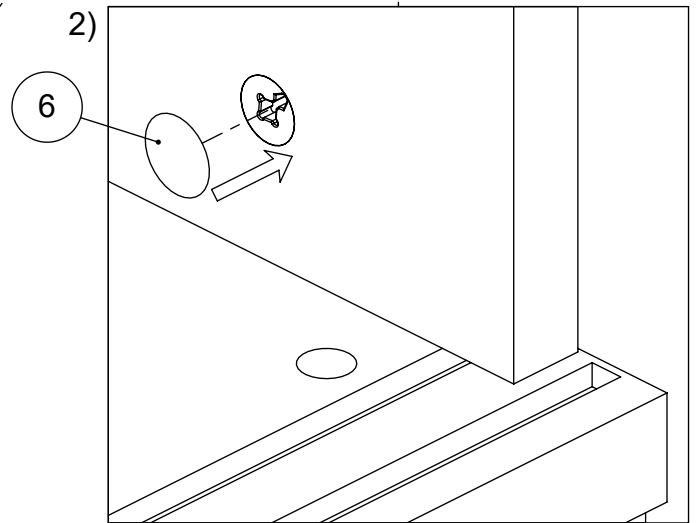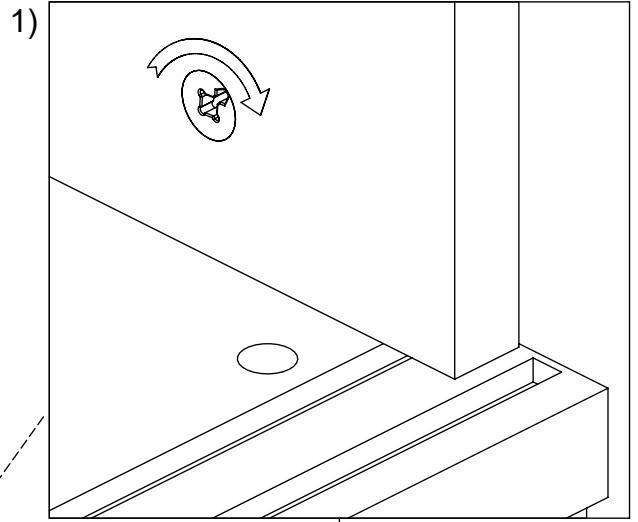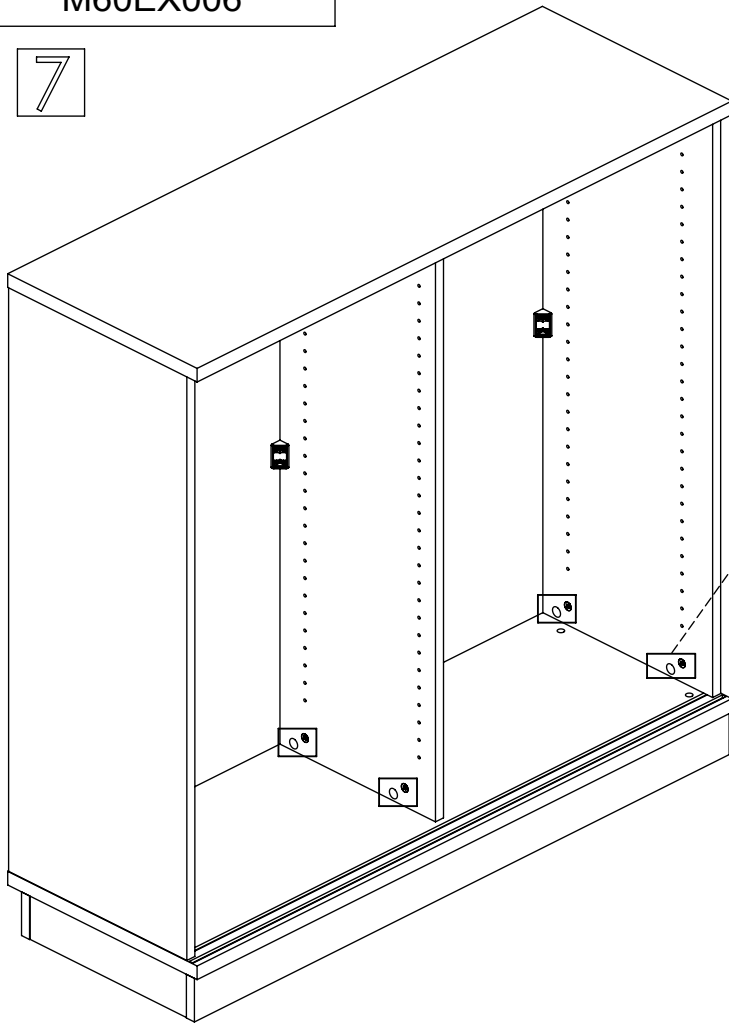



8

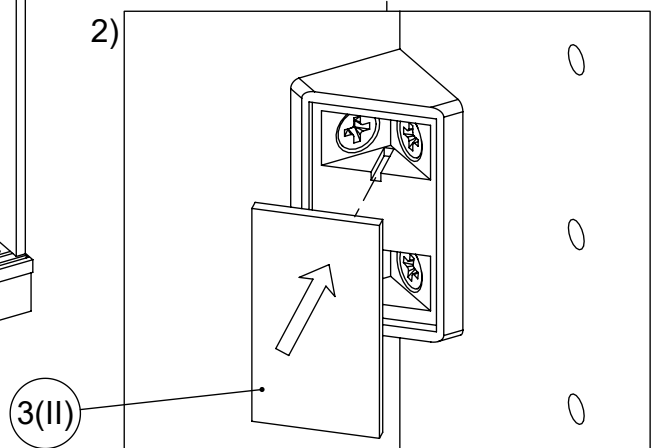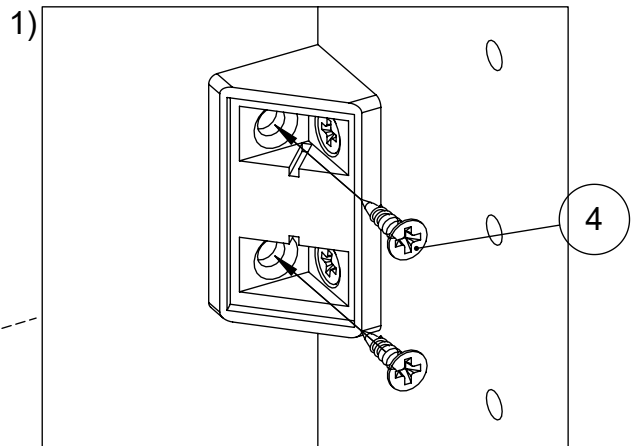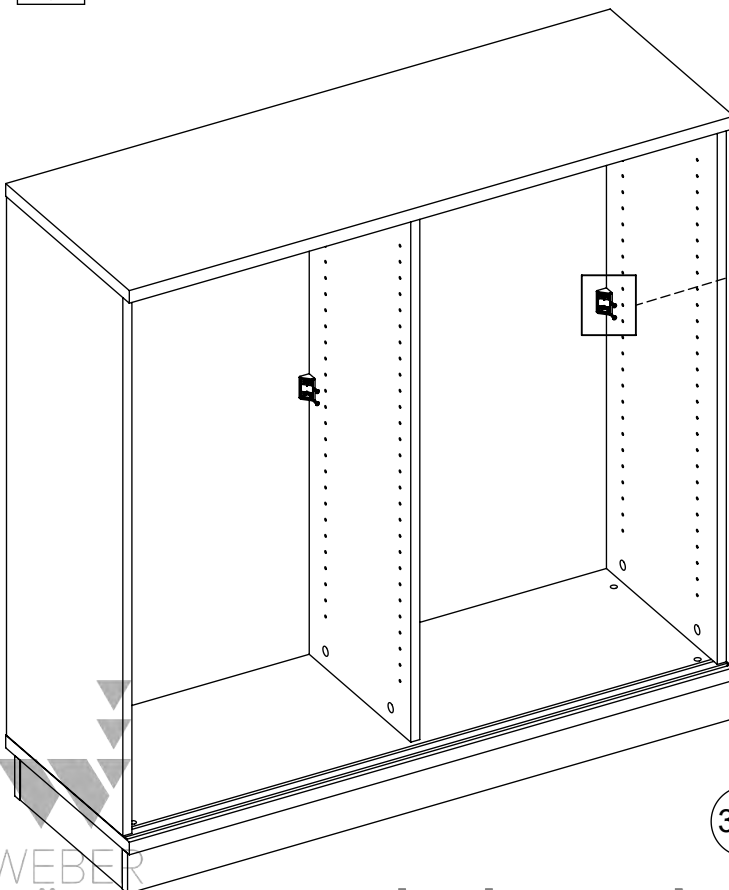



9 a)

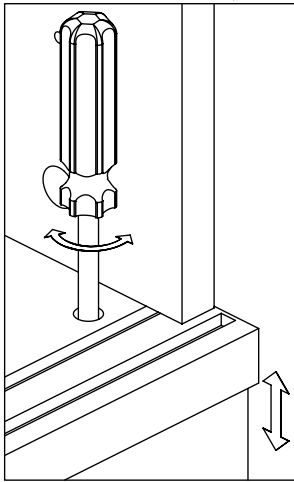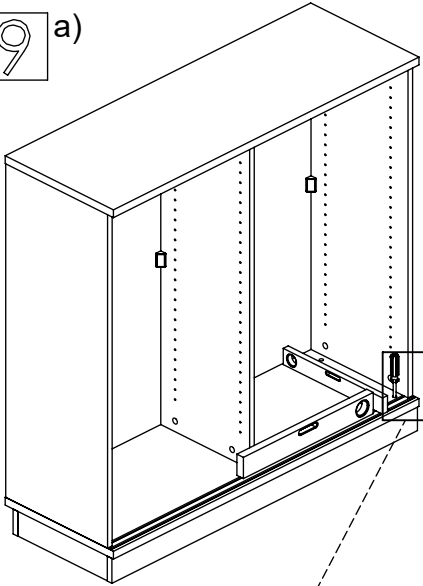



b)

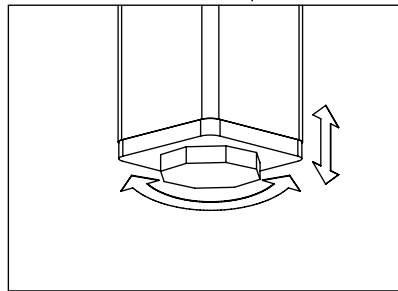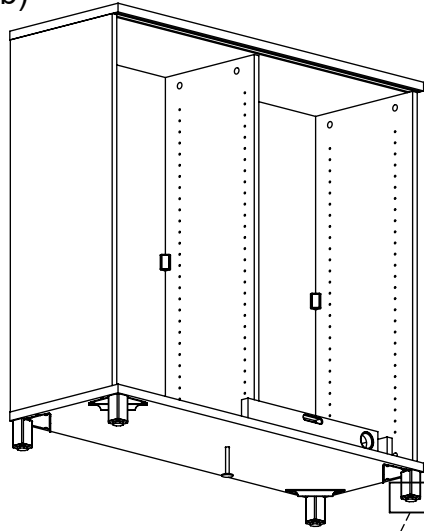


c)

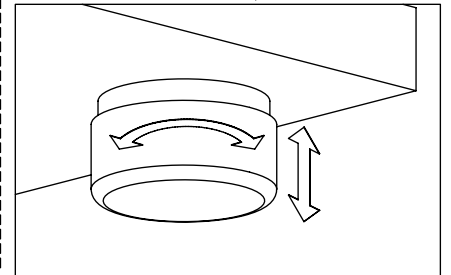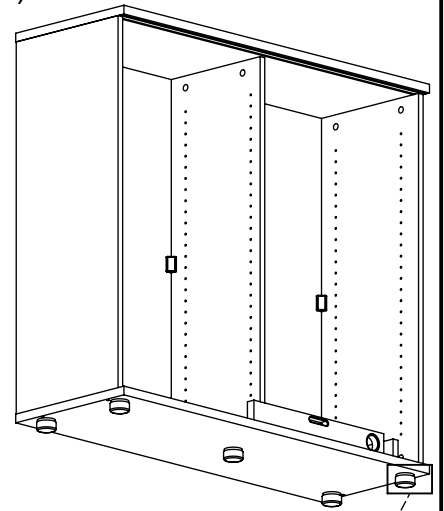

10

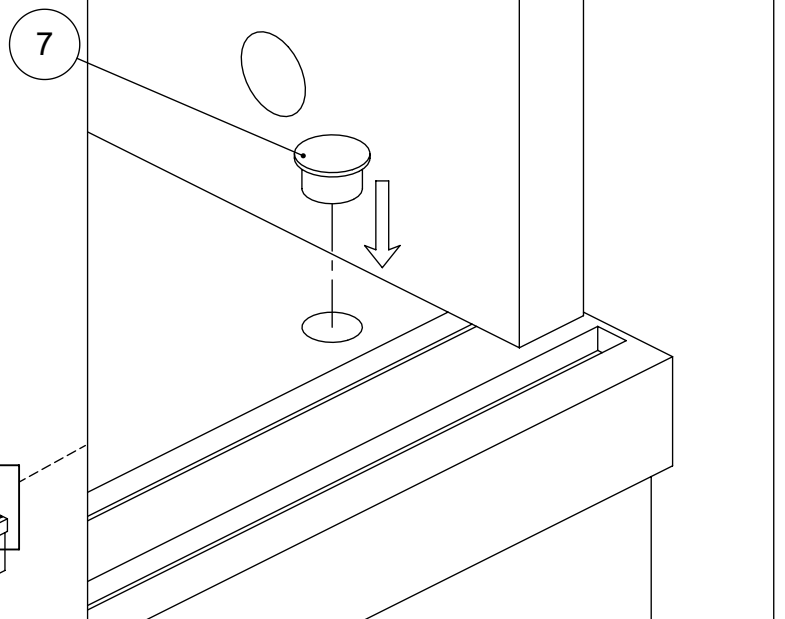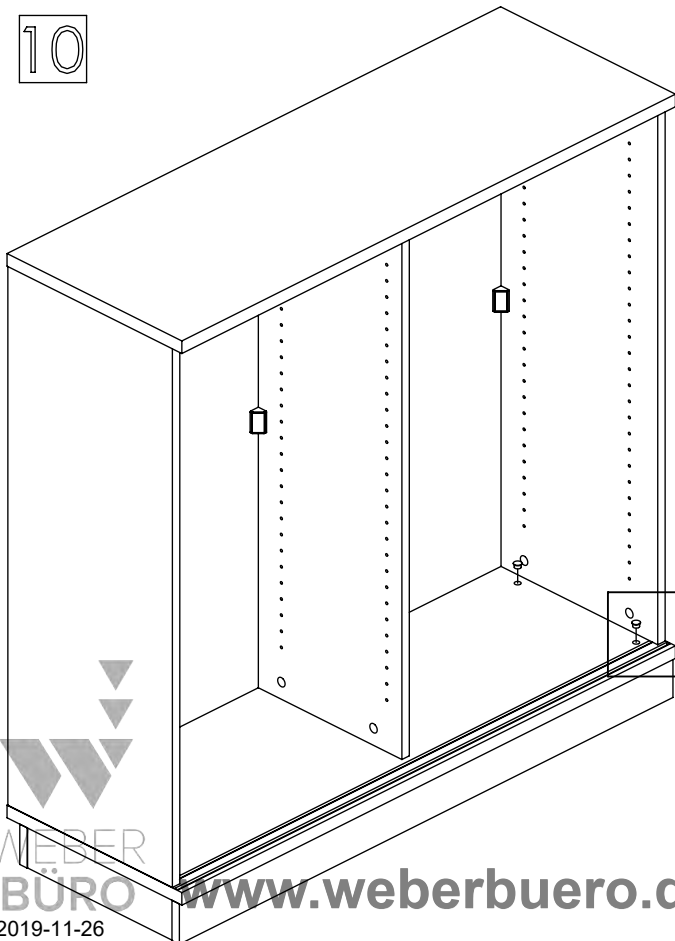




Surinkimo schema:  
 Assembling scheme:  
 Схема сборки:



①	x4	x12	x16	x8
	G1C002			
	G1C005			
	G1C008	G1C009	G1C015	G1C014
	G1C037	G1C006	G1C011	G1C013
	G1C038	G1C001		G1C039

1.

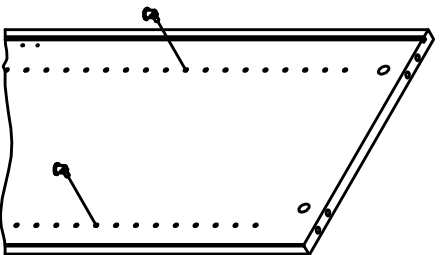

M60EX009

2.

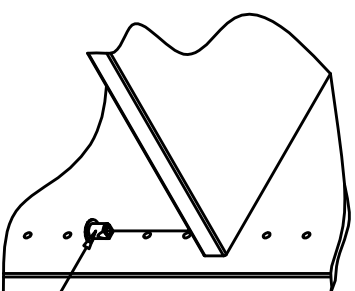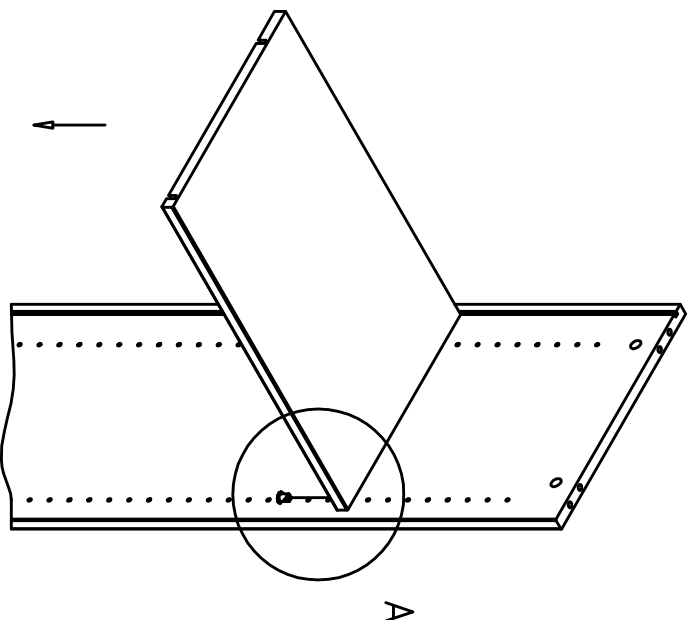

A (2:1)

①



06.09.11

WEBER  
 BÜRO


www.weberbuero.de

# M60EX021


EN	Assembling scheme
DE	Aufbauanleitung
FR	Schéma d'assemblage

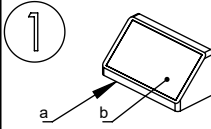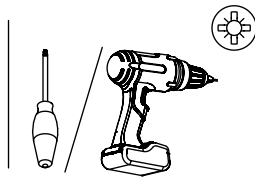




M45A9008 x4

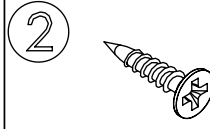


3.5x17  
M42A0017 x12

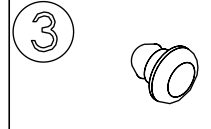


Ø8  
M48D0007 x8

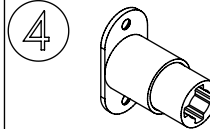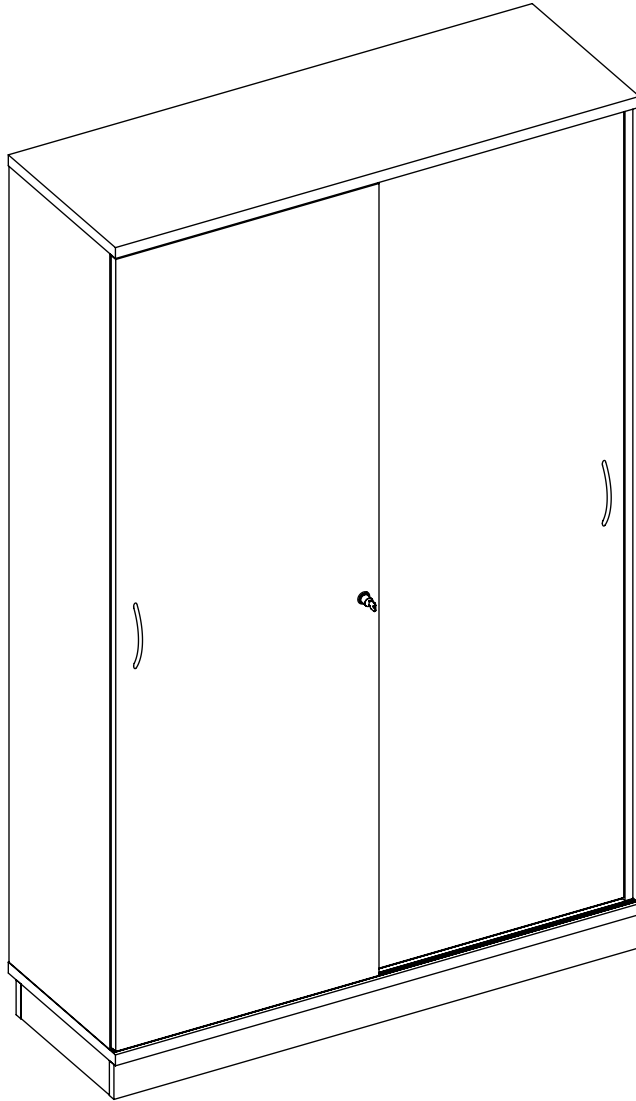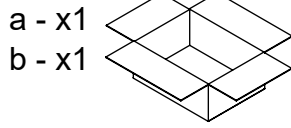


M45F1001 x1

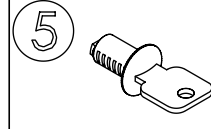


x1

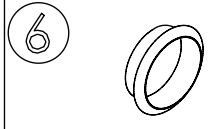


M45F1015 x1

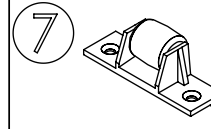


M57E0003 x1

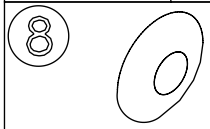


M48D0004 x2

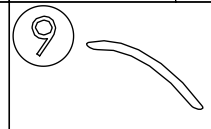

x2

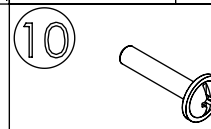


M4x22  
M42C0009 x4

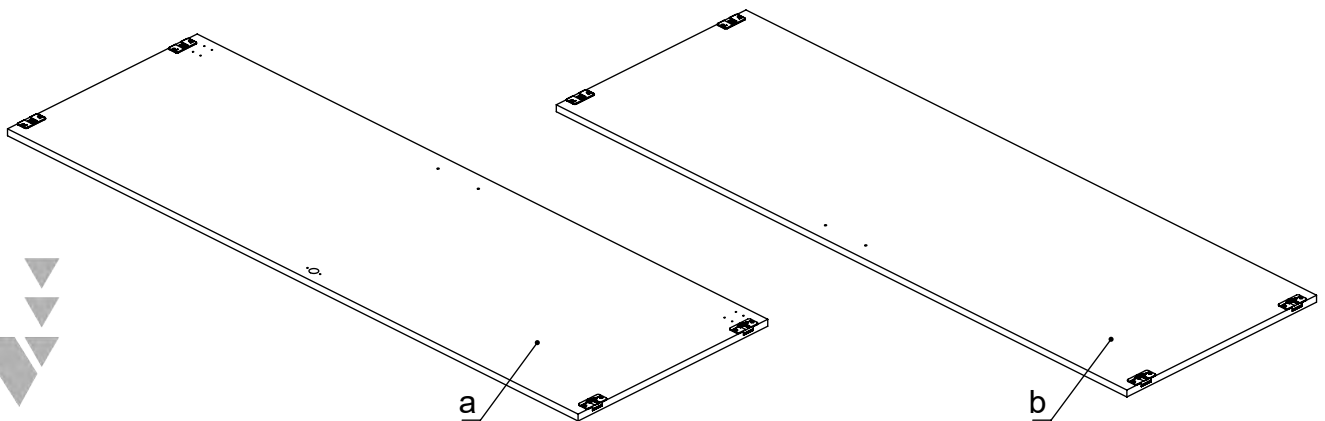





1

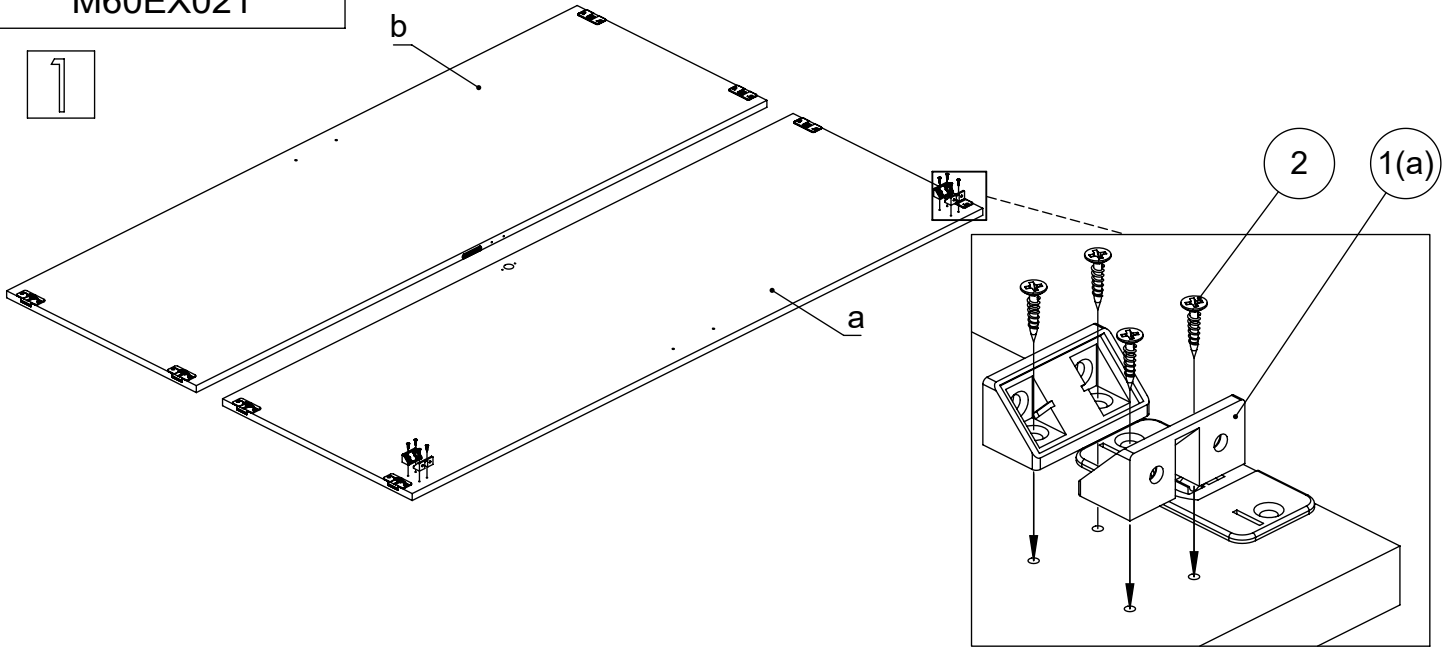

2


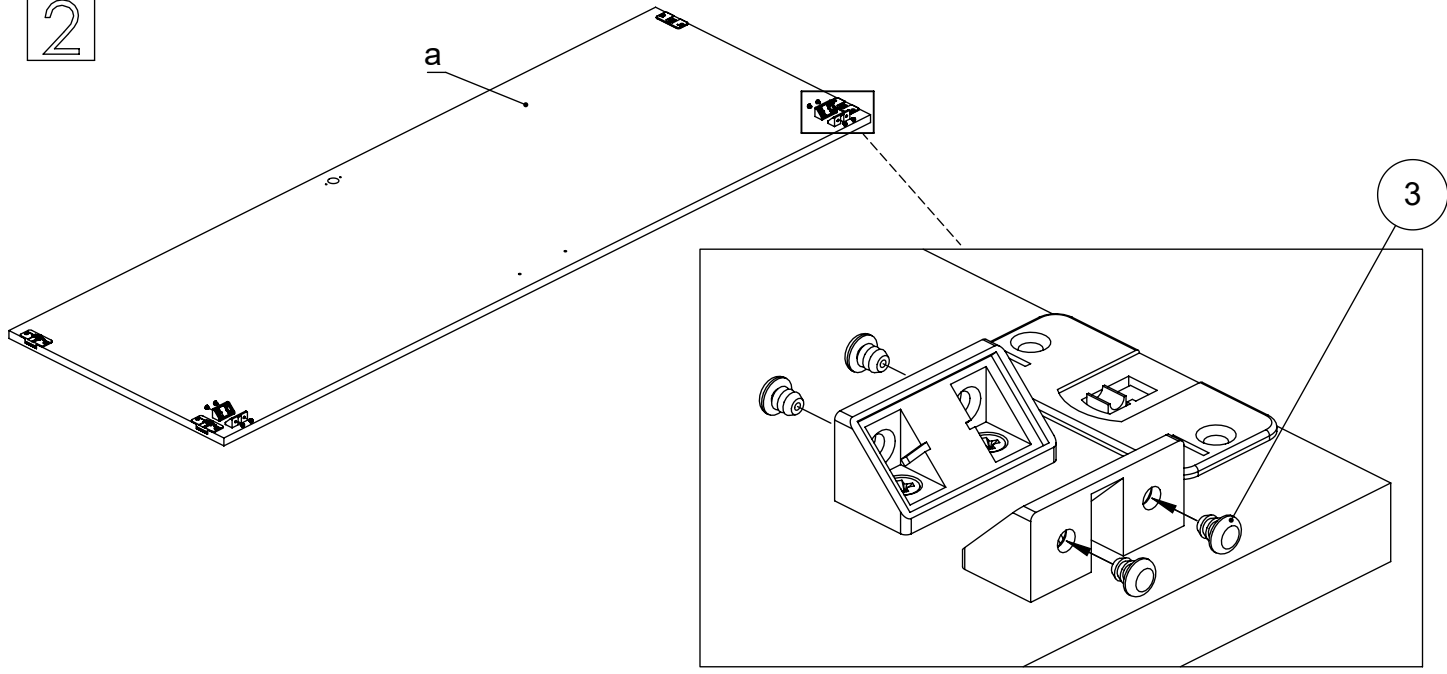


3

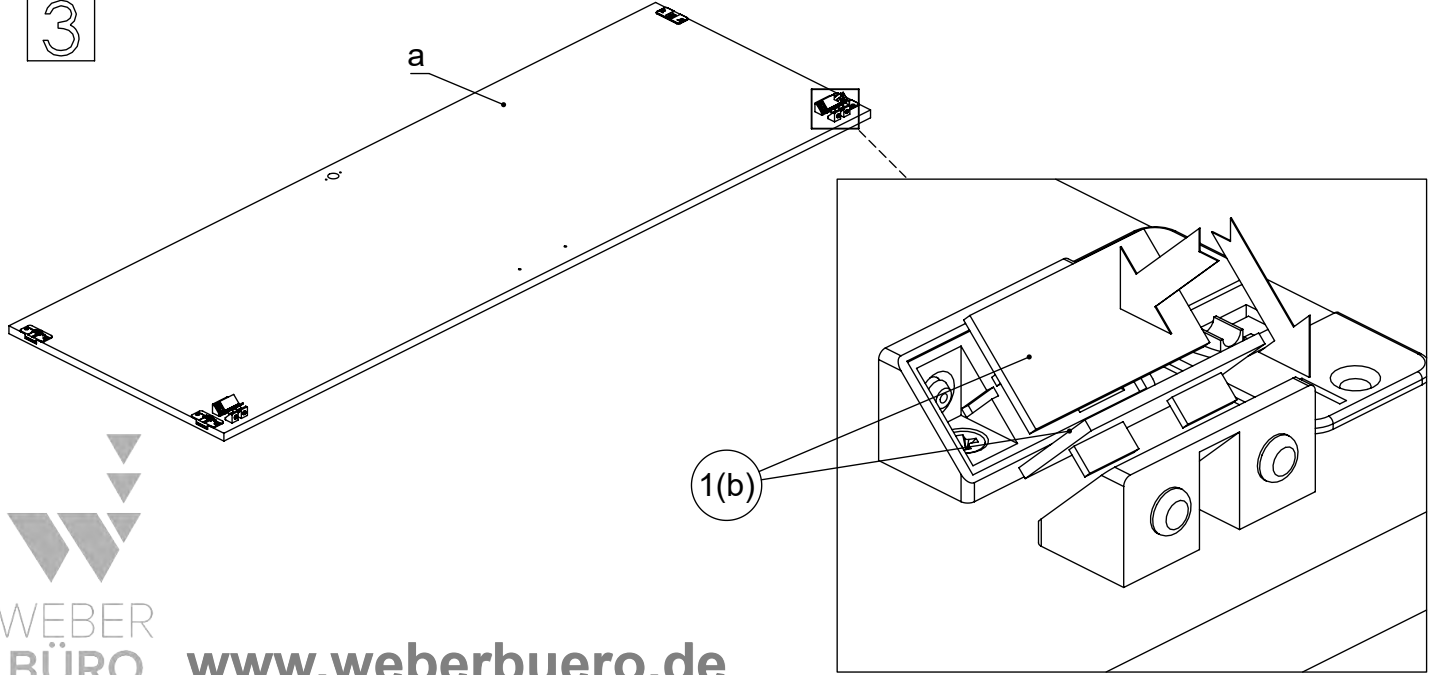


4


1)

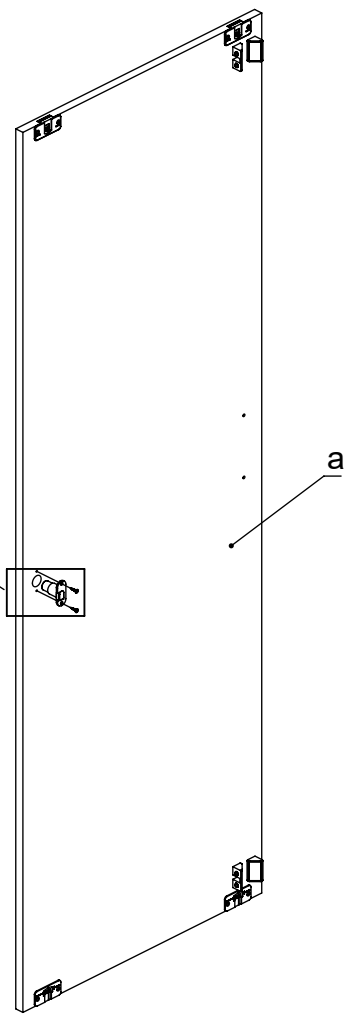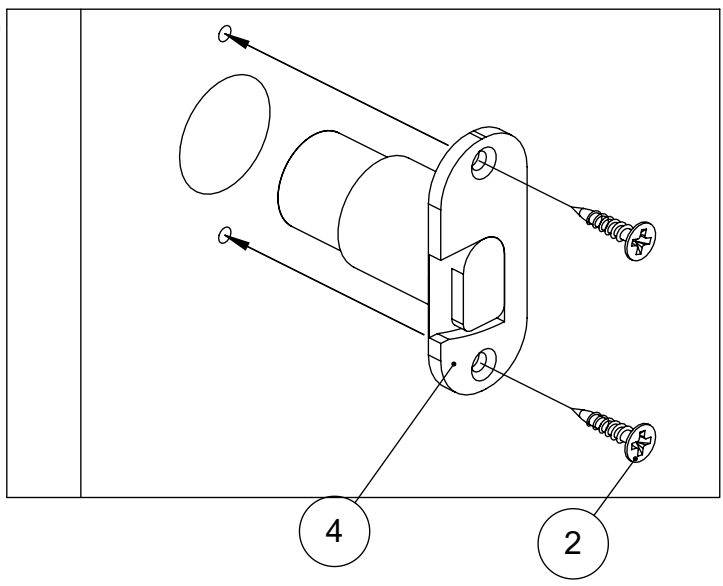



2)

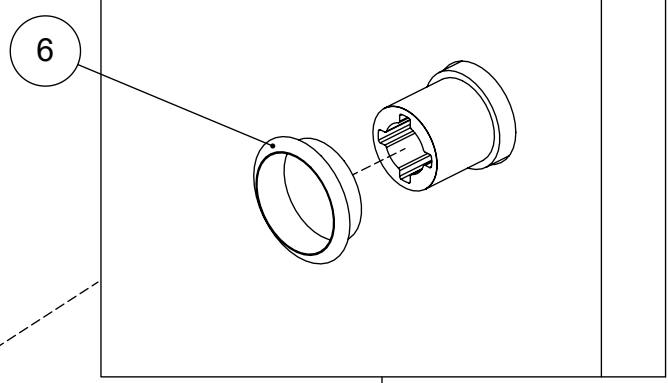


3)

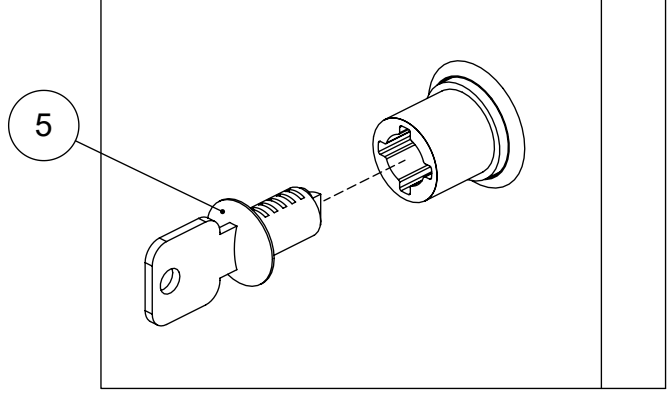


5

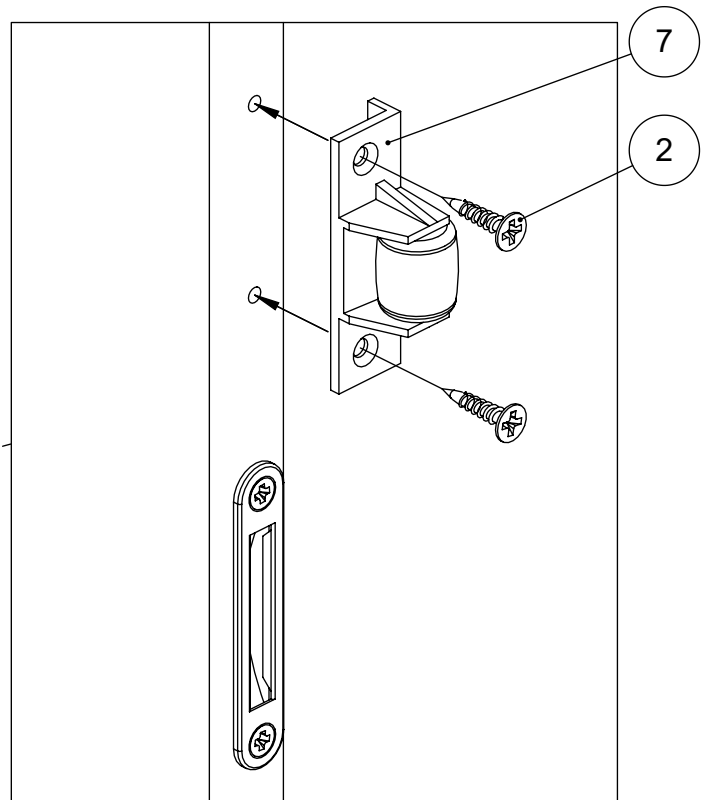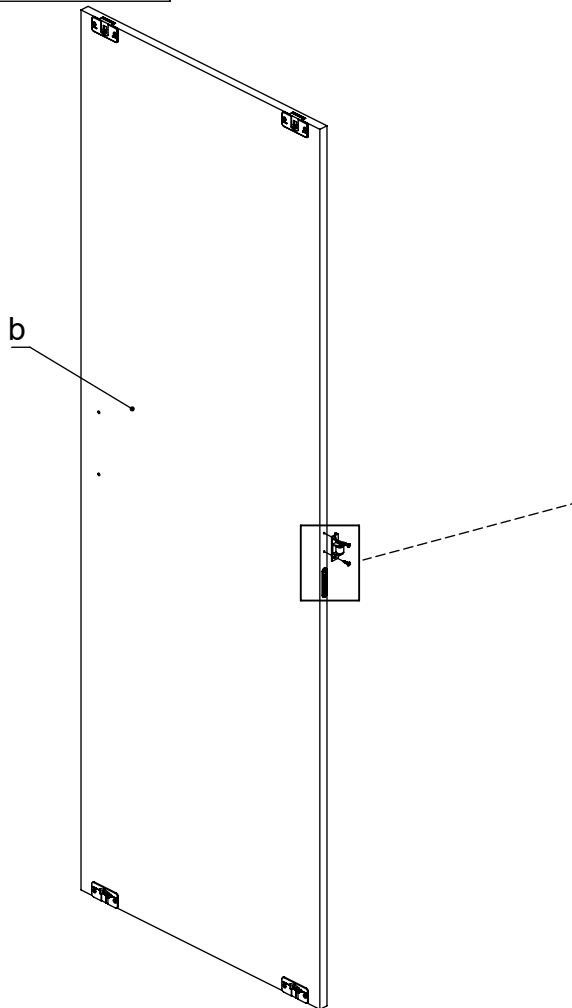

6

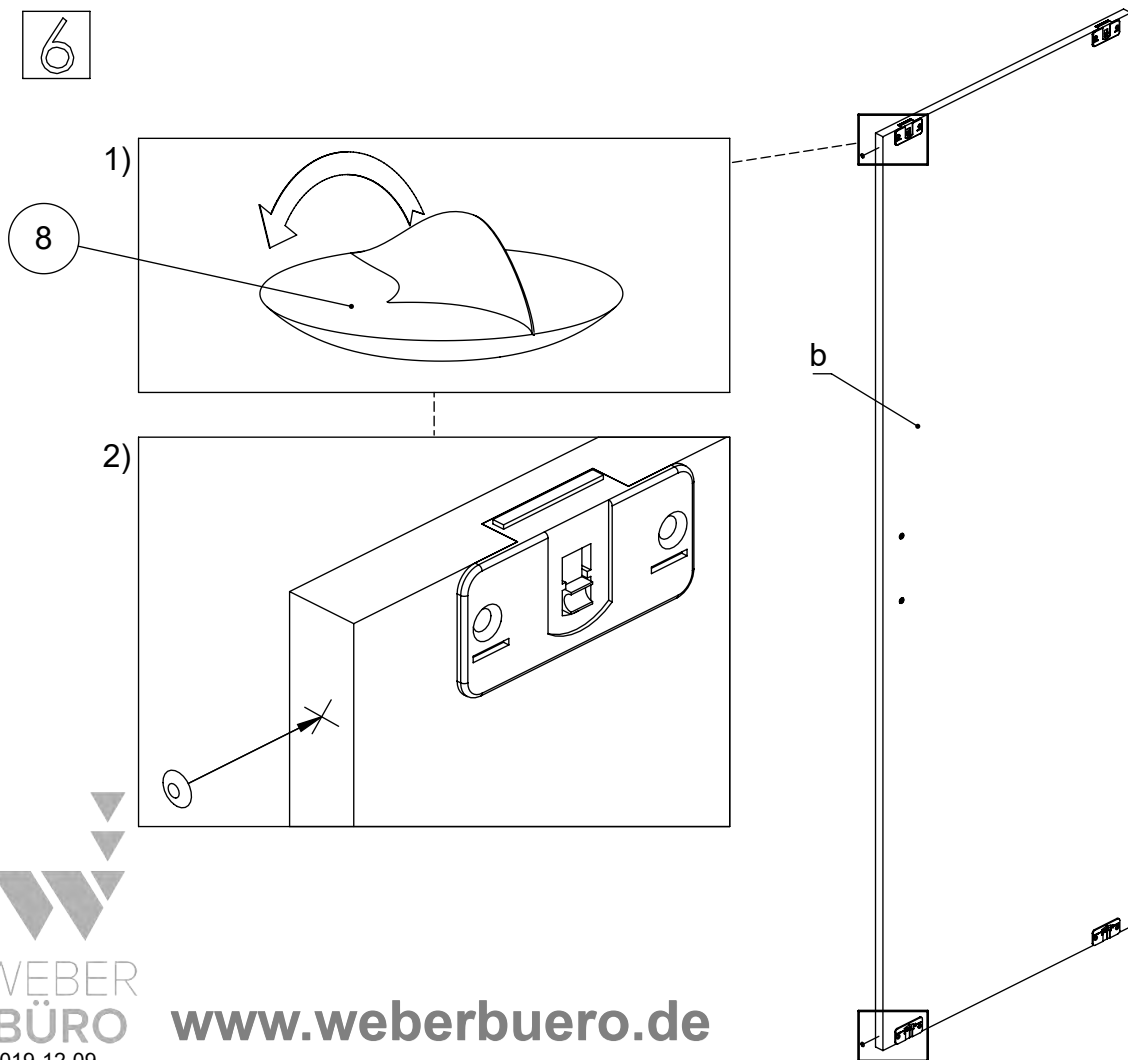


7

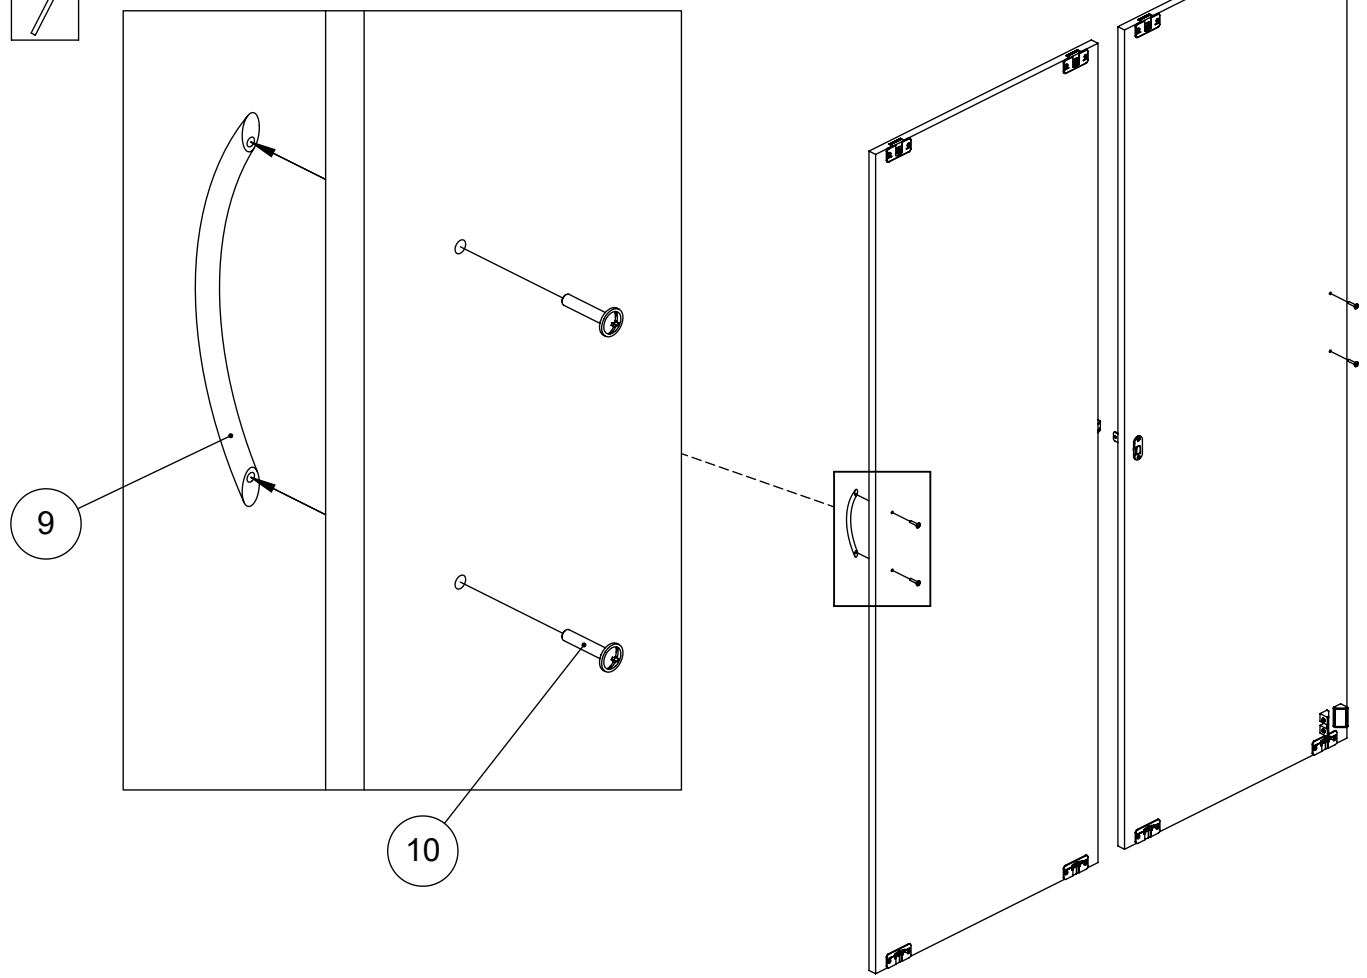



8

1)


2)

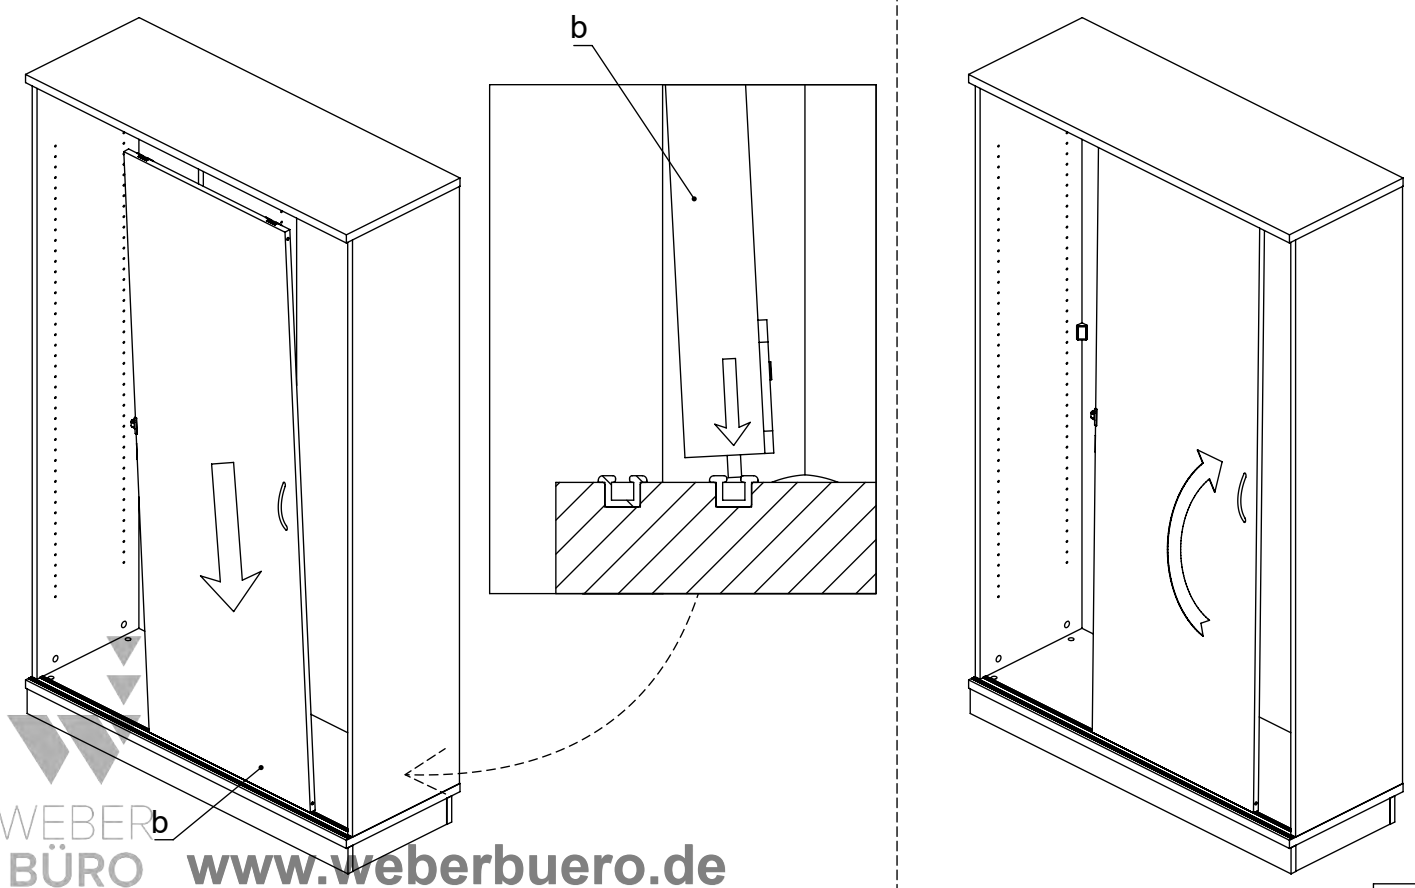




9 1)

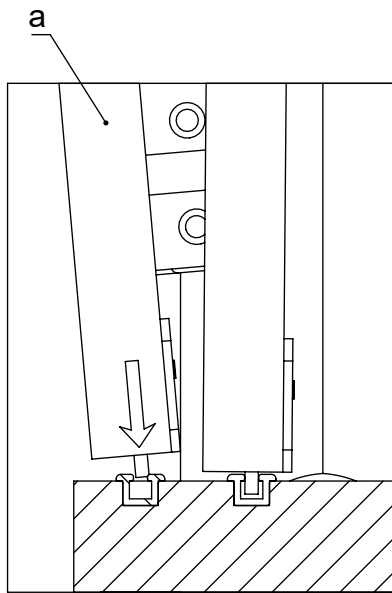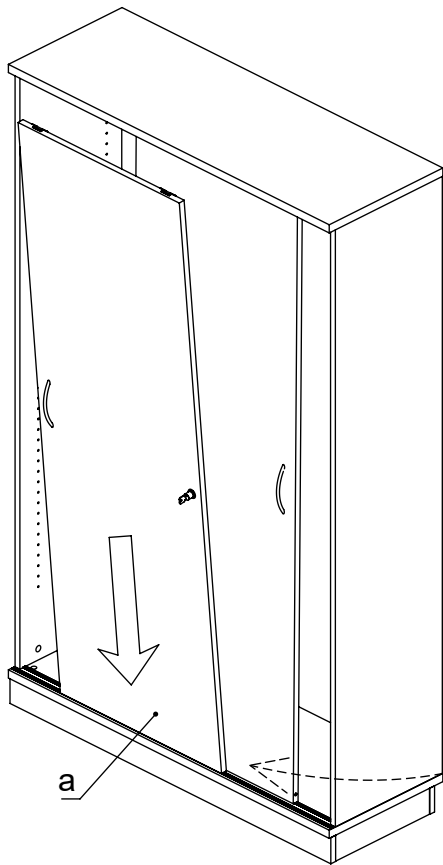



2)

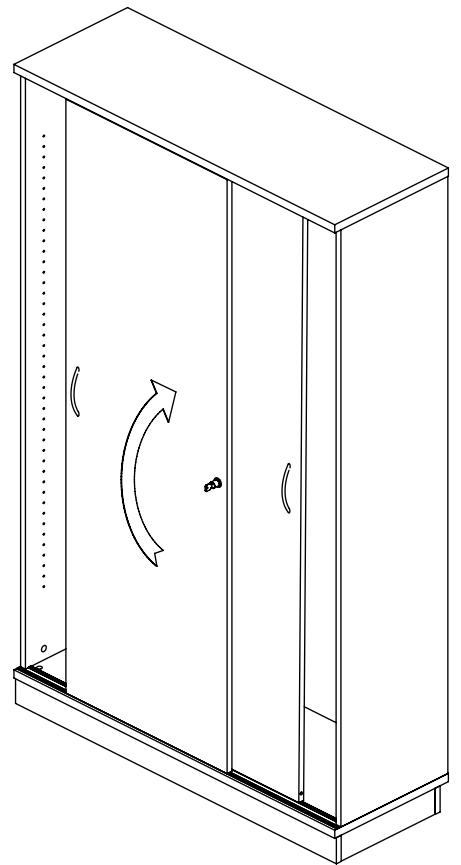

10

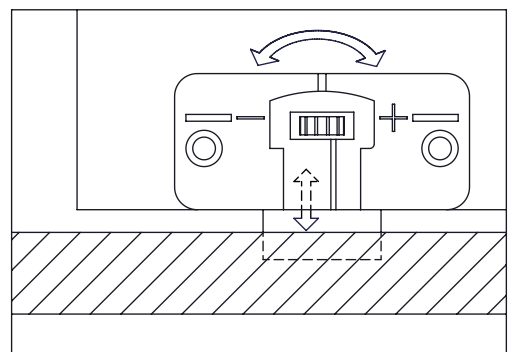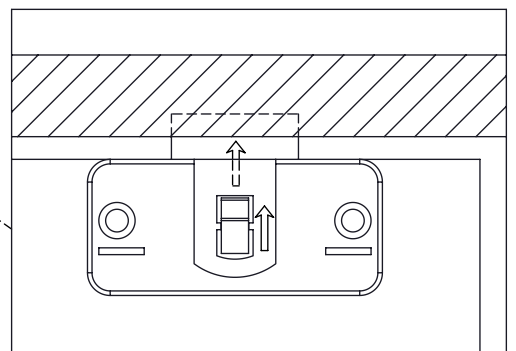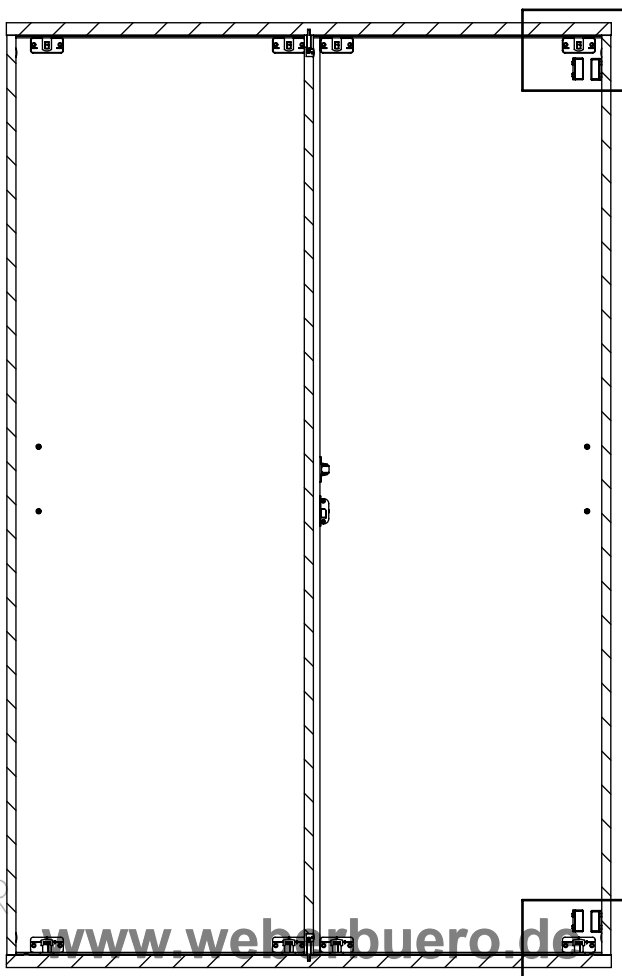

1)

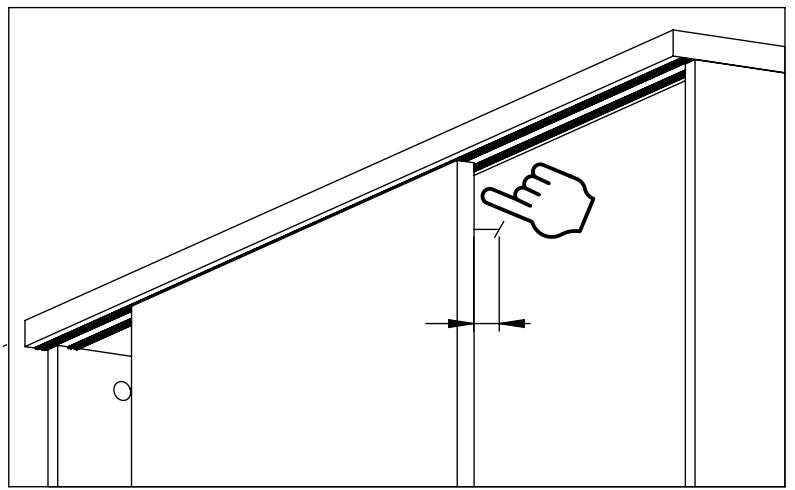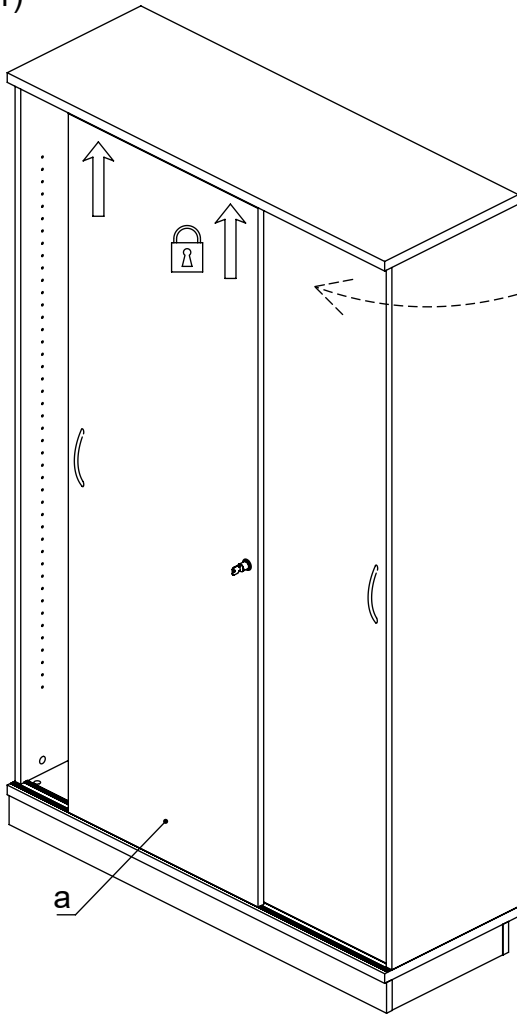

2)

