



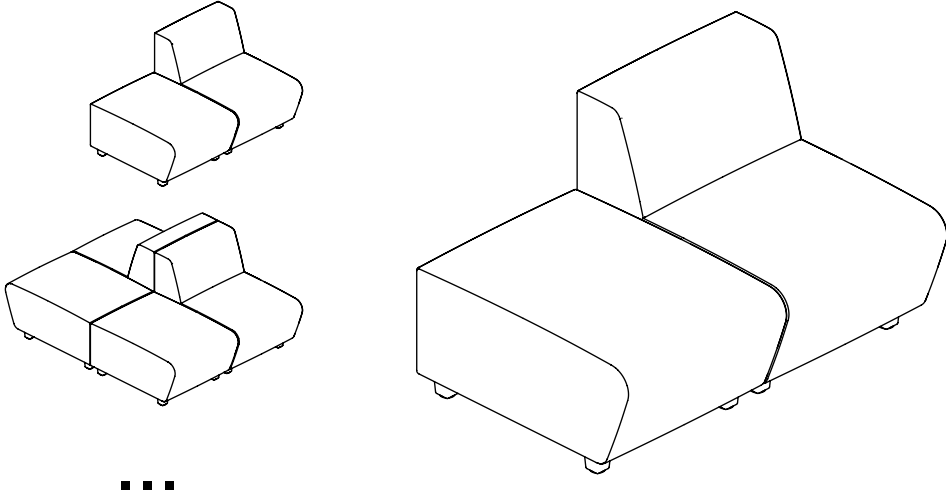


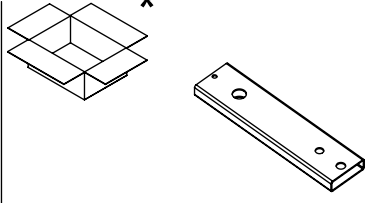



M60EN347		  				
EN	Assembling scheme		$\varnothing 10 \times 30$ M42H0040	x1	M8x25 M42C0083	x1
DE	Aufbauanleitung		$\varnothing 14 \times 26$ M42Z9023	x1	M8x60 M42C0275	x1
FR	Schéma d'assemblage					


			
$\varnothing 14 \times 26$ M42Z9023	x1	M8x60 M42C0275	x1
 a - x1			
EN *Quantity of single set DE *Einzelner Satz Hardware FR *Ensemble unique de matériel			

1


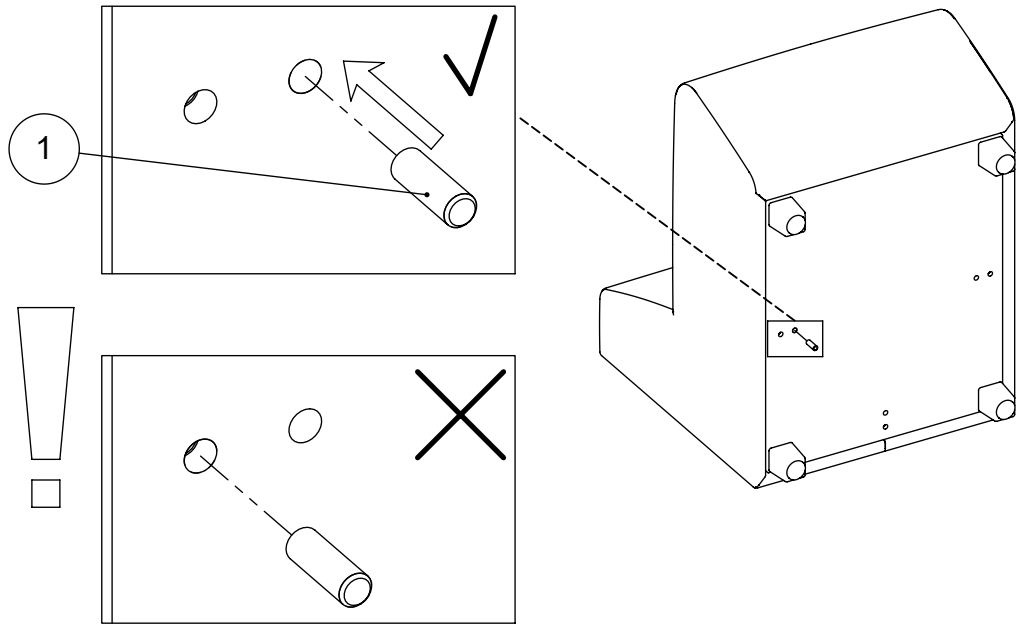


2

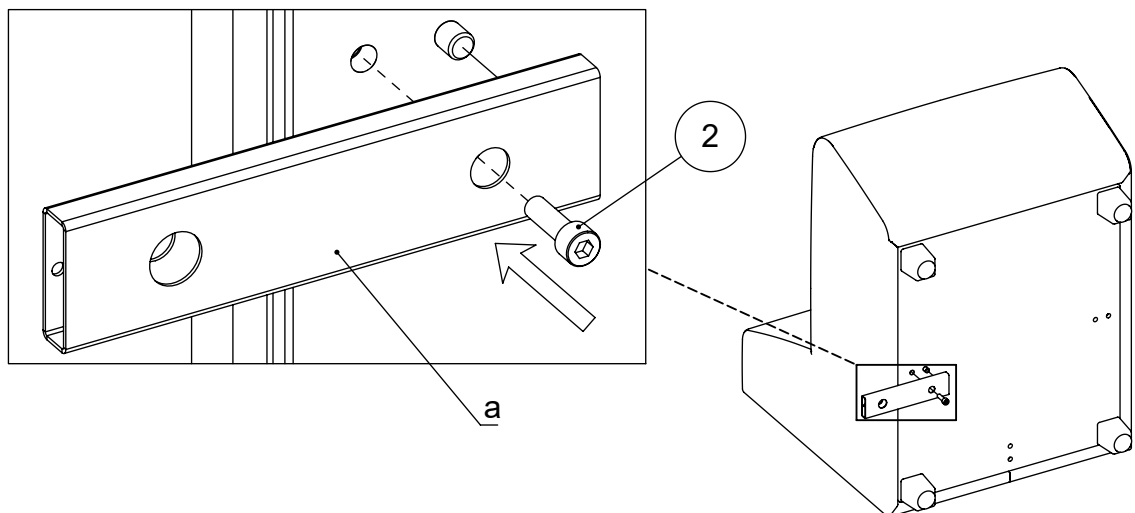

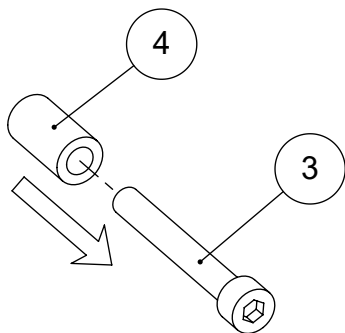3¹⁾


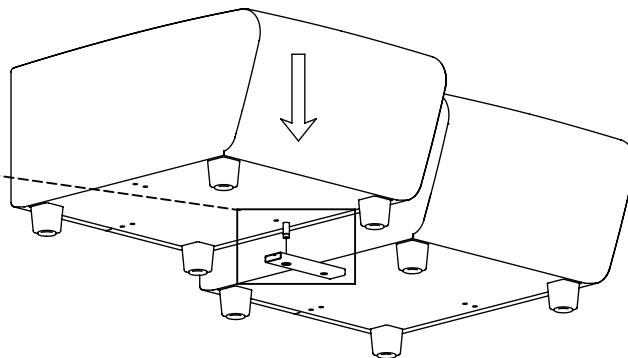
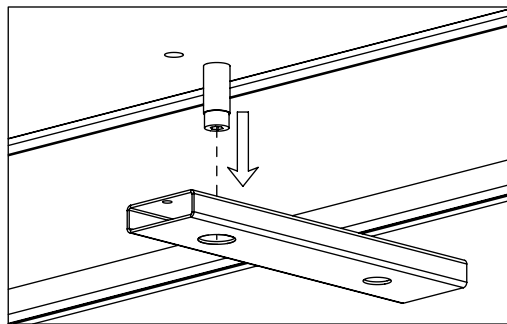
2)

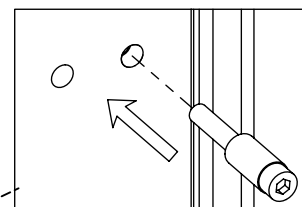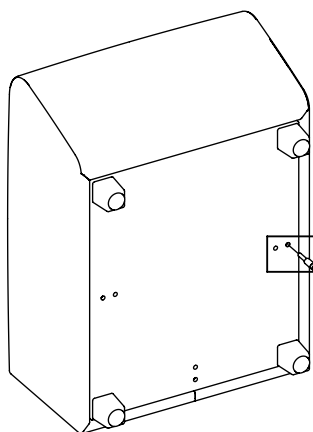
EN Do not overtighten



DE Die Schrauben nicht überdrehen

FR Ne serrez pas outre mesure


4



*

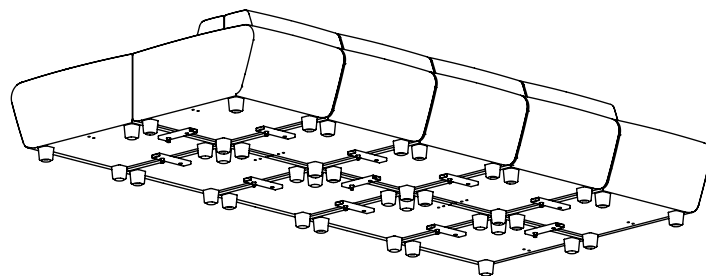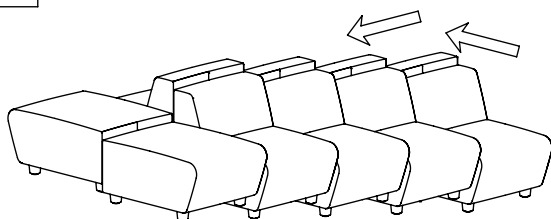
EN Connect modules in sequence

DE Module nacheinander anschließen

FR Connecter les modules en séquence

EN It's enough to connect every second or every third back with the Linking bracket **SRS000**.

DE Reicht es aus, jedes zweite oder dritte Rückenteil mit **SRS000** zu verbinden.

FR il suffit de connecter un dossier sur deux ou sur trois avec **SRS000**.
