


x23



x25



x6




Ø 15 x 16






x23




x23

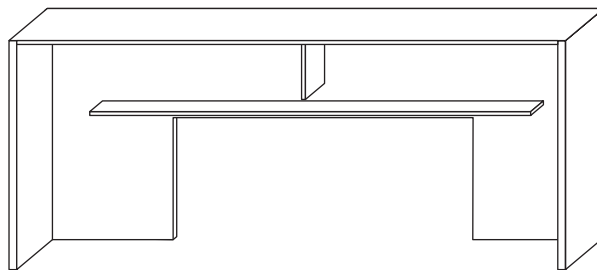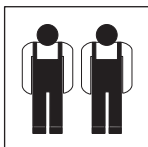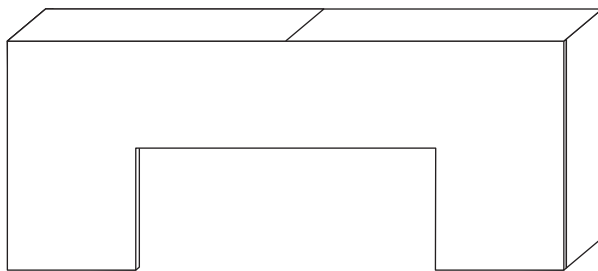


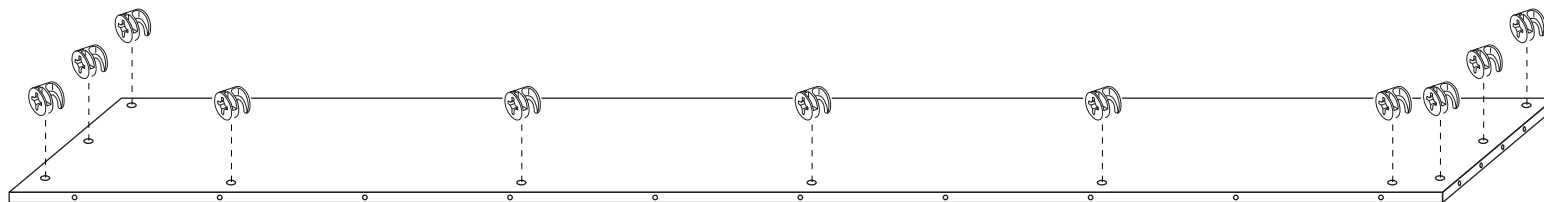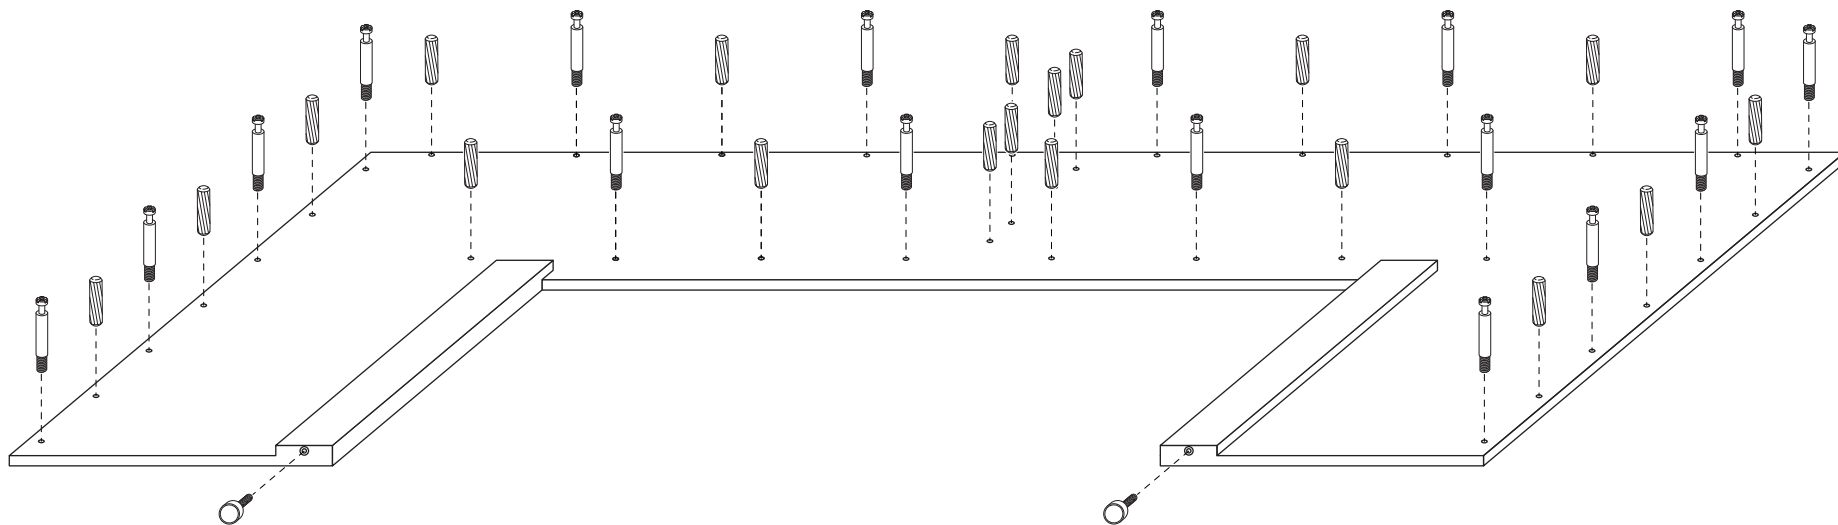


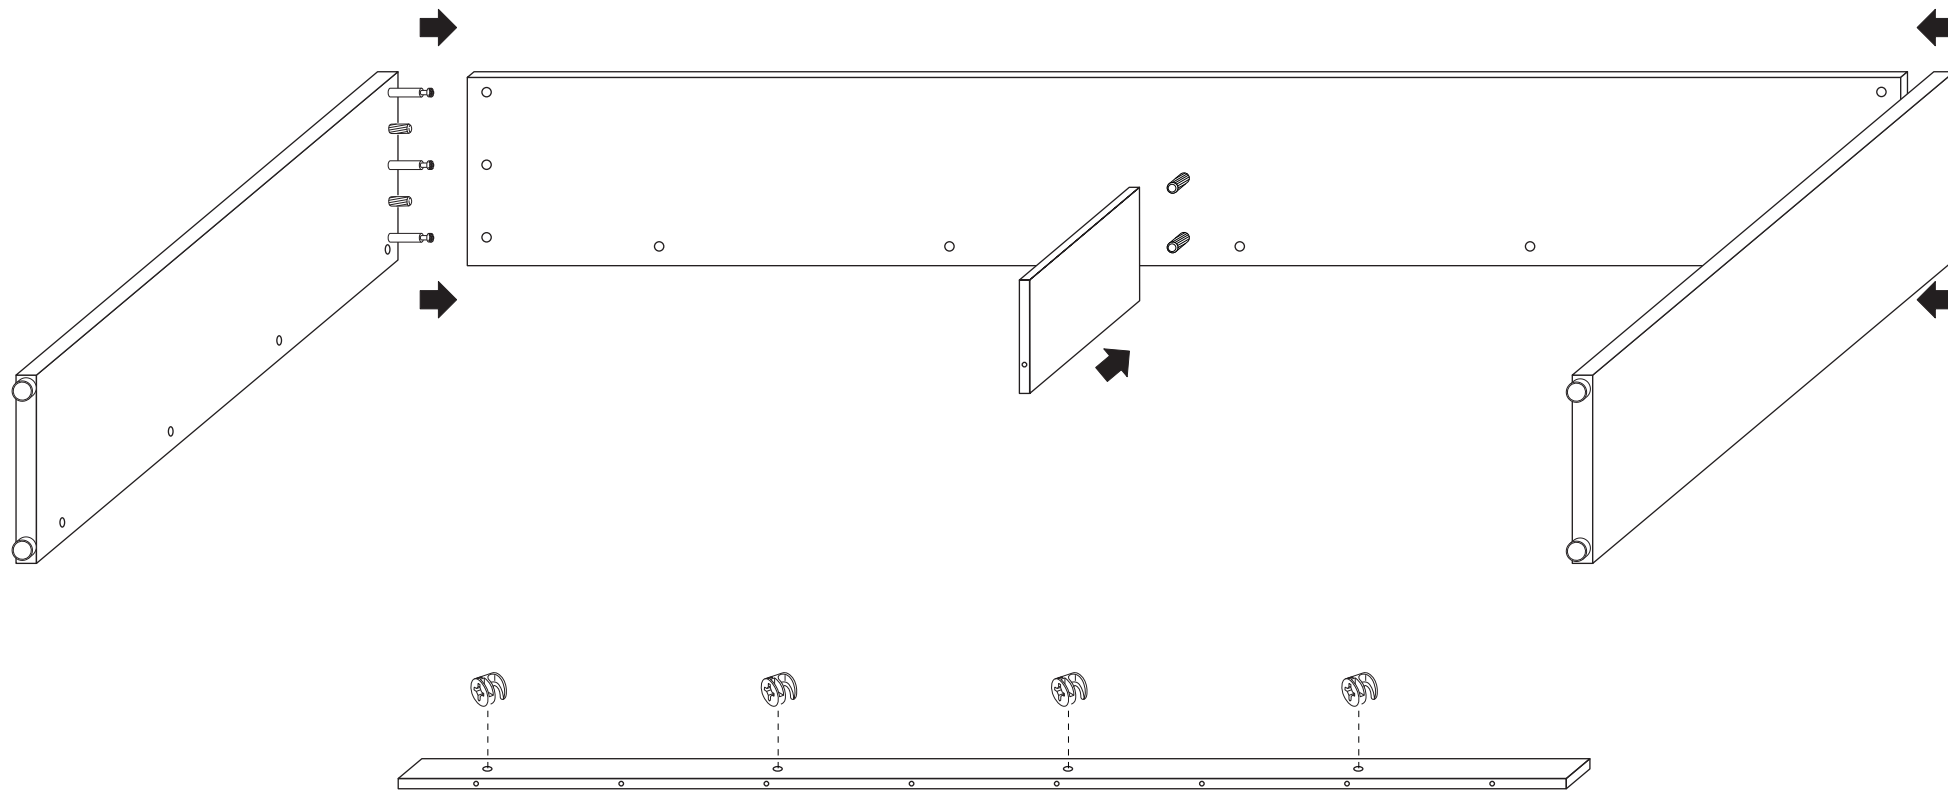


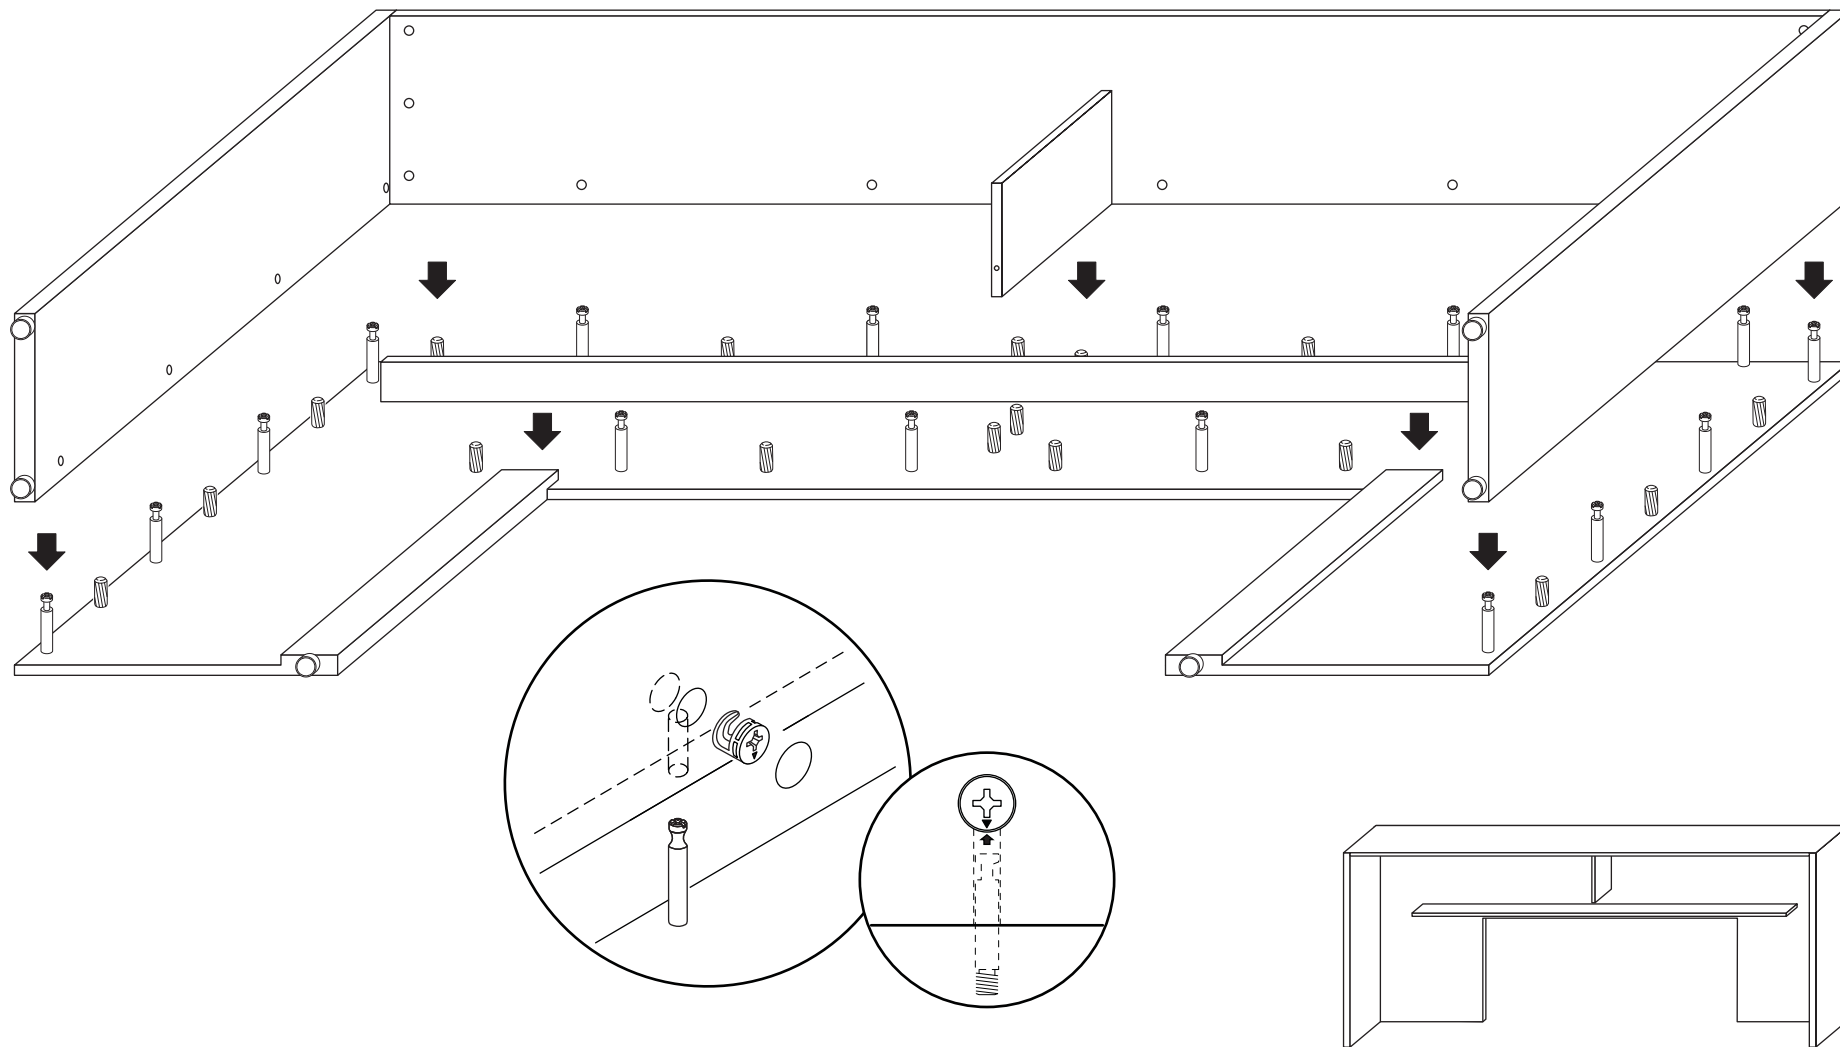


BK-1

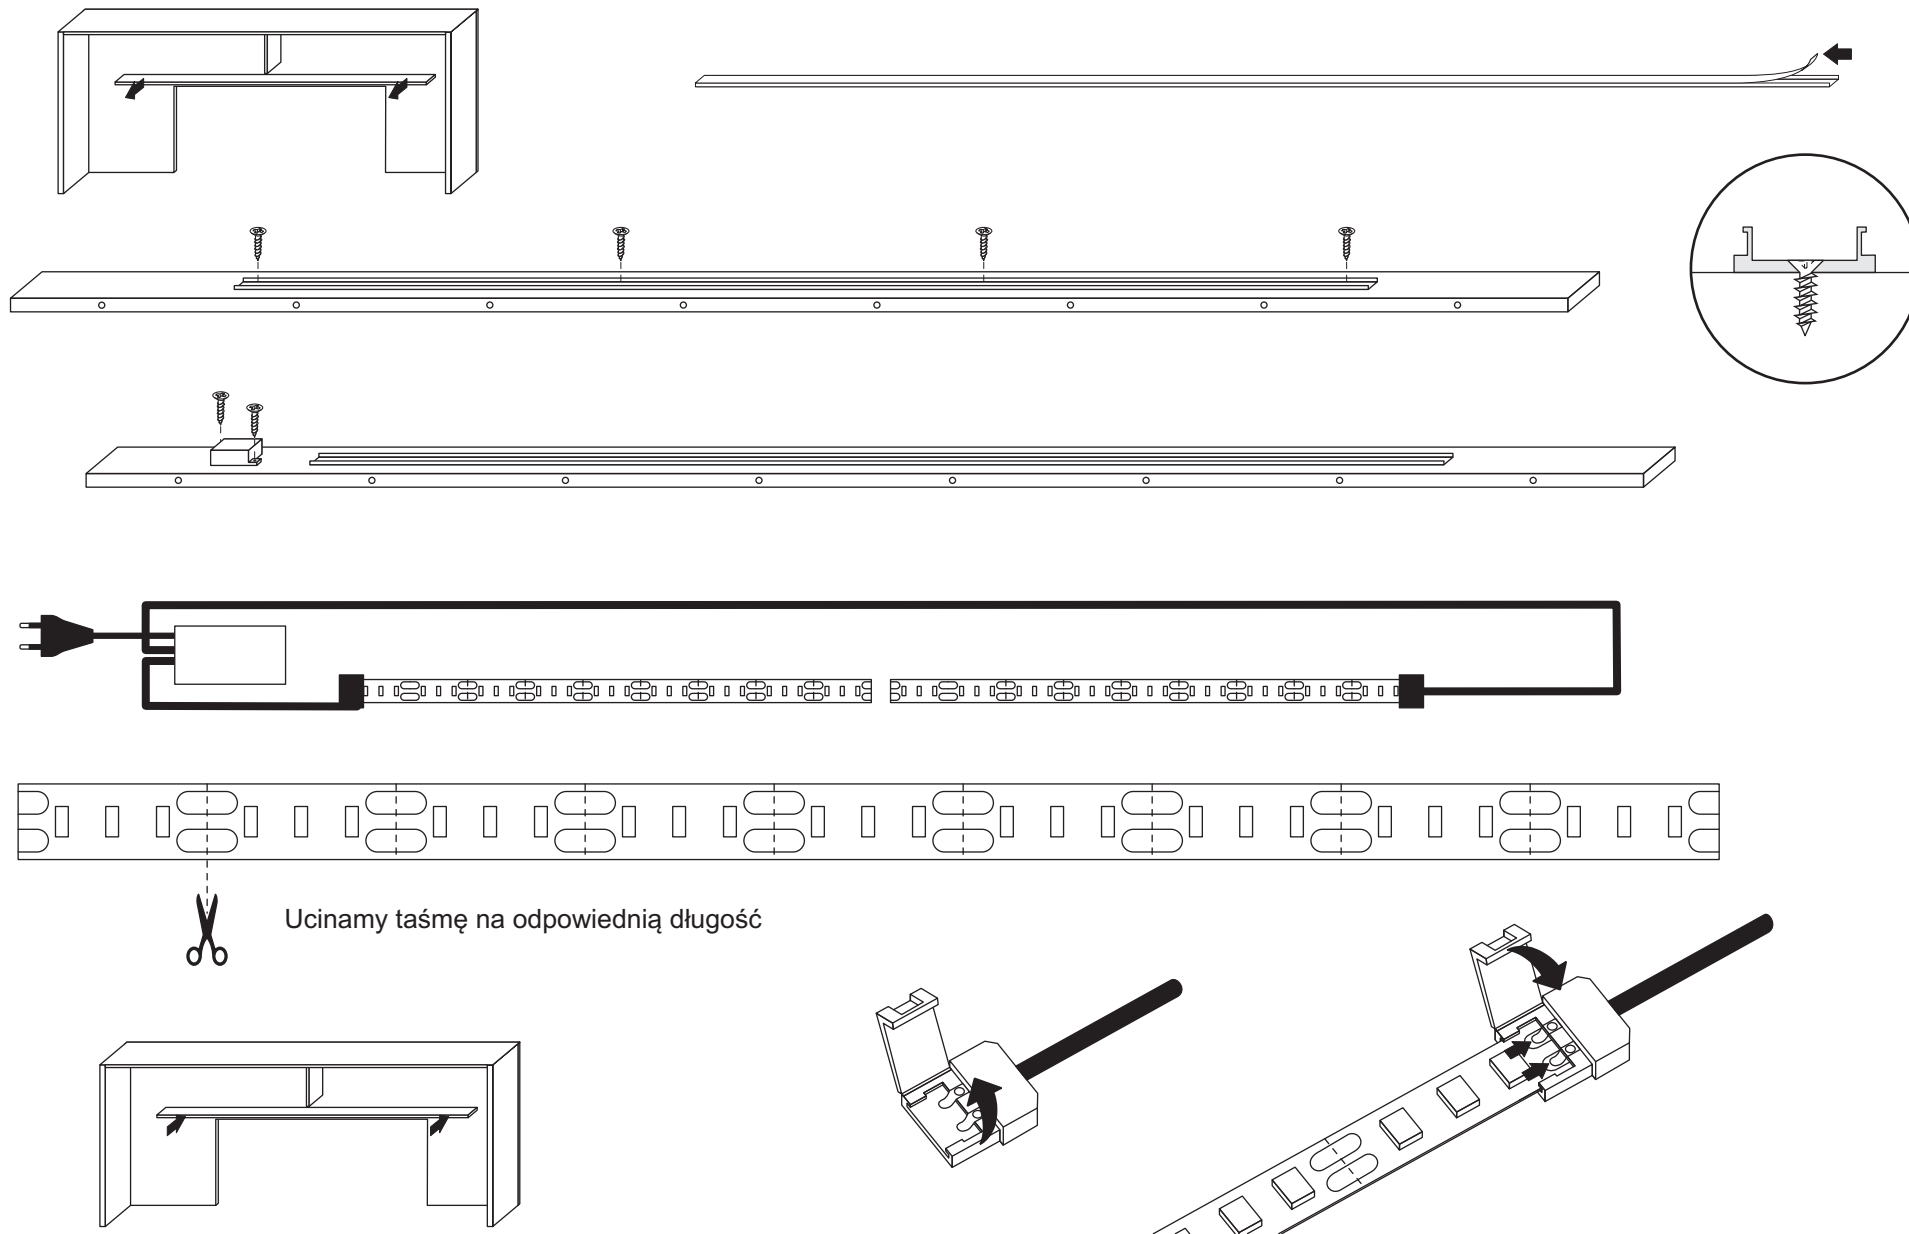

Ucinamy taśmę na odpowiednią długość

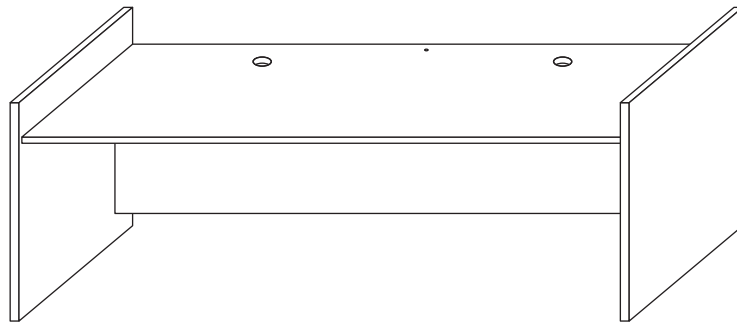

x5




x4



x34




x26



x4

Ø 15 x 23



x18


Ø 15 x 16






x16




x34





x1

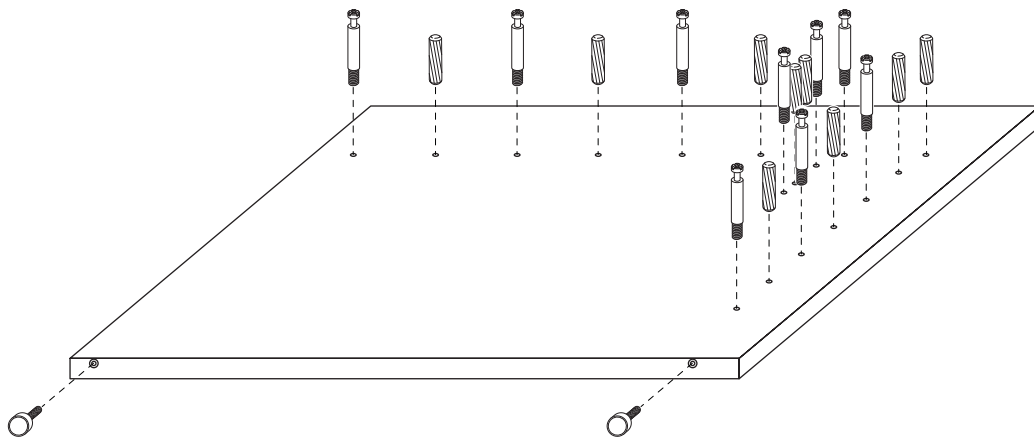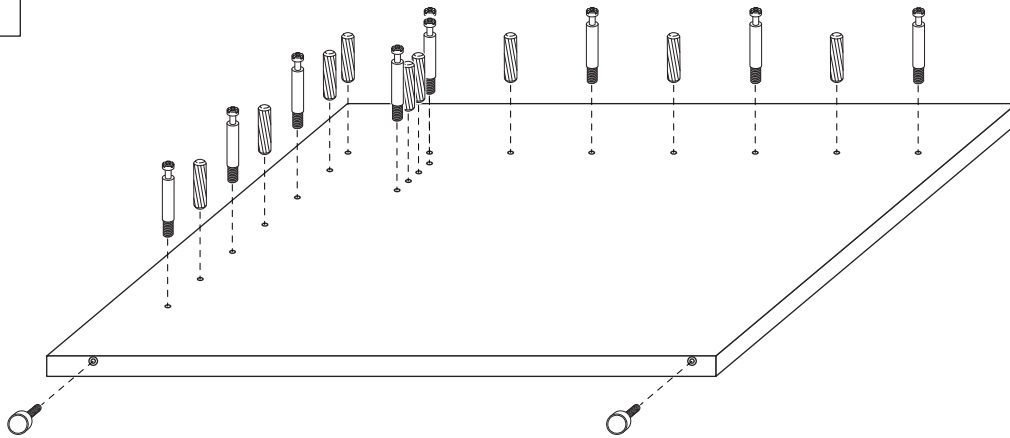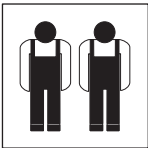




BK-1

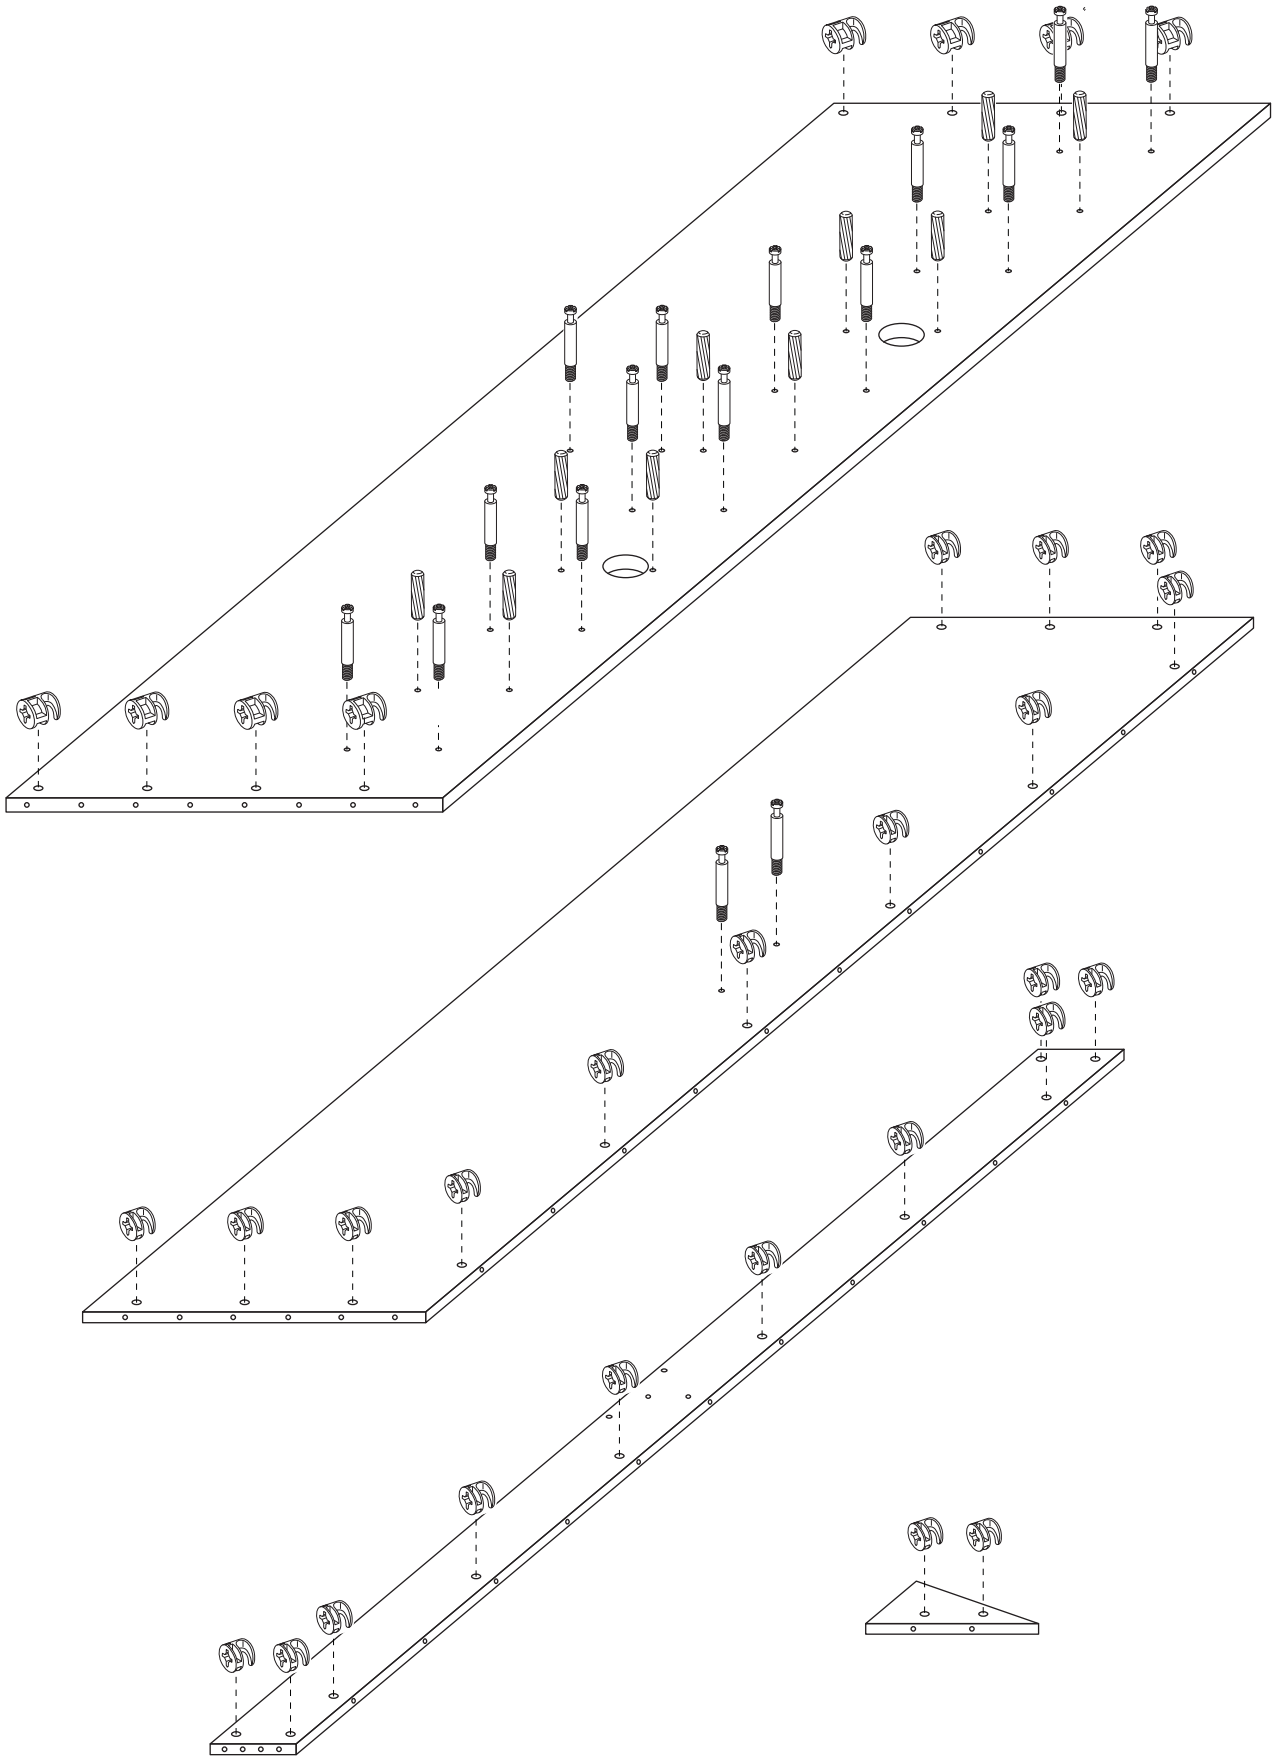

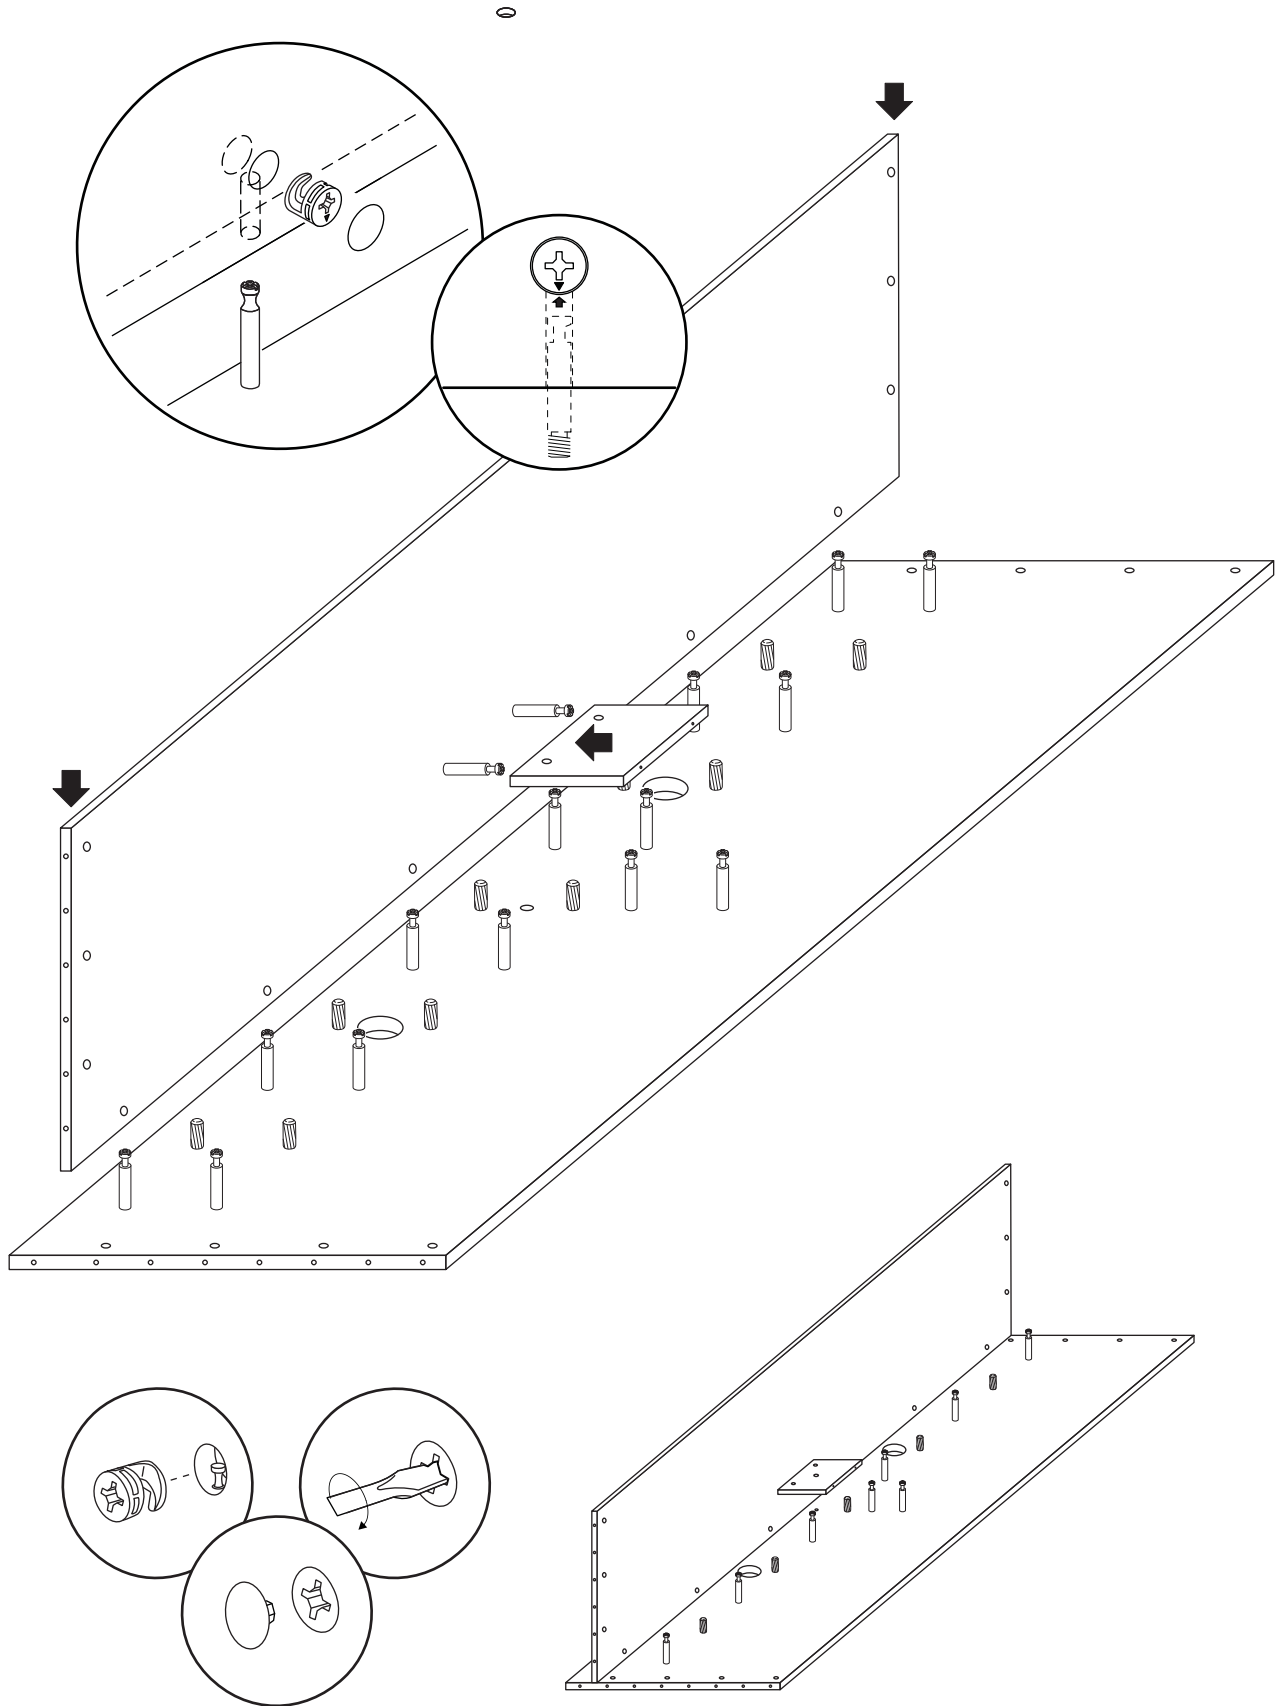

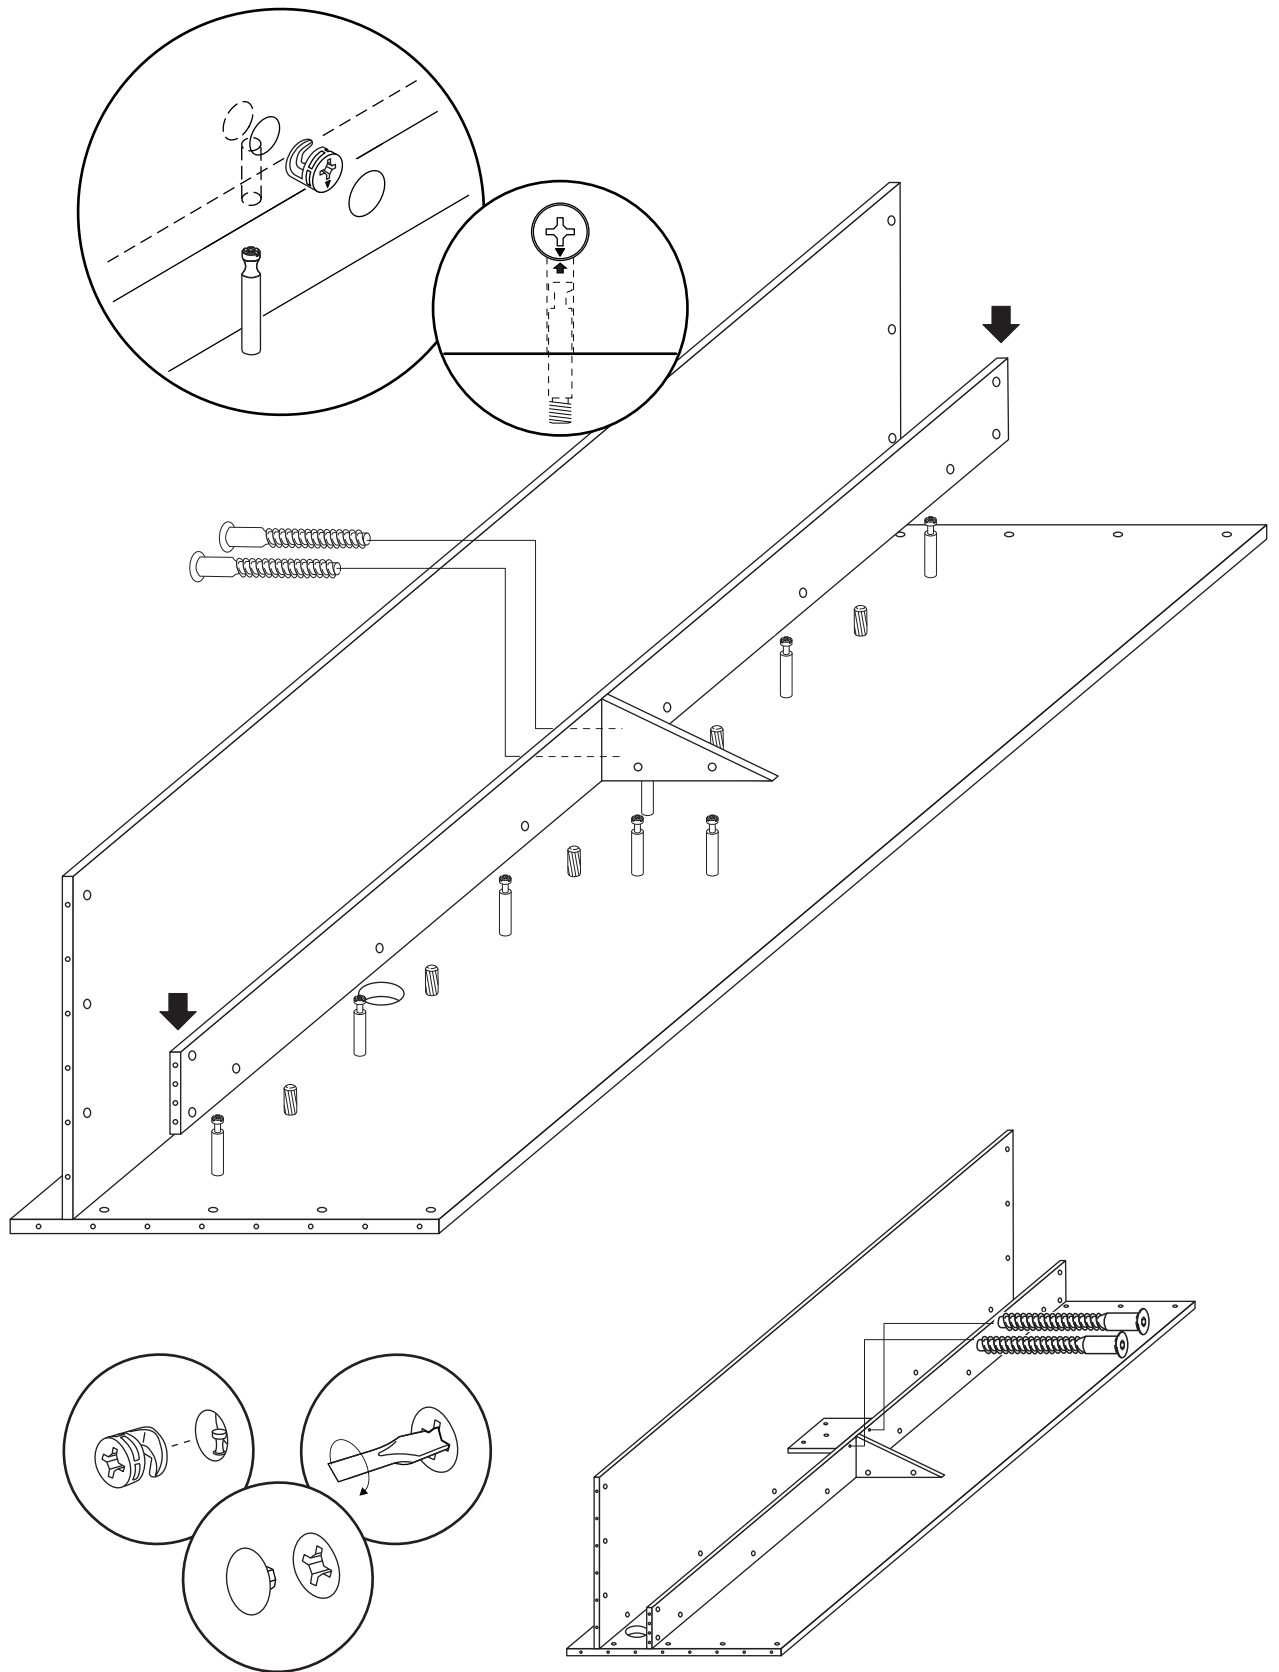

BK-1

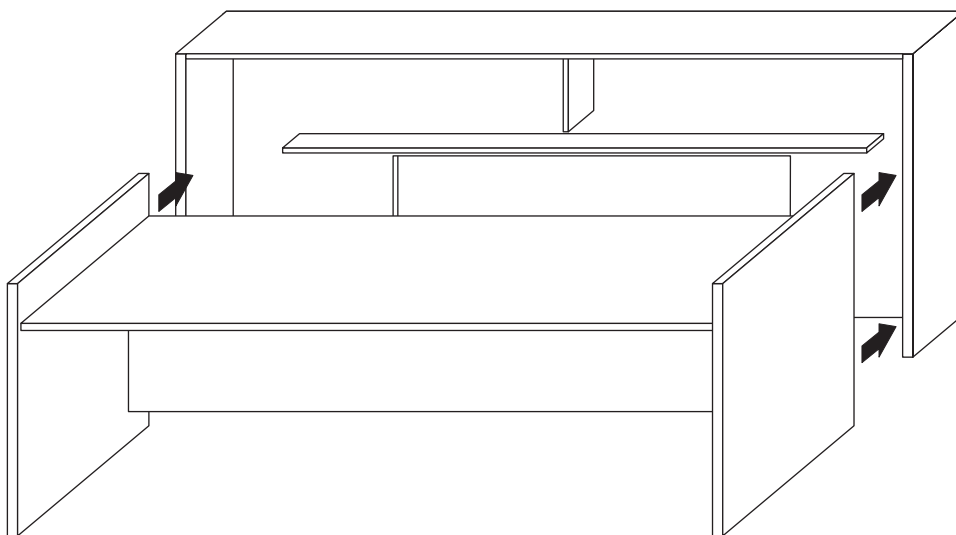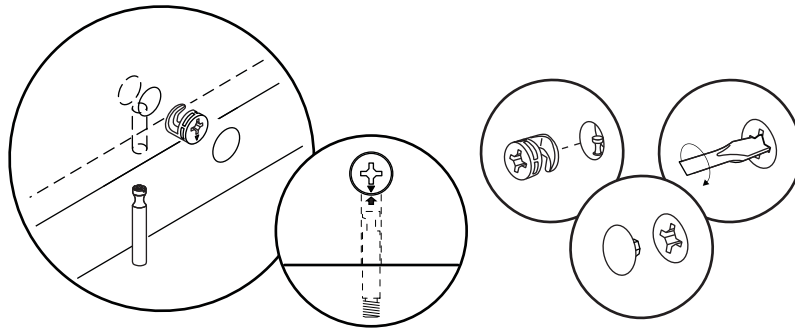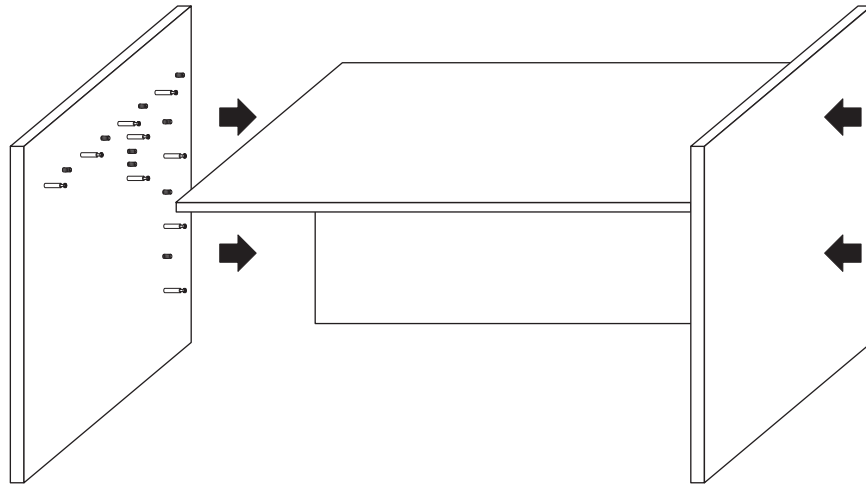

BK-1

